

EarFun CW100G

EarFun Clip Open Ear Earbuds User Manual

Model: CW100G

INTRODUCTION

Welcome to the user manual for your EarFun Clip Open Ear Earbuds. These wireless clip-on headphones are designed for adaptive comfort and a secure fit, featuring Bluetooth 6.0, LDAC support for Hi-Res Audio, and AI ENC for clear calls. This manual provides essential information to help you get the most out of your new earbuds.

WHAT'S IN THE BOX

- EarFun Clip Earbuds
- Charging Case
- USB-C Cable
- User Manual

PRODUCT OVERVIEW & DESIGN

The EarFun Clip earbuds feature an innovative clip-on design for seamless fit and comfort. Crafted from ultra-soft, skin-friendly liquid silicone material, they provide a secure yet pressure-free experience for all-day wear. The upgraded C-Shaped Bridge design, paired with 0.55 titanium memory wire, adapts to the ear contour, effectively eliminating fatigue.



Figure 1: EarFun Clip Open Ear Earbuds and Charging Case.

Pressure-free Comfort

Clip-On design for a snug and secure fit



Figure 2: Illustration of the C-Shaped Bridge design for adaptive comfort and secure fit.

SETUP

1. Initial Preparation

Before first use, remove any insulating films from the earbuds. Place them back into the charging case to ensure they are fully charged.

2. Pairing

The EarFun Clip earbuds utilize Bluetooth 6.0 for faster and more secure connections. They support Google Fast Pair for Android users for a seamless setup experience.

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), navigate to Bluetooth settings.
3. Select "EarFun Clip" from the list of available devices to connect.

3. Multipoint Connection

The earbuds support dual device connection, allowing you to connect to two devices simultaneously and switch between them effortlessly. This is ideal for managing audio between a phone and a laptop.



Uninterrupted Listening Time

10H
Single Charge

40H
With Charging Case

10 Mins
=
2.5 Hrs

* Actual playtime may vary based on volume level, LDAC and audio content.

The advertisement features a black EarFun charging case with its lid open, revealing two black earbuds inside. One earbud is shown separately above the case. The background consists of concentric, wavy lines in shades of blue and beige. Text on the left side highlights the battery life: '10H Single Charge' and '40H With Charging Case'. Below this, a battery icon is followed by '10 Mins', an equals sign, a music note icon, and '2.5 Hrs'. At the bottom left, a small disclaimer states: '* Actual playtime may vary based on volume level, LDAC and audio content.' The EarFun logo is visible on the earbuds.

Figure 3: Earbuds demonstrating multipoint connection capabilities.

4. EarFun App

For enhanced features and customization, download the EarFun Audio App from the Google Play Store or Apple App Store. The app allows you to personalize settings, customize controls, adjust EQ presets, and enable listening modes like Theater Mode and Surge Bass.

Unleash Full Features with EarFun App




Bass Boost
EQ



Tailored
EQ



Personalized
Controls

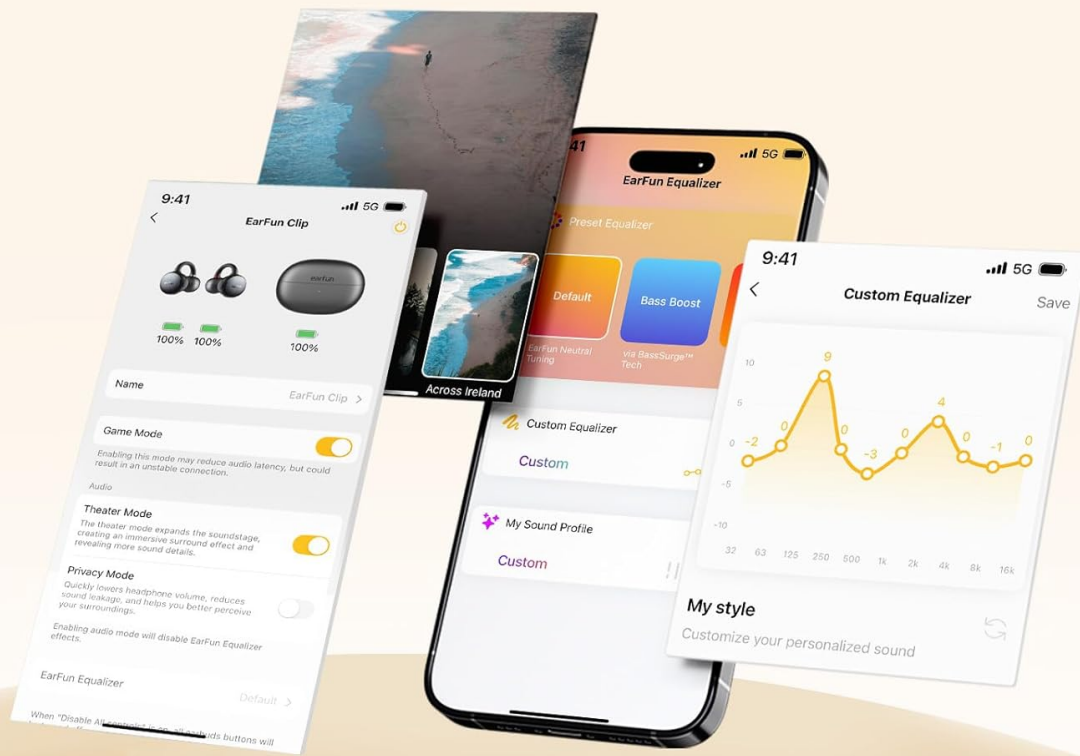

EarFun Audio



Google Play



App Store

Figure 4: EarFun Audio App interface for personalized settings.

OPERATING INSTRUCTIONS

Controls

The EarFun Clip earbuds feature intuitive physical button controls, preventing accidental touches during activities. You can customize these controls via the EarFun Audio App.

- **Play/Pause:** Single press (L/R earbud)
- **Next Track:** Double press (R earbud)
- **Previous Track:** Double press (L earbud)
- **Volume Up:** Triple press (R earbud)
- **Volume Down:** Triple press (L earbud)
- **Answer/End Call:** Single press (L/R earbud)
- **Reject Call:** Press and hold for 2s (L/R earbud)

- **Activate Voice Assistant:** Press and hold for 2s (L/R earbud)

Call Quality

Equipped with dual microphones and AI-powered environmental noise cancellation, the earbuds effectively capture your voice while minimizing background noise, ensuring exceptional call clarity even in noisy environments.

AUDIO FEATURES

Experience peak wireless audio fidelity with LDAC and Hi-Res Audio support. Powered by 10.8mm custom carbon drivers, the earbuds deliver deep bass and rich sound across the spectrum. Advanced Directional Sound Tech minimizes sound leakage while allowing you to stay aware of your surroundings.



Figure 5: Internal structure of the 10.8mm custom carbon driver with BassSurge technology.

Immersive Sound with Punchy Bass

Unmatched bass with BassSurge™ tech



«BASSSURGE™»
BASS

Figure 6: Advanced Directional Sound Tech for minimal sound leakage.

BATTERY LIFE & CHARGING

The EarFun Clip earbuds offer up to 10 hours of continuous playtime on a single charge, with a total of 40 hours when combined with the USB-C rechargeable case. For quick power-ups, a 10-minute charge provides approximately 2.5 hours of playback.

IP55 Water-resistant and Dustproof



Figure 7: Battery life and fast charging capabilities.

DURABILITY

With an IP55 waterproofing rating, the EarFun Clip wireless earbuds are built to withstand sweat, rain, and dust, making them suitable for gym use and outdoor activities.

Multipoint Connection & Bluetooth 6.0

Stable connection and
wide compatibility



 **Bluetooth® 6.0**



Figure 8: IP55 water and dust resistance for the earbuds.

MAINTENANCE

To ensure optimal performance and longevity of your EarFun Clip earbuds, follow these maintenance tips:

- Regularly clean the earbuds and charging case with a soft, dry cloth.
- If the earbuds or case get wet or dusty, ensure they are completely dry before charging.
- Store the earbuds in their charging case when not in use to protect them and conserve battery.
- Avoid exposing the earbuds to extreme temperatures or direct sunlight for prolonged periods.

TROUBLESHOOTING

If you encounter any issues with your EarFun Clip earbuds, please refer to the following common solutions:

Earbuds not connecting or pairing:

- Ensure the insulating films are removed from both earbuds.
- Verify Bluetooth is enabled on your device and the earbuds are within range.
- Try resetting the earbuds (refer to the specifications section for reset instructions).
- Delete the previous Bluetooth record for the earbuds on your device and try pairing again.

Poor sound quality:

- Ensure the earbuds are properly fitted in your ears for optimal sound.
- Adjust EQ settings in the EarFun Audio App to your preference.
- Check if the audio source is of high quality.

Charging issues:

- Ensure the USB-C cable is securely connected to both the case and a power source.
- Verify that the charging case is not wet or dusty before charging.

SPECIFICATIONS

Feature	Detail
Model Name	EarFun Clip
Item Model Number	CW100G
Connectivity Technology	Wireless (Bluetooth 6.0)
Audio Driver Type	Dynamic Driver
Audio Driver Size	10.8 Millimeters
Frequency Response	20 KHz
Sensitivity	100 dB
Impedance	32 Ohm
Playtime (Single Charge)	Up to 10 hours
Total Playtime (with Charging Case)	Up to 40 hours
Fast Charging	10 mins charge for 2.5 hours playtime
Water Resistance Level	IP55 (Waterproof)
Control Type	Button Control
Item Weight	49 Grams (1.73 ounces)
Product Dimensions	1.1 x 0.99 x 0.85 inches

Feature	Detail
Material	Liquid silicone, memory wire, composite

WARRANTY & SUPPORT

EarFun products typically come with a manufacturer's warranty. Please refer to the specific warranty information provided with your product packaging or on the official EarFun website for details regarding coverage and duration.

For FAQs and more information, please visit the official EarFun website or contact customer service:

- Official User Manual (PDF): [Download PDF](#)
- Customer Service Email: service@myearfun.com
- Website: www.myearfun.com

Documents - EarFun – CW100G



[EarFun Clip Open-Ear Wireless Earbuds User Manual](#)

User manual for the EarFun Clip Open-Ear Wireless Earbuds, covering setup, pairing, usage, troubleshooting, and specifications.

lang: **score:16** filesize: 43.35 M page_count: 12 document date: 2025-06-20