

Lafocuse ZH0163A

Lafocuse LCD Digital Wall Clock (Model ZH0163A) Instruction Manual

Your guide to setup, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the Lafocuse LCD Digital Wall Clock. This manual provides essential information for the proper installation, operation, and maintenance of your new clock. Please read these instructions thoroughly before use and retain them for future reference.

This digital clock features an 8.5-inch LCD display, showing time, date, and temperature. It is designed for versatile placement, functioning as both a wall-mounted and a desk clock, and offers flexible power options.

2. PRODUCT OVERVIEW

The Lafocuse LCD Digital Wall Clock is designed for clear readability and ease of use. Its large display simultaneously shows the current time, date, and ambient temperature.

Wall & Desk Digital Clock

8.5 Inch LCD



Battery Powered



Date



Temperature



Cord Powered



12H/24H Mode



Image: The Lafocuse LCD Digital Wall Clock displaying time, date, and temperature. Icons indicate features such as battery power, date display, temperature display, cord power, and 12/24-hour mode. Product dimensions are also shown: 20.2 cm (8 inches) width, 8 cm (3.1 inches) height, and 2 cm (0.8 inches) depth.

Key Features:

- **8.5 Inch LCD Display:** Provides clear visibility of time, date, and temperature.
- **Dual Power Modes:** Operates via 2 AAA batteries (not included) or a USB power cable (included).
- **Versatile Placement:** Can be placed on a desk using the detachable stand or mounted on a wall using the integrated hook holes.
- **Silent Operation:** No ticking noise, suitable for quiet environments like bedrooms or offices.

Component Identification:

Overview



- | | | | |
|---|---------------------|---|------------------|
| 1 | + | 6 | Hole for stand |
| 2 | - | 7 | Power cable jack |
| 3 | Set | | |
| 4 | Hook hole | | |
| 5 | Battery compartment | | |

Image: Rear view of the clock with numbered components. 1: '+' button, 2: '-' button, 3: 'Set' button, 4: Hook hole (for wall mounting), 5: Battery compartment, 6: Hole for stand, 7: Power cable jack.

- 1. **+ Button:** Used for increasing values during setting or switching temperature units.
- 2. **- Button:** Used for decreasing values during setting or switching time format.
- 3. **Set Button:** Used to enter and confirm settings.
- 4. **Hook Hole:** For hanging the clock on a wall.
- 5. **Battery Compartment:** Holds 2 AAA batteries.
- 6. **Hole for Stand:** Where the detachable stand is inserted.
- 7. **Power Cable Jack:** For connecting the USB power cable.

3. SETUP

3.1 Unpacking

Carefully remove the clock from its packaging. Verify that all components are present: the digital clock unit, a USB power cable, and the detachable stand (located inside the battery compartment).

3.2 Power Options

The clock can be powered by two methods:

- **Battery Power:** Insert 2 AAA batteries (not included) into the battery compartment. Ensure correct polarity (+/-). This allows for wireless placement.
- **USB Cable Power:** Connect the included USB power cable to the power cable jack on the clock and plug the other end into a compatible USB power adapter (not included) or a USB port.

2 Power Options



Powered by the USB power cable
(Included)

Powered by 2 AAA batteries
(Not Included)



Image: The clock can be powered by the included USB power cable or by 2 AAA batteries (not included), which are inserted into the battery compartment.

3.3 Stand Installation (for Desk Placement)

If you intend to use the clock on a desk or flat surface, install the detachable stand:

1. Open the battery compartment cover on the back of the clock.
2. Locate and remove the stick stand from inside the compartment.

3. Insert the stand into the designated hole at the bottom of the clock and twist it to the right angle for stability.
4. Close the battery compartment cover.

How to install the detachable stand

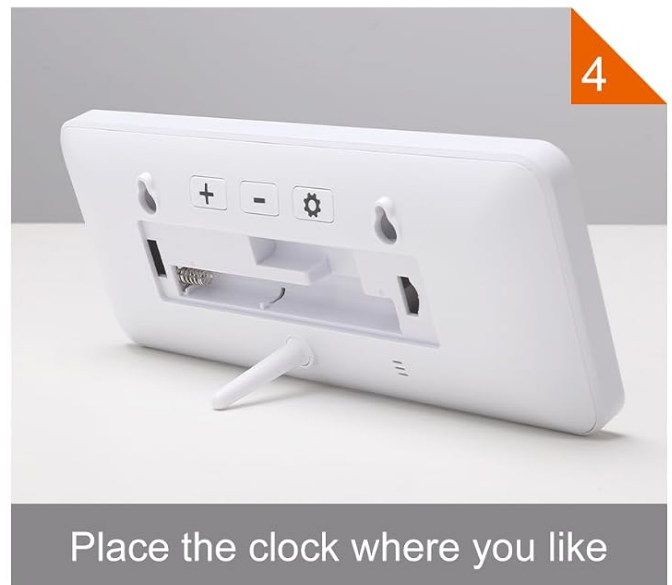


Image: Step-by-step guide for stand installation. 1. Open battery compartment. 2. Take out the stick stand. 3. Install the stand into the hole and twist. 4. Place the clock on a surface.

3.4 Wall Mounting

For wall mounting, use the two hook holes located on the back of the clock. Securely fasten two screws (not included) into your wall, ensuring they are level and spaced correctly to fit the hook holes. Hang the clock onto the screws.

Hanging



Placing



Image: The digital clock shown in two common placements: hanging on a wall and placed on a desk.

4. OPERATING INSTRUCTIONS

4.1 Setting Time and Date

To set the time and date:

1. Press and hold the **Set** button for a few seconds until the hour display starts flashing.
2. Use the **+** and **-** buttons to adjust the hour.
3. Press the **Set** button again to confirm the hour and move to the minute setting.
4. Use the **+** and **-** buttons to adjust the minutes.
5. Continue pressing **Set** and using **+/-** to set the year, month, and day in sequence.
6. After setting the day, press **Set** one last time to exit the setting mode.

Multifunctional Display

Easy to Read



Image: The clock's multifunctional display clearly showing the time (12:19 PM), month and date (10/20), and temperature (25.9°C).

4.2 Switching 12/24 Hour Mode

To switch between 12-hour and 24-hour time formats:

- In normal time display mode, press the **-** button. The display will toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

4.3 Switching Temperature Unit (°C/°F)

To switch between Celsius and Fahrenheit temperature units:

- In normal time display mode, press the **+** button. The temperature display will toggle between Celsius (°C) and Fahrenheit (°F).

5. MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the display or casing.
- **Battery Replacement:** If using batteries, replace them when the display dims or becomes inconsistent. Always replace both AAA batteries at the same time.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead batteries; power cable not connected or faulty.	Replace batteries with new ones. Ensure USB cable is securely connected and power source is active.
Incorrect time or date.	Time/date not set correctly after power loss or initial setup.	Refer to Section 4.1 "Setting Time and Date" to reset.
Temperature reading is inaccurate.	Clock placed near a heat source or vent; incorrect temperature unit selected.	Relocate the clock away from direct heat or cold sources. Press the '+' button to switch between Celsius and Fahrenheit.
Buttons are unresponsive.	Temporary software glitch; very low battery power.	Remove and reinsert batteries, or disconnect and reconnect USB power. If using batteries, replace them.

7. SPECIFICATIONS

Feature	Detail
Brand	Lafocuse
Model Number	ZH0163A
Display Type	LCD
Display Size	8.5 inches
Product Dimensions (W x H)	7.95" x 3.15" (20.2 x 8.0 cm)
Material	Plastic
Power Source	Cord (USB) or Battery Powered (2 x AAA, not included)
Special Features	Time, Date, Temperature display; Wall & Desk mountable
Item Weight	0.25 Kilograms

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Lafocuse customer service directly. Contact details are typically available on the manufacturer's official website or through your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question