



[Manuals.plus](#) /

› [YUEHISY](#) /

› YUEHISY Swimming MP3 Player and Waterproof Headphones Instruction Manual

## YUEHISY YUEHISYb8i51vxmpn-12

# YUEHISY Swimming MP3 Player and Waterproof Headphones Instruction Manual

[Introduction](#)   [Package Contents](#)   [Product Overview](#)   [Setup](#)   [Operating](#)  
[Instructions](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

Thank you for choosing the YUEHISY Swimming MP3 Player. This device is designed to provide a high-quality audio experience in various environments, including underwater activities. With its IPX8 waterproofing rating, 8GB memory, and versatile design, it is an ideal companion for swimming, running, cycling, gym workouts, and other outdoor sports.

This manual provides essential information on setting up, operating, and maintaining your MP3 player to ensure optimal performance and longevity. Please read it thoroughly before use.

# Enjoy Music,Enjoy Life

## Enjoy Your MP3 Player



The YUEHISY MP3 Player is suitable for a wide range of activities, from land sports to water-based recreation.

## 2. PACKAGE CONTENTS

Ensure all items are present in your package:

- YUEHISY Waterproof MP3 Player
- Waterproof Headphones
- 8 x Earplugs (various sizes for optimal fit and waterproofing)
- Charging Cable (USB to 3.5mm jack)
- User Manual



The complete package includes the MP3 player, headphones, various earplug sizes, and the charging cable.

Your browser does not support the video tag.

This video demonstrates the unboxing of the Waterproof MP3 Player, showcasing all included accessories such as the player, headphones, earplugs, USB cable, and user manual.


### 3. PRODUCT OVERVIEW

---

#### Device Layout

# OVERVIEW

---

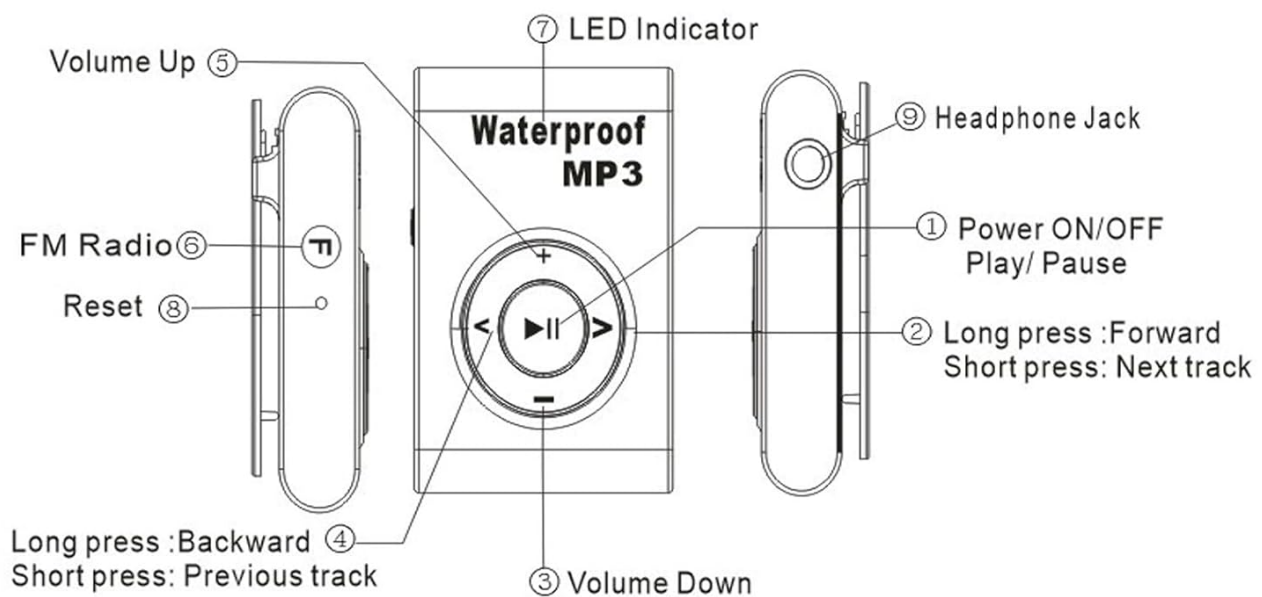

Detailed diagram illustrating the various buttons and ports on the MP3 player.

1. **Power ON/OFF / Play/Pause Button:** Press and hold to power on/off. Short press to play or pause music.
2. **Next Track / Fast Forward Button:** Short press for the next track. Long press to fast forward within a track.
3. **Volume Down Button:** Decreases the playback volume.
4. **Previous Track / Rewind Button:** Short press for the previous track. Long press to rewind within a track.
5. **Volume Up Button:** Increases the playback volume.
6. **FM Radio Button:** (If applicable) Activates FM radio mode.
7. **LED Indicator:** Displays device status (e.g., charging, playing, pairing).
8. **Reset Button:** (Small pinhole) Used to reset the device if it becomes unresponsive.
9. **Headphone Jack (3.5mm) / Charging Port / Data Transfer Port:** Multi-functional port for connecting headphones, charging, and transferring files.

## 4. SETUP

### 4.1 Charging the MP3 Player

Before first use, fully charge your MP3 player. Connect the provided charging cable to the 3.5mm jack on the MP3 player and the USB end to a power adapter or computer USB port. The LED indicator will show charging status.

### 4.2 Loading Music

To load music files onto your MP3 player:

1. Connect the MP3 player to your computer using the provided charging/data cable.
2. The device will appear as a removable disk drive on your computer.
3. Drag and drop your desired MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP, or Audible audio files into the device's storage.
4. Once files are transferred, safely eject the device from your computer before disconnecting the cable.

Your browser does not support the video tag.

This video demonstrates how to connect the MP3 player to a computer for charging and music transfer, and how to switch between

### 4.3 Attaching Headphones and Earplugs

The MP3 player comes with waterproof headphones and multiple sizes of earplugs to ensure a secure and waterproof fit. Choose the earplug size that best seals your ear canal to prevent water entry and optimize sound quality.

- For swimming, use the waterproof ear caps.
- For running or gym use, you can replace the waterproof ear caps with sports ear caps (if provided, or standard ear caps).



The 3.5mm jack is used for connecting the headphones, charging, and data transfer.

Your browser does not support the video tag.

This video demonstrates how to change the earplugs on the waterproof headphones, showing different types for various activities like

swimming and gym use.

## 4.4 Wearing the MP3 Player

The MP3 player features a multi-functional clip for secure attachment:

- **For Swimming:** Clip the MP3 player to your goggle strap, swimsuit, or swimming cap. The 360-degree rotatable clip allows for flexible positioning.
- **For Other Sports:** Clip it to your clothing, armband, or backpack strap.



The MP3 player can be securely clipped to sportswear for activities like running.

Your browser does not support the video tag.

This video highlights the 360-degree rotatable back clip design, demonstrating how it can be adjusted for various wearing preferences.

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Playback Controls

Refer to the Product Overview section for button locations.

- **Power ON/OFF:** Press and hold the Power/Play/Pause button.
- **Play/Pause:** Short press the Power/Play/Pause button.
- **Volume Up:** Press the Volume Up button.
- **Volume Down:** Press the Volume Down button.
- **Next Track:** Short press the Next Track button.
- **Previous Track:** Short press the Previous Track button.
- **Fast Forward:** Long press the Next Track button.
- **Rewind:** Long press the Previous Track button.

Your browser does not support the video tag.

This video illustrates the basic button functions for power, play/pause, volume control, and track navigation.

## 5.2 Switching Music Folders

To navigate between different music folders on your device:

- Double-press the **Previous Track** button to jump to the previous folder.
- Double-press the **Next Track** button to jump to the next folder.

Your browser does not support the video tag.

This video demonstrates how to switch between different music folders stored on the MP3 player.

## 5.3 Bluetooth Pairing

To pair your MP3 player with a Bluetooth speaker or headphones:

1. Ensure your Bluetooth speaker/headphones are in pairing mode.
2. On the MP3 player, press the Bluetooth button (indicated by a Bluetooth icon) to enter pairing mode. The LED indicator will flash green rapidly.
3. The MP3 player will automatically search for and connect to nearby Bluetooth devices.
4. Once connected, the LED indicator will turn solid green and blue, and music will begin playing from the paired speaker/headphones.

Your browser does not support the video tag.

This video provides a step-by-step guide on how to pair the MP3 player with a Bluetooth speaker.

## 5.4 Waterproof Usage

The YUEHISY MP3 player is IPX8 rated, meaning it can withstand continuous immersion in water under specified conditions. For optimal waterproof performance:

- Always ensure the headphone jack is securely plugged in before entering water.
- Select the correct size of waterproof earplugs to create a tight seal in your ear canal.
- The device can withstand pressure up to 10 feet underwater.

# Waterproofing MP3 Player



The MP3 player is designed to function reliably even when fully submerged in water.



## Enjoy Music,Enjoy Your Swimming MP3 Player

Enjoy your favorite music while swimming by securely attaching the MP3 player to your goggles.

Your browser does not support the video tag.

This video demonstrates the IPX8 waterproof capability of the MP3 player by showing it functioning while submerged in water.

## 6. MAINTENANCE

---

### 6.1 Cleaning

After each use, especially in chlorinated or saltwater, rinse the MP3 player and headphones with fresh water. Wipe them dry with a soft, clean cloth. Do not use abrasive cleaners or solvents.

### 6.2 Storage

Store the MP3 player and headphones in a cool, dry place away from direct sunlight and extreme temperatures. Avoid storing with sharp objects that could damage the device or cables.

## 7. TROUBLESHOOTING

---

- **Device not turning on or charging:**

Ensure the charging cable is securely connected to both the MP3 player and a power source. Check if the power source is active. If unresponsive, try pressing the Reset button with a small pin.

- **No sound or poor sound quality:**

Check if the headphones are fully plugged into the 3.5mm jack. Ensure the earplugs are correctly fitted and create a tight seal in your ear canal. Adjust the volume. Verify that the audio files are not corrupted.

- **Cannot transfer files:**

Ensure the MP3 player is properly connected to your computer and recognized as a disk drive. Try a different USB port or cable. Ensure there is sufficient free space on the device.

- **Bluetooth pairing issues:**

Ensure both the MP3 player and the target Bluetooth device are in pairing mode and within range. Disconnect and reconnect the Bluetooth connection.

## 8. SPECIFICATIONS

<b>Item Type</b>	Waterproofing MP3 Player
<b>Waterproofing Rating</b>	IPX8
<b>Memory Capacity</b>	8GB
<b>Sound Decoding Formats</b>	MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP, Audible
<b>Battery Capacity</b>	150mAh Lithium Ion Battery
<b>Item Weight</b>	2.01 ounces (57 Grams)
<b>Model Name</b>	YUEHISYb8i51vxmpn-12
<b>Manufacturer</b>	YUEHISY

## 9. WARRANTY AND SUPPORT

This product is guaranteed for 1 year against manufacturer's defects. For complete warranty details and to purchase replacement earbuds in more sizes, please refer to the official product website or contact customer support.

For questions or problems, please contact customer support at:

- **Email:** [help@underwateraudio.com](mailto:help@underwateraudio.com)
- **Toll-free:** 541-623-0202

Your feedback is valuable. If you love your waterproof products, tell your friends! If you don't, tell us so we can make it right.