



[Manuals.plus](#) /

› [PeacefulHues](#) /

› PeacefulHues Outdoor Rattan Recliner Instruction Manual

PeacefulHues PHO_34W8JKNL-CXT-BROWN0xRRzfC

PeacefulHues Outdoor Rattan Recliner Instruction Manual

Model: PHO_34W8JKNL-CXT-BROWN0xRRzfC

1. INTRODUCTION

Thank you for choosing the PeacefulHues Outdoor Rattan Recliner. This manual provides essential information for the safe assembly, operation, maintenance, and care of your new recliner. Please read these instructions thoroughly before use and retain them for future reference.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in injury or damage to the product.

- Always use caution when adjusting the backrest and footrest to prevent tipping. Ensure the area around the recliner is clear before adjusting.
- Do not exceed the maximum weight limit of **300 lbs (136 kg)**.
- This recliner is designed for users up to **6 feet (183 cm)** tall.
- Keep the removable cushion out of reach of young children to prevent choking hazards.
- Follow all assembly instructions carefully. Consider enlisting the help of another person for safe and efficient setup.
- Do not stand on the recliner or use it as a step stool.
- Place the recliner on a flat, stable surface to prevent instability.
- Avoid exposing the recliner to extreme weather conditions for prolonged periods to maximize its lifespan.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Outdoor Rattan Recliner Frame (x1)
- Seat Cushion (x1)
- Backrest Cushion (x1)
- Lumbar Pillow (x1)
- Assembly Hardware Kit (bolts, washers, wrench) (x1)
- Instruction Manual (x1)

4. ASSEMBLY INSTRUCTIONS (SETUP)

Assembly typically takes approximately 30 minutes with the included tools. It is recommended to have two people for assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.



Image: All components of the recliner laid out, including the rattan frame and cushions.

2. **Attach Legs (if separate):** Securely attach any separate legs to the main recliner frame using the

provided bolts and wrench. Ensure all connections are tight.

3. **Verify Reclining Mechanism:** Before attaching cushions, gently test the reclining mechanism to ensure smooth operation. The backrest and footrest should move in unison.



Image: A side view demonstrating the synchronized movement of the backrest and footrest during recline.

4. **Place Cushions:** Position the seat cushion, backrest cushion, and lumbar pillow onto the recliner frame. The cushions are designed to fit snugly.



Image: The recliner fully assembled with cushions in place, shown in a partially reclined position with the side tray extended.

5. **Final Check:** Confirm all bolts are tightened and the recliner is stable before first use.

5. OPERATING INSTRUCTIONS

5.1 Adjusting the Recline Position

The PeacefulHues Outdoor Rattan Recliner features a synchronized reclining mechanism, allowing the backrest and footrest to adjust together up to 150 degrees.

1. To recline, locate the lever or handle on the side of the recliner (typically on the right side).
2. Pull the lever/handle upwards or outwards (depending on design) while gently pushing back with your body. The backrest will recline, and the footrest will extend simultaneously.
3. Release the lever/handle once you reach your desired reclining angle. The mechanism will lock into place.
4. To return to the upright position, push the lever/handle again and lean forward. The recliner will return to its original position.



Image: Detail of the ergonomic handle used to activate the reclining function.

5.2 Using the Integrated Flip-Up Side Tray

The recliner includes a convenient flip-up side tray for holding beverages, books, or small personal items.

1. To deploy the tray, gently lift the top edge of the tray from its recessed position on the armrest.
2. The tray will pivot upwards and lock into a horizontal position.
3. To stow the tray, gently push it back down until it clicks securely into its recessed position.



Image: A close-up view of the armrest with the flip-up tray extended, showing its functionality.

6. MAINTENANCE

6.1 Cleaning the Cushions

The recliner cushions feature removable, waterproof, and fade-resistant covers for easy cleaning.

- **Spot Cleaning:** For minor spills, wipe immediately with a clean, damp cloth and mild soap. Rinse thoroughly and air dry.
- **Deep Cleaning:** Unzip and remove the cushion covers. Hand wash in cold water with a mild detergent, or machine wash on a gentle cycle. Do not bleach. Air dry completely before reattaching

to the cushions.

- Do not tumble dry or iron the cushion covers.



Image: Detail showing the zipper on a cushion, indicating its removable nature for cleaning.

6.2 Frame and Rattan Care

The recliner's rust-resistant steel frame and weatherproof PE rattan are designed for outdoor durability.

- **Regular Cleaning:** Wipe the rattan and frame with a soft, damp cloth to remove dust and dirt. For stubborn grime, use a mild soap solution and rinse thoroughly.
- **Protection:** While weatherproof, covering the recliner during prolonged periods of harsh weather (heavy rain, snow, intense sun) or when not in use can extend its lifespan and maintain its appearance.
- **Inspection:** Periodically check all bolts and connections to ensure they remain tight. Tighten if necessary.

7. TROUBLESHOOTING

If you encounter any issues with your recliner, please refer to the following common solutions:

- **Reclining Mechanism is Stiff:**

Ensure all assembly bolts are properly tightened, but not overtightened. Check for any obstructions around the mechanism. A small amount of silicone-based lubricant can be applied to moving parts if stiffness persists, avoiding contact with rattan or cushions.

- **Recliner Feels Unstable:**

Verify that the recliner is placed on a flat, level surface. Re-check all assembly bolts to ensure they are securely fastened. Do not use the recliner if it feels unstable.

- **Cushions Slide Off:**

Ensure cushions are correctly positioned. Some recliners may have ties or non-slip backing; if present, utilize these features. If not, consider adding non-slip pads underneath the cushions.

If these steps do not resolve the issue, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	PeacefulHues
Model Number	PHO_34W8JKNL-CXT-BROWN0xRRzfC
UPC	199414381734
Color	Khaki (Current Variant)
Size	Oversized
Material	PE Rattan, Steel Frame
Item Weight	22.4 pounds (10.16 kg)
Package Dimensions	24.41 x 20.08 x 7.09 inches (62 x 51 x 18 cm)
Max Recline Angle	150 degrees
Weight Capacity	300 lbs (136 kg)
Side Tray Dimensions	9.5" x 10.3" (24.1 x 26.2 cm)

PRODUCT DIMENSION



Image: Diagram illustrating the key dimensions of the recliner, including height, width, and depth.

9. WARRANTY AND SUPPORT

PeacefulHues stands behind the quality of its products. For specific warranty information, please refer to the warranty card included with your purchase or visit the official PeacefulHues website.

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact our customer support team:

- **Website:** www.peacefulhues.com/support (Example link, replace with actual if available)
- **Email:** support@peacefulhues.com (Example email)
- **Phone:** 1-800-XXX-XXXX (Example number)

Please have your model number (PHO_34W8JKNL-CXT-BROWN0xRRzfC) and purchase date ready when contacting support.

