

Defy DAF3376DBS

Defy DAF3376DBS Stainless Steel Air Fryer

User Manual

1. INTRODUCTION

Thank you for choosing the Defy DAF3376DBS Stainless Steel Air Fryer. This appliance is designed to provide a convenient and efficient way to cook a variety of foods with less oil. Please read this manual thoroughly before first use to ensure safe and optimal operation. Keep this manual for future reference.

Important Safety Information

- Always place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow for proper ventilation.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Supervise children when the appliance is in use.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool down completely before handling.
- Do not block the air inlet or outlet vents during operation.

2. PRODUCT OVERVIEW

The Defy DAF3376DBS Air Fryer features a sleek stainless steel design with a digital touch control panel for easy operation. It has a generous 7.6-liter capacity, suitable for family-sized meals.



Figure 2.1: Front view of the Defy DAF3376DBS Air Fryer, showcasing the digital touch control panel and stainless steel finish.

Key Components:

- **Digital Touch Control Panel:** For selecting cooking functions, adjusting temperature, and setting timers.
- **Air Fryer Basket:** Removable, non-stick, and dishwasher-safe for easy cleaning.
- **Handle:** Ergonomically designed for safe removal of the hot basket.
- **Air Inlet and Outlet Vents:** Essential for proper air circulation during cooking.



Figure 2.2: Visual representation highlighting the 7.6 Liter capacity and 1750 Watt power of the Defy Air Fryer.

3. SETUP

Before using your Defy Air Fryer for the first time, follow these steps:

1. **Unpacking:** Carefully remove all packaging materials, stickers, and labels from the appliance.
2. **Initial Cleaning:** Wash the air fryer basket and fry pan thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely. Wipe the interior and exterior of the appliance with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space around the back and sides of the appliance, and above it, for adequate air circulation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.



7.6L

1750 Watt

7.6 L
CAPACITY
& 1750 W

Figure 3.1: Side view of the Defy Air Fryer, illustrating its compact design suitable for various kitchen placements. Ensure adequate space around the unit as shown.

4. OPERATING INSTRUCTIONS

The Defy DAF3376DBS Air Fryer offers intuitive digital controls and pre-programmed functions for various cooking needs.

Basic Operation:

1. **Preparation:** Place ingredients into the air fryer basket. Do not overfill the basket to ensure even cooking.
2. **Power On:** Plug in the appliance. The power indicator will light up. Press the power button on the digital control panel to turn on the display.
3. **Temperature and Time Setting:** Use the temperature and timer controls to set your desired cooking temperature and time. The temperature range is typically from 80°C to 200°C (175°F to 400°F), and the timer can be set up to 60 minutes.
4. **Start Cooking:** Press the start/pause button to begin the cooking cycle. The air fryer will automatically preheat and then start cooking.
5. **Shaking Ingredients:** For some recipes, it is recommended to shake the basket halfway

through the cooking time to ensure even browning. Carefully pull out the basket, shake the contents, and reinsert it. The air fryer will resume cooking automatically.

6. **Completion:** Once the timer reaches zero, the air fryer will beep, indicating that cooking is complete. Carefully remove the basket and transfer the food to a serving dish.



Figure 4.1: The Defy Air Fryer positioned in a kitchen environment, ready for use.

Pre-programmed Cooking Functions:

The Defy DAF3376DBS features 13 pre-set menus for common dishes, simplifying the cooking process. Simply select the desired icon on the control panel, and the air fryer will automatically set the optimal temperature and time.



Figure 4.2: The digital control panel displaying the 13 pre-set menu options for various food types.

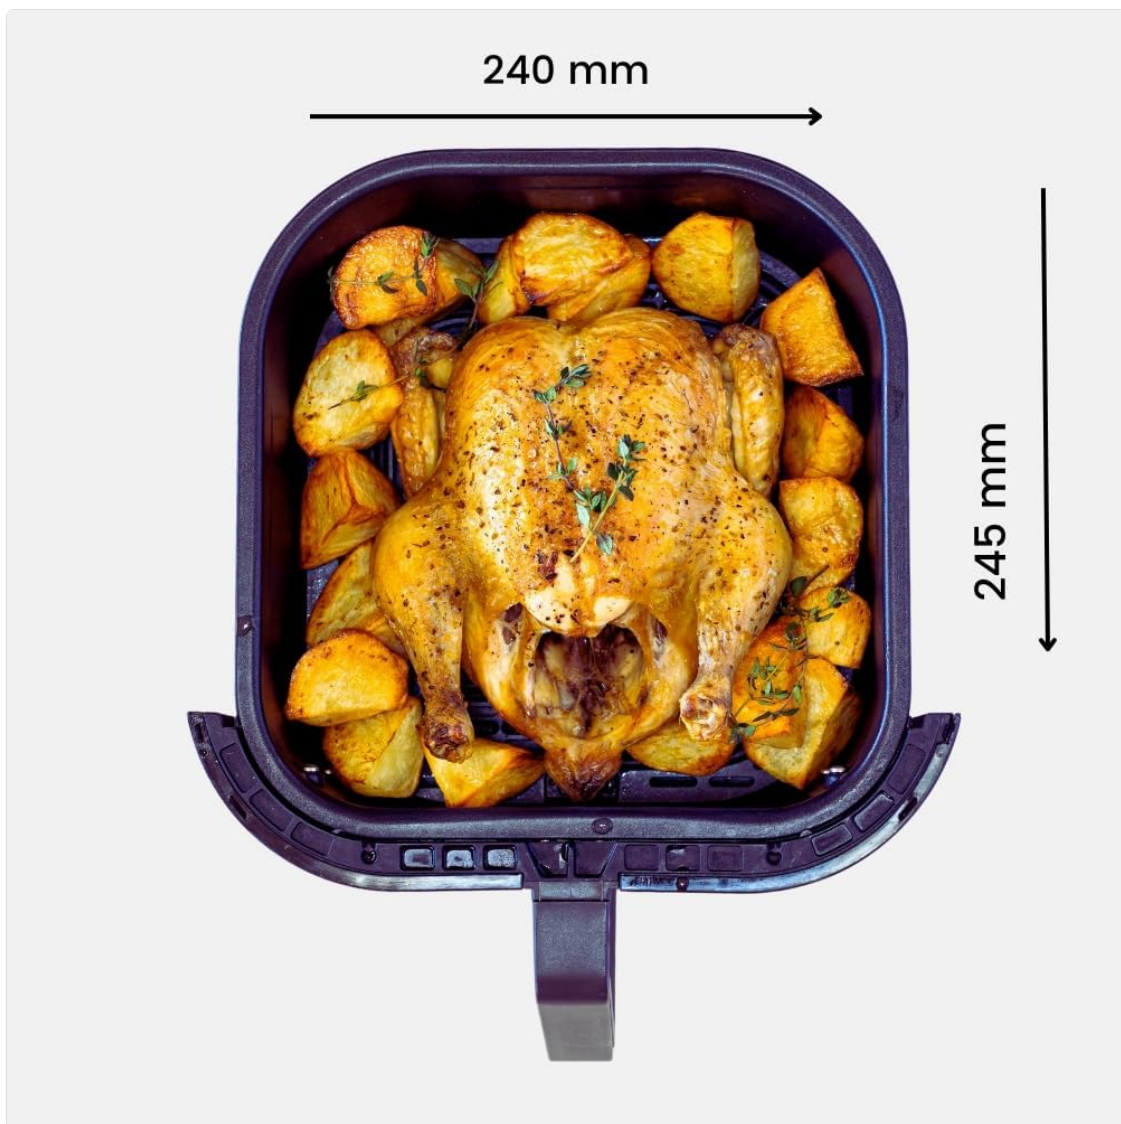


Figure 4.3: An example of a whole chicken and potatoes being cooked within the air fryer basket, demonstrating its capacity.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your Defy Air Fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool down completely before cleaning.
2. **Cleaning the Basket and Fry Pan:** The non-stick air fryer basket and fry pan are dishwasher-safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge. Avoid using metal utensils or abrasive cleaning materials that can damage the non-stick coating.
3. **Cleaning the Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food residue, use a mild detergent and a soft brush. Ensure the interior is completely dry before next use.
4. **Cleaning the Exterior:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners or scourers.
5. **Storage:** Once clean and dry, store the air fryer in a cool, dry place.



**NON STICK
COATED
SINGLE
BASKET
WITH
FRY PAN**

Figure 5.1: The air fryer with its non-stick coated single basket and fry pan removed, illustrating ease of cleaning.

6. TROUBLESHOOTING

If you encounter issues with your Defy Air Fryer, consult the following table for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Basket overloaded; food not shaken; incorrect temperature/time.	Do not overload the basket. Shake ingredients halfway through cooking. Adjust temperature and time as per recipe recommendations.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Grease residue from previous use; high-fat food.	Clean the basket and interior thoroughly after each use. For high-fat foods, drain excess fat from the basket during cooking.
Food is not crispy.	Basket overloaded; insufficient oil (for some foods); incorrect temperature/time.	Cook in smaller batches. Lightly brush or spray food with oil. Increase cooking time or temperature slightly.

7. SPECIFICATIONS

Detailed technical specifications for the Defy DAF3376DBS Stainless Steel Air Fryer:

Feature	Specification
Model Number	DAF3376DBS
Capacity	7.6 Liters
Power / Wattage	1750 Watts
Material	Stainless Steel
Item Weight	5.56 kg
Product Dimensions (D x W x H)	37 cm x 47 cm x 38 cm
Special Features	Programmable, Temperature Control, Timer






8. WARRANTY AND SUPPORT

Defy products are manufactured to the highest standards and are covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, troubleshooting beyond this manual, or to inquire about spare parts, please contact Defy customer support. Contact information can typically be found on the Defy official website or on your product's packaging.

When contacting support, please have your product model number (DAF3376DBS) and purchase date readily available.

Related Documents - DAF3376DBS

	<p>Defy DTL165 Top Loader Washing Machine User Manual</p> <p>Comprehensive user manual for the Defy DTL165 top loader washing machine. Includes installation, operation, maintenance, troubleshooting, safety instructions, and technical specifications.</p>
	<p>Defy Slimline 600SMW/600STE Multifunction Eye Level Oven Owner's Manual</p> <p>Comprehensive owner's manual for the Defy Slimline 600SMW and 600STE Multifunction Eye Level Ovens, covering installation, operation, maintenance, and care instructions.</p>
	<p>Defy Slimline 600 MSE & 600 MSU Multifunction Built-in Oven Owner's Manual</p> <p>Comprehensive owner's manual for Defy Slimline 600 MSE and 600 MSU multifunction built-in ovens. Covers installation, operation, safety, maintenance, and warranty.</p>
	<p>DEFY DTD230-DTD258-DTD259 Tumble Dryer: User Instruction Manual</p> <p>Comprehensive user manual for the DEFY DTD230, DTD258, and DTD259 Tumble Dryer. Learn about installation, operation, safety, maintenance, and troubleshooting for your Defy laundry appliance.</p>
	<p>Defy Gemini Petit Chef Plus Multifunction Oven DBO474/DBO475 Instruction Manual</p> <p>Comprehensive instruction manual for the Defy Gemini Petit Chef Plus Multifunction Oven (models DBO474-Black, DBO475-Mirror). Covers installation, operation, safety, maintenance, and troubleshooting.</p>
	<p>Defy DUALMASTER DGS679 Electric Oven: Instruction Manual</p> <p>Comprehensive instruction manual for the Defy DUALMASTER DGS679 600 GE 3B 1S Electric Oven, covering safe operation, installation, maintenance, and troubleshooting.</p>

