

## Racing Office Chair with Footrest

# Generic Racing Office Chair with Footrest

## User Manual

### INTRODUCTION

Thank you for choosing the Generic Racing Office Chair with Footrest. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new chair. Please read these instructions carefully before assembly and retain them for future reference.

### SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or defective.
- Assemble the chair on a soft, clean surface to prevent scratches.
- Do not stand on the chair. Use it only for sitting.
- Do not exceed the maximum weight capacity of 330 lbs (150 kg).
- Keep children away from small parts during assembly.
- Periodically check all bolts and screws to ensure they are tight.

### PARTS LIST

Before beginning assembly, verify that all components are included in the package:

- Backrest
- Seat Cushion with Footrest Mechanism
- Armrests (Left and Right)
- Gas Lift Cylinder
- Star Base
- Casters (Wheels)
- Mechanism Plate
- Hardware (Screws, Washers, Allen Wrench)

### ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your chair. It is recommended to have a second person assist with certain steps.

1. **Attach Casters to Base:** Insert each caster into the holes at the end of each leg of the star base until they click securely into place.
2. **Insert Gas Lift:** Place the gas lift cylinder into the center hole of the star base.
3. **Attach Mechanism Plate to Seat:** Align the mechanism plate with the pre-drilled holes on the underside of the seat cushion. Secure it with the provided screws, ensuring the front of the mechanism faces the front of the seat.
4. **Attach Armrests to Seat:** Secure the armrests to the sides of the seat cushion using the designated screws. Ensure they are oriented correctly (left and right).
5. **Attach Backrest to Seat and Armrests:** Align the backrest with the mounting points on the seat and armrests. Secure it using the remaining screws.
6. **Connect Seat to Gas Lift:** Carefully place the assembled seat and backrest onto the gas lift cylinder, ensuring the center hole of the mechanism plate aligns with the top of the gas lift. Press down firmly to secure.



Image: Fully assembled Generic Racing Office Chair with Footrest, showcasing its design and color. This image serves as a visual reference for the completed assembly.

## OPERATING INSTRUCTIONS

---

Your Racing Office Chair is designed for comfort and adjustability. Familiarize yourself with its features:

- **Height Adjustment:** To raise the chair, lift the lever located under the seat while standing. To lower, lift the lever while seated.
- **Recline Function:** Pull the recline lever (usually on the side) to unlock the backrest. Lean back to your desired angle (up to 135 degrees), then push the lever down to lock it in place.
- **Footrest Operation:** The chair features an invisible pull-out footrest. To extend, pull the footrest handle located under the front of the seat. To retract, push it back in until it is fully stored.



Image: A person demonstrating the reclining function with the footrest extended, highlighting the chair's comfort features for relaxation.

# Invisible pull foot design



## Pull-type collapsible footrest

Not only is it easy to use, but it also uses steel rails, which have a long service life and greatly improved load-bearing performance.

Image: A person demonstrating the operation of the pull-type collapsible footrest, showing how it extends from beneath the seat for use.

## CARE AND MAINTENANCE

Proper care will extend the life and appearance of your chair:

- **Cleaning:** For PU leather surfaces, wipe with a soft, damp cloth. For stubborn stains, use a mild soap solution and wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Hardware Check:** Periodically (every 3-6 months) check all screws and bolts to ensure they are tight. Re-tighten if necessary to maintain stability and safety.
- **Caster Care:** Keep casters free of hair and debris to ensure smooth rolling.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause the PU leather to fade or crack.

## TROUBLESHOOTING

If you encounter issues with your chair, refer to the following common problems and solutions:

- **Chair Sinks or Won't Stay Up:** The gas lift cylinder may be faulty. Contact customer support for a

replacement.

- **Chair Squeaks:** Check all bolts and screws for tightness. Apply a small amount of silicone lubricant to moving parts if the squeaking persists.
- **Chair is Unstable/Wobbly:** Ensure all screws connecting the armrests, backrest, and mechanism plate are securely tightened. Verify casters are fully inserted into the base.
- **Casters Don't Roll Smoothly:** Remove any hair or debris from the caster wheels.

## SPECIFICATIONS

Feature	Detail
Model	Racing Office Chair with Footrest
Materials	Plywood seat chassis, PU leather upholstery, Metal fittings
Overall Dimensions (L x W x H)	67 x 67 x (122 - 131) cm / 26.8 x 26.8 x (48 - 51.6) inches
Seat Dimensions (W x D)	51.8 cm (20.4 inches) x 48.8 cm (19.2 inches)
Backrest Dimensions (W x H)	51.8 cm (20.4 inches) x 75.2 cm (29.6 inches)
Adjustable Height Range	122 cm to 131 cm (48 inches to 51.6 inches)
Weight Capacity	Up to 330 lbs (150 kg)
Recline Angle	Up to 135 degrees
Swivel	360-degree
Footrest	Pull-type collapsible

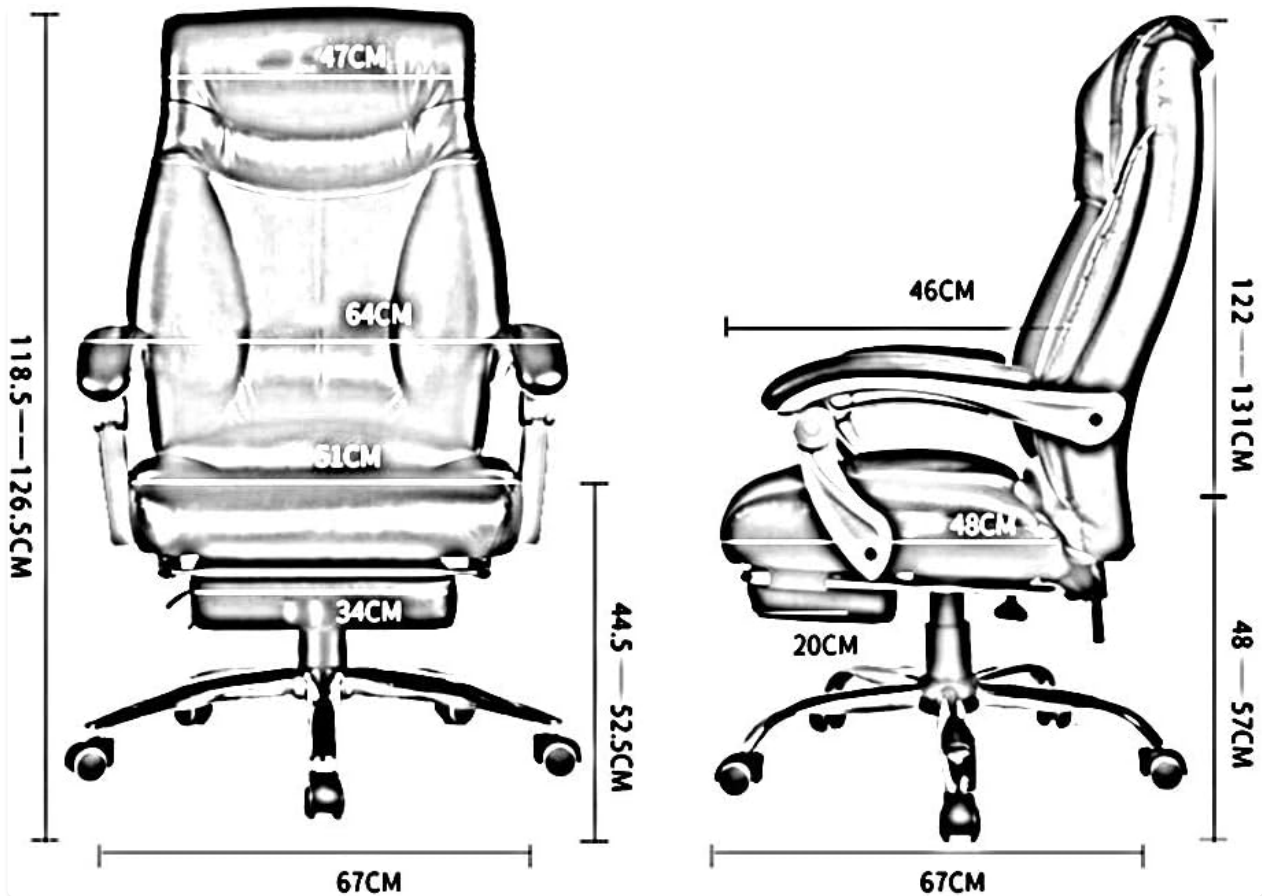




Image: Detailed dimension diagram of the office chair, providing measurements for height, width, and depth of various components.

 


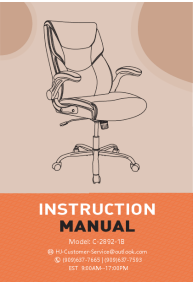

## WARRANTY AND SUPPORT

This product comes with a **3-month warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

For warranty claims, technical support, or inquiries about replacement parts, please contact your retailer or the manufacturer directly with your purchase details.

### Related Documents - Racing Office Chair with Footrest

	<a href="#">PR959-Z Assembly Instructions</a> Detailed assembly instructions for the PR959-Z chair, including a list of accessories, usage notices, and step-by-step assembly guidance with diagrams.
	<a href="#">Razzor RZ-999 Ergonomic Office Chair Assembly Instructions   Setup Guide</a> Detailed assembly guide for the Razzor RZ-999 ergonomic office chair. Learn how to assemble your chair with step-by-step instructions, identify all accessories, and understand the chair's adjustment features for optimal comfort and support.

 <p><b>MANUAL INSTRUCTION</b> Office Chair</p> 	<p><a href="#">Latitude Run® Office Chair Assembly Instructions - Model mcss1029</a></p> <p>Comprehensive assembly guide for the Latitude Run® Office Chair (model mcss1029). This guide provides detailed, step-by-step instructions for assembling your high-back, ergonomic executive office chair with footrest. Includes a complete parts list, hardware inventory, and clear visual descriptions.</p>
	<p><a href="#">Furmax Leather High Back Office Chair Assembly and Safety Instructions</a></p> <p>This document provides essential safety warnings and step-by-step assembly instructions for the Furmax Leather High Back Office Chair, ensuring proper setup and safe usage for this ergonomic executive desk chair.</p>
 <p><b>INSTRUCTION MANUAL</b></p> <p>Customer Service 800 Customer Service@allstar.com © 2020 ALLSTAR FURNITURE CO., INC. DET 832000-1770200</p>	<p><a href="#">Sweetcrispy C-2892-1B Office Chair Assembly and User Manual</a></p> <p>Comprehensive assembly guide, usage instructions, safety information, warranty, and return policy for the Sweetcrispy C-2892-1B Ergonomic PU Leather Office Chair.</p>
	<p><a href="#">Williston Forge Albaugh Ergonomic Office Chair Assembly Instructions</a></p> <p>Step-by-step assembly guide for the Williston Forge Albaugh Ergonomic Office Chair. Includes parts list and instructions for easy setup.</p>