

[Manuals.plus](#) /

› [Ambrane](#) /

› Ambrane PowerMini 10 10000mAh Power Bank Instruction Manual

Ambrane APB-46

Ambrane PowerMini 10 10000mAh Power Bank Instruction Manual

Model: APB-46

[Introduction](#)
[Package Contents](#)
[Product Overview](#)
[Setup](#)
[Operating](#)
[Maintenance](#)
[Troubleshooting](#)
[Specifications](#)
[Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Ambrane PowerMini 10 10000mAh Power Bank. This compact and portable power bank is designed to provide reliable and fast charging for your mobile devices on the go. Featuring a 10000mAh capacity, 22.5W fast charging, and an in-built Type-C cable, it ensures your devices stay powered throughout the day. Please read this manual carefully to ensure proper use and optimal performance of your device.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Ambrane PowerMini 10 10000mAh Power Bank
- User Manual
- USB Charging Cable (Type-C to Type-C)

3. PRODUCT OVERVIEW

The Ambrane PowerMini 10 is engineered for convenience and efficiency. Familiarize yourself with its key components:



Figure 3.1: Front view of the Ambrane PowerMini 10 Power Bank, showcasing its compact design.



Figure 3.2: Side view illustrating the USB-A output port, Type-C input/output port, and the integrated Type-C cable.

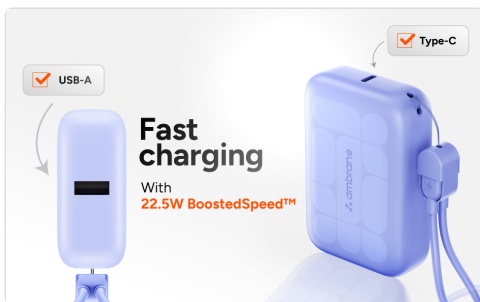


Figure 3.3: Detail of the in-built Type-C cable, designed for convenient carrying and direct device charging.

Key Components:

- **Power Button:** Activates the power bank and checks battery level.
- **LED Indicators:** Displays the remaining battery capacity.
- **USB-A Output Port:** For charging devices using a standard USB cable.
- **Type-C Input/Output Port:** For charging the power bank or charging devices with a Type-C cable.
- **In-built Type-C Cable:** Integrated cable for convenient charging of Type-C compatible devices.

4. SETUP

Initial Charging of the Power Bank:

Before first use, fully charge your Ambrane PowerMini 10 Power Bank.

1. Connect the provided USB Type-C cable to the power bank's Type-C input port.
2. Connect the other end of the cable to a USB wall adapter (not included) or a computer's USB port.
3. The LED indicators will illuminate to show the charging progress. All LEDs will be solid when fully charged.

It is recommended to fully charge the power bank every three months if not in regular use to maintain battery health.

5. OPERATING INSTRUCTIONS

Checking Battery Level:

Press the power button once to check the remaining battery level. The LED indicators will light up to show the current charge status.

Charging Your Devices:

The PowerMini 10 offers multiple ways to charge your devices:

1. Using the In-built Type-C Cable:

- Unplug the in-built Type-C cable from its storage slot.
- Connect the Type-C end directly to your compatible device.
- The power bank will automatically begin charging. If not, press the power button once.

2. Using the USB-A Output Port:

- Connect your device's USB charging cable to the USB-A output port on the power bank.
- Connect the other end of the cable to your device.
- The power bank will automatically begin charging. If not, press the power button once.

3. Using the Type-C Output Port:

- Connect your device's Type-C charging cable to the Type-C port on the power bank.
- Connect the other end of the cable to your device.
- The power bank will automatically begin charging. If not, press the power button once.



Figure 5.1: The power bank can charge up to three devices simultaneously using its multiple output options.



Figure 5.2: Demonstrates charging a smartphone using the power bank's output ports.

The PowerMini 10 features 22.5W fast charging, ensuring quick power delivery to compatible devices. It also includes SafeCharge technology for protection against overcharge, over-discharge, overcurrent, and short circuits.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the power bank. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.
- **Battery Care:** To prolong battery life, avoid fully discharging the power bank frequently. Recharge it when the battery level is low.
- **Avoid Drops:** Do not drop or subject the power bank to strong impacts, as this can damage internal components.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging	Loose cable connection, faulty cable/adaptor, power bank fully discharged.	Ensure cables are securely connected. Try a different charging cable or wall adapter. Allow the power bank to charge for a longer period if completely drained.
Device not charging from power bank	Power bank battery low, loose cable connection, incompatible device, power bank in standby mode.	Check power bank battery level and recharge if necessary. Ensure charging cable is securely connected to both power bank and device. Press the power button on the power bank to initiate charging. Try a different charging cable.
Slow charging	Using a non-fast charging cable/adaptor, device not supporting fast charging, multiple devices charging simultaneously.	Ensure you are using a fast-charging compatible cable and adaptor. Note that charging multiple devices simultaneously may reduce individual charging speeds.

Problem	Possible Cause	Solution
LED indicators not working	Power bank is off, internal fault.	Press the power button to activate the indicators. If the issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Name	PowerMini 10
Model Number	APB-46
Battery Capacity	10000mAh
Battery Cell Composition	Lithium Ion
Fast Charging Output	Up to 22.5W
Connector Type	USB Type C (Input/Output), USB Type A (Output)
Number of Ports	2 (plus 1 in-built cable)
Special Features	In-built Type-C Cable, Sleek & Compact, Flight Approved, SafeCharge Technology
Item Weight	184 Grams
Item Dimensions (L x W x Th)	8.6L x 2.5W x 5.8Th Centimeters
Compatible Devices	Smartphones and other USB-powered devices

9. SAFETY INFORMATION

Please observe the following safety precautions:

- Do not expose the power bank to water, moisture, or high humidity.
- Avoid exposing the power bank to extreme temperatures (above 60°C or below 0°C).
- Do not disassemble, modify, or attempt to repair the power bank yourself.
- Keep out of reach of children.
- Do not use the power bank if it is damaged or shows signs of swelling.
- Dispose of the power bank responsibly according to local regulations.

10. WARRANTY AND SUPPORT

Warranty:

The Ambrane PowerMini 10 Power Bank comes with a **6-month manufacturer warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your purchase receipt for warranty claims.

Customer Support:

For any queries, technical assistance, or warranty claims, please contact Ambrane customer support:

- Email: Care@ambraneindia.com
-