

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BuTure VAC](#) /

› [Cordless Vacuum Cleaner, 450W 38Kpa Max 55 Mins Vacuum Cleaners for Home with Detachable Battery, Stick Vacuums with Touch Display, Handheld Vacuums for Hardwood Floor Carpet Pet Hair](#)

BuTure VAC JR400

BuTure VAC Cordless Vacuum Cleaner User Manual

Model: JR400

1. INTRODUCTION

Thank you for choosing the BuTure VAC Cordless Vacuum Cleaner, Model JR400. This powerful and versatile vacuum is designed to provide efficient cleaning for your home, featuring a high-performance motor, intelligent touch display, and a long-lasting detachable battery. This manual provides essential information for safe operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Prevent unintentional starting. Ensure the switch is in the OFF position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.

3. PACKAGE CONTENTS

Carefully unpack your BuTure VAC Cordless Vacuum Cleaner and check that all items are present and in good condition. If any items are missing or damaged, please contact customer support.



Image: The BuTure VAC Cordless Vacuum Cleaner main unit, along with various attachments including the electric floor brush, round brush, crevice brush, adjustable tube, wall mount bracket, and cleaning tool. Two HEPA filters and the charger are also shown.

- Cordless Vacuum Main Body (Main Motor, Canister, HEPA Filter, Sponge Filter, Stainless Steel Filter, Handle)
- Battery & Charger
- Electric Floor Brush (Hard and Soft Bristle Integrated Brush)

- Round Brush
- Crevice Brush
- HEPA Filter (2 pieces: 1 pre-installed, 1 for replacement)
- Wall Mount Bracket
- Adjustable Tube
- Small Cleaning Tool
- User Manual (this document)

4. PRODUCT OVERVIEW

The BuTure VAC JR400 is engineered for powerful and convenient cleaning. Familiarize yourself with its key components and features.

4.1 Powerful Suction

Equipped with a 450W brushless motor, the JR400 delivers an unprecedented 38,000Pa of suction power, making it highly effective for various cleaning tasks, from fine dust to larger debris and pet hair.

33KPA Powerful Suction



Image: A woman operating the BuTure VAC JR400 cordless vacuum cleaner on a hard floor, illustrating its strong suction capability by picking up various debris. A small child and a dog are in the background, indicating a home environment.

4.2 Detachable Battery

The vacuum features a detachable 7*2200mAh Lithium-Ion battery, providing up to 55 minutes of runtime on low suction mode (15 minutes on high suction). The battery can be easily removed for charging or replacement, and fully charges in 4-5 hours.



Detachable Battery

4-5 h

Charging Time

55 min

Running Time

7*2200 mAh

Battery Capacity

Image: An internal view illustration of the vacuum's detachable battery pack, highlighting its 7*2200mAh cells, charging time of 4-5 hours, and a running time of up to 55 minutes.

4.3 Smart Touch Display

An intuitive LED touch screen allows for easy adjustment of 5 suction power levels. The display also provides real-time information on battery level, current suction level, and alerts for brush roller tangles or dust sensor blockages.

Smart Touch Display



Image: A hand interacting with the smart touch display on the vacuum cleaner's main body. The screen shows battery indicator, roller tangled warning, channel blocked warning, and a stepless suction adjustment slide.

4.4 Large Capacity Dust Cup & Multi-Filtration System

The 1.5L dust cup minimizes the frequency of emptying, holding more dirt and pet hair. A 5-stage filtration system, including HEPA filters, effectively isolates dust particles, protects the motor, and releases fresh air.

1.5L Large Capacity Dust Cup
One Touch Empty



Image: A hand demonstrating the one-touch emptying mechanism of the vacuum's 1.5L large capacity dust cup, showing collected debris falling into a waste bin.

4.5 Upgraded 2-in-1 Tangle-free Roller

The electric floor brush features an integrated hard and soft bristle roller, designed to work effectively on both carpets and hard floors without tangling hair. This eliminates the need to switch brushes for different surfaces.

Upgraded Roller for Carpet & Floor



Image: A detailed view of the vacuum's floor brush, highlighting the upgraded roller with integrated hard and soft bristles, designed to prevent tangles and effectively clean both carpets and hard floors.

4.6 Versatile Cleaning Modes

The JR400 easily converts from a stick vacuum to a handheld unit, and its adjustable tube (40-64cm) and various accessories allow for cleaning a wide range of surfaces and hard-to-reach areas, including ceilings, upholstery, and car interiors.



Image: A four-panel collage demonstrating the versatility of the vacuum. Top left shows the floor brush with LED lights cleaning under furniture. Top right shows the vacuum with an extension tube cleaning a high vent. Bottom left shows the handheld unit cleaning a sofa. Bottom right shows the handheld unit with a brush attachment cleaning a laptop keyboard.

Bottom right shows the handheld unit with a brush attachment cleaning a laptop keyboard.

5. SETUP AND ASSEMBLY

Follow these steps to assemble your vacuum cleaner.

- 1. Charge the Battery:** Before first use, fully charge the battery. Connect the charger to the battery pack and plug it into a power outlet. The battery indicator on the display will show charging status. A full charge takes approximately 4-5 hours.
- 2. Assemble the Main Unit:**
 - Insert the adjustable tube into the main motor body until it clicks securely into place.
 - Attach the electric floor brush to the other end of the adjustable tube, ensuring it clicks into place.
 - Alternatively, for handheld use, attach desired accessories (round brush, crevice brush) directly to the main motor body.
- 3. Install Wall Mount Bracket:** Choose a suitable location near a power outlet. Secure the wall mount bracket to the wall using the provided screws and anchors. This allows for convenient storage and charging.

6. OPERATING INSTRUCTIONS

Learn how to effectively use your BuTure VAC Cordless Vacuum Cleaner.

- 1. Power On/Off:** Press the power button on the handle to turn the vacuum on or off.
- 2. Adjust Suction Power:** Use the touch display to adjust the suction level. Slide the speed bar on the screen to select one of the 5 available suction power settings.
- 3. Cleaning Surfaces:**
 - For floors and carpets, use the electric floor brush. The integrated roller is suitable for both.
 - For tight spaces, corners, or crevices, attach the crevice brush directly to the main unit or the adjustable tube.
 - For upholstery, curtains, or delicate surfaces, use the round brush.
- 4. Monitoring Display:** Pay attention to the smart touch display for real-time information on battery status, current suction mode, and any alerts such as brush roller tangles or dust sensor blockages.
- 5. Emptying the Dust Cup:** When the dust cup is full, or after each use, empty it by pressing the one-touch release button located on the dust cup. Dispose of debris into a waste bin.

7. MAINTENANCE

Regular maintenance ensures your vacuum cleaner operates efficiently and extends its lifespan.

7.1 Emptying and Cleaning the Dust Cup

- Empty the 1.5L dust cup after each use or when it reaches the MAX fill line.
- To clean, detach the dust cup from the main unit. You can rinse the dust cup with water if necessary, but ensure it is completely dry before reattaching.

7.2 Cleaning Filters

The vacuum features a 5-stage filtration system. Regular cleaning of filters is crucial for maintaining suction power.

- HEPA Filter:** The HEPA filter should be cleaned regularly, ideally after every 3-5 uses, or when suction power decreases. Remove the HEPA filter from the dust cup assembly. Tap it gently to remove loose dust. For a deeper clean, rinse it under running water. Ensure the HEPA filter is *completely dry* (allow 24-48 hours) before reinstalling. Do not use the vacuum with a wet filter.
- Sponge Filter & Stainless Steel Filter:** These filters can also be rinsed with water. Ensure they are completely dry before reassembly.
- The product includes a replacement HEPA filter for convenience.

7.3 Cleaning the Brush Roller

- Periodically check the electric floor brush roller for tangled hair or debris.
- To remove the roller, follow the instructions in the manual for your specific brush head. Use the small cleaning tool provided to cut and remove any tangled hair or fibers.
- Ensure the roller is free of obstructions for optimal performance.

8. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely inserted into the main unit.
Low suction power.	<ul style="list-style-type: none">Dust cup is full.Filters are clogged.Brush roller is tangled.Nozzle or tube is blocked.	<ul style="list-style-type: none">Empty the dust cup.Clean or replace the HEPA, sponge, and stainless steel filters.Remove tangled hair/debris from the brush roller.Check and clear any blockages in the nozzle, tube, or main unit air path.
Brush roller stops spinning.	<ul style="list-style-type: none">Hair or debris tangled around the roller.Brush roller motor issue.	<ul style="list-style-type: none">Clean the brush roller thoroughly.If the problem persists after cleaning, contact customer support.
Battery runtime is shorter than expected.	<ul style="list-style-type: none">Using high suction mode frequently.Battery degradation over time.	<ul style="list-style-type: none">Use lower suction modes for lighter cleaning tasks.Ensure battery is fully charged before each use. Consider purchasing a spare battery for extended runtime.
Display shows "Brush Roller Tangled" or "Dust Sensor Blocked".	Obstruction detected by the vacuum's sensors.	<ul style="list-style-type: none">Check and clear any tangles from the brush roller.Inspect the dust sensor area and clear any blockages.

9. SPECIFICATIONS

Feature	Detail
Brand	BuTure VAC
Model Name	Cordless Vacuum Cleaner (JR400)
Motor Power	450W Brushless Motor

Feature	Detail
Suction Power	Up to 38,000Pa (38Kpa)
Battery Type	7*2200mAh Lithium Ion (Detachable)
Runtime	Up to 55 minutes (low suction), 15 minutes (high suction)
Charging Time	4-5 hours
Dust Cup Capacity	1.5 Liters
Filtration System	5-stage, including HEPA Filter
Display	Intelligent Color Touch Screen
Power Levels	5 adjustable levels
Brush Roller	Upgraded 2-in-1 Tangle-free (Hard/Soft Bristle Integrated) with LED Light
Adjustable Tube Length	40-64cm
Product Dimensions	10"L x 7"W x 17"H (approximate, main unit)
Item Weight	8 pounds (approximate)
Color	Purple
Indoor/Outdoor Usage	Indoor

10. WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical assistance, or any questions regarding your BuTure VAC Cordless Vacuum Cleaner, please contact our customer support team. Refer to the contact information provided with your purchase or visit the official BuTure VAC website for the most up-to-date support details.

Please retain your proof of purchase for warranty claims.