

Manuals.plus /

> [VINGLI](#) /

> VINGLI Outdoor Glider Chair (Model glider1230) Instruction Manual

## VINGLI glider1230

# VINGLI Outdoor Glider Chair (Model glider1230) Instruction Manual

Model: glider1230 | Brand: VINGLI

## INTRODUCTION

Thank you for choosing the VINGLI Outdoor Glider Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new glider chair. Please read these instructions carefully before use and retain them for future reference.

## Important Safety Information

- Always assemble the glider with two people to ensure safety and ease of construction.
- Do not exceed the maximum weight recommendation of 600 lbs (272 kg).
- Ensure all bolts and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Place the glider on a flat, stable surface to prevent tipping.
- Keep children and pets away from the assembly area.

## PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact VINGLI customer support.

- Glider Chair Components (Backrest, Seat, Armrests, Base Frames, Rocking Mechanism parts)
- Hardware Pack (Bolts, Washers, Nuts, Wrenches, Screwdriver)
- Instruction Manual



Image: The VINGLI Outdoor Glider Chair in white, showcasing its design and components.

Assembly typically takes approximately 30 minutes with two people. Follow these steps carefully.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface to prevent scratches. Refer to the parts list in your manual to identify each piece.
2. **Assemble Base Frames:** Attach the crossbars to the side base frames using the provided bolts and nuts. Ensure all connections are snug but do not fully tighten yet.
3. **Attach Rocking Mechanism:** Secure the stainless steel rocking arms to the base frames and the seat frame. Pay attention to the orientation of these parts for proper gliding function.
4. **Install Seat and Backrest:** Connect the seat and backrest panels to the assembled frame. Ensure the ergonomic design of the seat and the high backrest are correctly oriented.
5. **Attach Armrests:** Secure the armrests to the sides of the chair. One armrest includes a detachable cup holder.
6. **Final Tightening:** Once all components are in place, carefully tighten all bolts and nuts using the provided tools. Do not overtighten.
7. **Inspect:** Before first use, thoroughly inspect the assembled glider to ensure all connections are secure and the chair is stable.

# Dimensions



Load capacity  
of 600lbs



weight 31.5LBS



Image: Diagram showing the dimensions of the VINGLI Outdoor Glider Chair, including seat depth, width, and overall height.

# Comfort Seating Experience



Image: Close-up views highlighting the ergonomic design seat, round-edge armrest, and high backrest for enhanced comfort.

## OPERATING INSTRUCTIONS

The VINGLI Outdoor Glider Chair is designed for comfortable and smooth gliding motion.

- **Seating:** Sit gently into the chair, ensuring your weight is evenly distributed.
- **Gliding Motion:** To initiate gliding, gently push off the ground with your feet or lean back and forth. The smooth rocking mechanism with stainless steel arms provides a quiet and consistent motion.
- **Cup Holder:** Utilize the integrated cup holder on the armrest for beverages. Ensure cups are securely placed to prevent spills.
- **Placement:** This glider is suitable for various outdoor settings such as porches, balconies, gardens, patios, and backyards.



Image: Illustration demonstrating the smooth back-and-forth gliding motion of the chair, highlighting the silent mechanism.



Image: A close-up of the detachable cup holder, showing its versatility for different cup sizes.

## MAINTENANCE

Proper care and maintenance will extend the life of your VINGLI Outdoor Glider Chair.

- **Cleaning:** Wipe down the wood surfaces with a soft, damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly. Avoid harsh chemicals or abrasive cleaners.
- **Wood Care:** The glider is constructed from solid fir wood, designed to withstand outdoor conditions. However, to maintain its appearance and longevity, consider applying a wood sealant or outdoor furniture oil annually, especially if exposed to harsh weather.
- **Hardware Check:** Periodically check all bolts, nuts, and screws to ensure they remain tight. Re-tighten as needed to maintain stability and safety.
- **Storage:** During prolonged periods of non-use or extreme weather conditions (heavy rain, snow, freezing temperatures), it is recommended to cover the glider or store it in a sheltered area to protect the wood.



Image: The glider chair positioned outdoors, illustrating its solid wood construction and resistance to various weather conditions like sun, rain, wind, and snow.

## TROUBLESHOOTING

If you encounter any issues with your glider chair, refer to the following common problems and solutions.

| Problem                              | Possible Cause                                  | Solution                                                                                                                          |
|--------------------------------------|-------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Chair feels unstable or wobbly.      | Loose bolts or uneven surface.                  | Ensure all assembly bolts are securely tightened. Move the chair to a flat, level surface.                                        |
| Gliding mechanism is stiff or noisy. | Lack of lubrication or debris in the mechanism. | Inspect the stainless steel rocking arms for any obstructions. Apply a silicone-based lubricant to the moving parts if necessary. |
| Wood appears faded or dry.           | Exposure to sun and weather without protection. | Clean the wood surface and apply a suitable outdoor wood sealant or furniture oil.                                                |

## SPECIFICATIONS

| Feature                        | Detail                                                         |
|--------------------------------|----------------------------------------------------------------|
| Brand                          | VINGLI                                                         |
| Model Name                     | glider1230                                                     |
| Color                          | White                                                          |
| Product Dimensions (D x W x H) | 28.7" x 28" x 44.8"                                            |
| Seat Depth                     | 20 inches                                                      |
| Maximum Weight Recommendation  | 600 lbs (272 kg)                                               |
| Material                       | Solid Fir Wood                                                 |
| Item Weight                    | 31.5 lbs (14.3 kg)                                             |
| Indoor/Outdoor Usage           | Outdoor                                                        |
| Special Features               | Smooth Rocking Mechanism, Detachable Cup Holder, High Backrest |

## WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or visit the official VINGLI website. Specific warranty details are not provided in this manual.

If you require assistance with assembly, parts replacement, or have any questions regarding your VINGLI Outdoor Glider Chair, please contact VINGLI customer service directly.

**Contact Information:** Please refer to the VINGLI brand store or product packaging for the most current contact details.

## OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for embedding in this manual.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

Open the live page

<https://manuals.plus/asin/B0F7XH35N3>

More documents and user manuals: <https://manuals.plus/>