

[Manuals.plus](#) /

› [CIRCLE JOY](#) /

› CIRCLE JOY Gravity Electric Salt and Pepper Grinder Set Instruction Manual (Model KYMQ-48C)

CIRCLE JOY KYMQ-48C

CIRCLE JOY Gravity Electric Salt and Pepper Grinder Set Instruction Manual

Model: KYMQ-48C

Brand: CIRCLE JOY

INTRODUCTION

Thank you for choosing the CIRCLE JOY Gravity Electric Salt and Pepper Grinder Set. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before first use and retain it for future reference.

This set features smart gravity sensor technology for automatic grinding, external adjustment for 6 levels of coarseness, a rechargeable base, and an integrated LED light for precise seasoning. The grinders are made from BPA-free acrylic material with a high-hardness ceramic grinding core, ensuring optimal flavor retention.

SETUP

1. Unboxing and Initial Preparation

Upon unboxing, locate the small black rubber pad inserted into the ON/OFF switch of each grinder. This pad prevents accidental activation during transport. **It must be removed before first use.** Gently pry it out with a fingernail or a small tool and discard it.



Image: Instructions for removing the protective rubber pad from the ON/OFF switch.

2. Charging the Grinders

Place the grinders into the provided dual charging base. Connect the USB-C cable (included) to the charging base and a suitable USB power adapter (not included). A red LED light on top of the grinder indicates it is charging. The light will turn white or off when fully charged.

IMPORTANT: PLEASE READ BEFORE FIRST USE

1. Identify the Shipping Lock



TRANSPORT LOCK: The black rubber pad prevents accidental activation during shipping.

2. REMOVE the Pad



ACTION: Use a fingernail to gently pry the pad out of the groove. Discard after removal.



LOCKED



UNLOCKED & READY TO USE

Image: Two CIRCLE JOY electric grinders seated in their charging base, indicating charging status.

3. Filling the Grinders

To fill, twist the transparent container counter-clockwise to detach it from the main body. Fill the container with your desired spices (e.g., salt crystals, peppercorns). The large 135ml capacity and 2.2-inch wide mouth facilitate easy refilling. Once filled, reattach the container by twisting it clockwise until secure.



Image: Step-by-step visual guide on how to open, fill, and close the grinder container.

OPERATING INSTRUCTIONS

1. Power On/Off

Locate the ON/OFF switch on the side of the grinder. Slide the switch to the "ON" position to enable gravity-sensed operation. Slide it to "OFF" when not in use to prevent accidental activation and keep countertops clean.

2. Grinding Spices

With the switch in the "ON" position, simply tilt the grinder upside down. The gravity sensor will activate the grinding mechanism automatically, dispensing freshly ground spices. A built-in white LED light illuminates the area, allowing you to see the amount of seasoning being added.

EFFORTLESS ONE-HANDED COOKING

RELEASE FRESH SPICES FOR DELICIOUS FLAVORS



Press "On" To Start
When Tilted

Press "OFF" Lock

– No Spills,
Always Clean Countertops



Image: A hand demonstrating the gravity-activated grinding function with the LED light illuminating the spices.

3. Adjusting Coarseness

To adjust the grinding coarseness, rotate the external dial located near the top of the grinder. There are 6 precision levels, allowing you to easily switch from extra coarse to extra fine to suit your culinary needs.

6 EXTERNALLY ADJUSTABLE GRINDING SETTINGS



Image: Detailed view of the external coarseness adjustment dial and the various grind sizes it offers.

Your browser does not support the video tag.

Video: Official product demonstration of the CIRCLE JOY Gravity Electric Salt and Pepper Grinder Set, showcasing its features and ease of use.

MAINTENANCE

Cleaning

To clean the grinders, detach the transparent container. The container is washable; however, the main body containing the electronic components is **NOT dishwasher safe** and should not be immersed in water. Wipe the exterior of the main body with a damp cloth. Ensure all parts are completely dry before reassembly.



Image: The transparent container being rinsed under water, highlighting its easy-to-clean design.

TROUBLESHOOTING

- **Grinder not activating:** Ensure the ON/OFF switch is in the "ON" position and the protective rubber pad has been removed. Check if the battery is charged (red light indicates charging, white/off indicates full).
- **Grinding inconsistently:** Verify that the coarseness adjustment dial is set correctly for your desired grind. Ensure the spice container is securely attached.
- **No LED light:** Confirm the grinder is powered on and has sufficient battery charge.
- **Charging issues:** Ensure the grinders are properly seated in the charging base and the USB-C cable is securely connected to both the base and a working power adapter.

SPECIFICATIONS

Feature	Detail
Brand	CIRCLE JOY
Model Number	KYMQ-48C
Material	Acrylic
Color	Black
Operation Mode	Automatic (Gravity-Sensed)
Capacity	135 Milliliters (per grinder)
Item Weight	0.96 Kilograms (set)
Dishwasher Safe	No (container is washable, main body is not)

WARRANTY AND SUPPORT

CIRCLE JOY provides a 1-year after-sales service for this product. If you encounter any issues or have questions after purchase, please contact our customer service team via email. We are committed to providing efficient and professional support within 24 hours to ensure your satisfaction.

AFTER-SALES SUPPORT

If you have any questions, please feel free to contact us, CIRCLE JOY will provide you with professional service within 24 hours.



24-Hour Online
Fast Response



Limited 12-Month
Satisfaction Service



Fast Delivery
Service



Image: Visual representation of CIRCLE JOY’s after-sales support, including 24-hour online response and a 12-month satisfaction service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question