

[manuals.plus](#) /› [Electrolux](#) /› [Electrolux Clean 600 EB61C1OG Vacuum Cleaner User Manual](#)

## Electrolux EB61C1OG

# Electrolux Clean 600 EB61C1OG Vacuum Cleaner User Manual

Model: EB61C1OG

## 1. INTRODUCTION

Thank you for choosing the Electrolux Clean 600 EB61C1OG vacuum cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before using the vacuum cleaner and keep them for future reference.

## 2. IMPORTANT SAFETY INFORMATION

Always observe the following basic safety precautions when using your vacuum cleaner:

- Do not use the vacuum cleaner to pick up water, liquids, or wet materials.
- Do not vacuum flammable or combustible substances, hot ashes, or sharp objects.
- Ensure the power cord is not damaged. If damaged, it must be replaced by qualified personnel.
- Unplug the appliance from the power outlet before cleaning or performing maintenance.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## 3. PACKAGE CONTENTS

Verify that all components are present in the packaging:

- Electrolux Clean 600 Main Unit
- Flexible Hose with Handle
- Telescopic Tube
- Floor Nozzle
- Crevice Tool

- Upholstery Tool
- User Manual (this document)

## 4. SETUP AND ASSEMBLY

Follow these steps to assemble your vacuum cleaner:

1. **Unpacking:** Carefully remove all packaging materials and protective films from the vacuum cleaner and its accessories.
2. **Attach the Hose:** Insert the flexible hose connector firmly into the suction inlet on the main unit until it clicks into place.
3. **Connect the Telescopic Tube:** Attach the handle end of the flexible hose to the telescopic tube. Ensure it is securely fastened.
4. **Attach the Floor Nozzle:** Connect the desired floor nozzle to the lower end of the telescopic tube.
5. **Power Cord:** Extend the power cord from the main unit.



Figure 4.1: The Electrolux Clean 600 EB61C10G vacuum cleaner shown fully assembled. The main unit is a compact, green canister with large wheels, connected to a flexible black hose. A silver telescopic tube extends from the hose, ending in a black floor nozzle.

## 5. OPERATING INSTRUCTIONS

- 1. Power Connection:** Plug the power cord into a suitable electrical outlet.
- 2. Power On/Off:** Press the power button located on the main unit to switch the vacuum cleaner on or off.
- 3. Adjusting Suction Power:** Use the MIN/MAX slider control on the main unit to adjust the suction power according to your cleaning needs. Slide towards MIN for delicate surfaces and MAX for heavily soiled areas.
- 4. Floor Nozzle Adjustment:** The floor nozzle may feature an adjustment switch (e.g., for hard floors or carpets). Refer to the markings on your specific nozzle for proper selection. The "AUTO FLOOR SYSTEM" marking on the nozzle indicates automatic adjustment for different floor types.
- 5. Using Accessories:** For specific cleaning tasks, detach the floor nozzle and attach the crevice tool for narrow spaces or the upholstery tool for furniture.



Figure 5.1: Detail of the main unit's control panel, featuring the MIN/MAX suction power slider and the S-BAG indicator light, which illuminates when the dust bag needs replacement.

## 6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

### 6.1. Dust Bag Replacement

- The S-BAG indicator light on the main unit will illuminate when the dust bag is full and needs to be replaced.
- Unplug the vacuum cleaner from the power outlet.
- Open the dust bag compartment cover (usually located at the front or top of the main unit).
- Carefully remove the full S-BAG dust bag and dispose of it responsibly.
- Insert a new genuine Electrolux S-BAG dust bag, ensuring it is correctly seated in the holder.

- Close the dust bag compartment cover securely.

## 6.2. Filter Cleaning/Replacement

Your vacuum cleaner is equipped with motor and exhaust filters. Check your specific model for filter locations and replacement intervals.

- **Motor Filter:** Typically located behind the dust bag. Check and clean or replace every 5-6 dust bag changes, or as indicated in your specific model's instructions.
- **Exhaust Filter:** Usually located at the rear of the vacuum cleaner. Replace as recommended by Electrolux, typically once a year.
- Always ensure filters are completely dry before reinserting them.

## 6.3. Nozzle and Hose Cleaning

- Regularly check the floor nozzle for tangled hair, threads, or debris and remove them.
- Inspect the hose and telescopic tube for any blockages. If a blockage is found, carefully remove it using a blunt object, ensuring not to damage the hose.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner does not start.	No power supply.	Check if the plug is correctly inserted into the power outlet. Check the fuse/circuit breaker.
Poor suction power.	Full dust bag, clogged filters, or blockage in hose/nozzle.	Replace the dust bag. Clean or replace filters. Check hose and nozzle for blockages.
Unusual noise.	Blockage in hose/nozzle or foreign object in fan.	Check for and remove any blockages. If noise persists, contact service.
Dust escaping from the vacuum cleaner.	Dust bag not correctly inserted or damaged, or filters are missing/damaged.	Ensure dust bag is correctly inserted and not damaged. Check and replace filters if necessary.

## 8. SPECIFICATIONS

- **Model:** EB61C1OG
- **Brand:** Electrolux
- **Type:** Canister Vacuum Cleaner
- **Dust Bag Type:** S-Bag
- **Color:** Green
- **Power Supply:** (Refer to rating label on appliance for specific voltage/wattage)

## 9. WARRANTY AND SUPPORT

Electrolux provides a warranty for this product. For detailed warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Electrolux website. For technical support, spare parts, or service, please contact your local Electrolux customer service center. Always have your model number (EB61C1OG) and serial number ready when contacting support.

You can find more information and support on the official Electrolux website: [www.electrolux.com](http://www.electrolux.com)

---

© 2026 Electrolux. All rights reserved.