

Hotpoint WMTG 626BS

Hotpoint Ariston WMTG 626BS Top-Loading Washing Machine

Model: WMTG 626BS

[Introduction](#)[Safety](#)[Overview](#)[Setup](#)[Operation](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Hotpoint Ariston WMTG 626BS top-loading washing machine. Designed for compact spaces, this appliance offers a 6 kg capacity and a spin speed of 1200 rpm. Key features include Acqua Saver technology for water efficiency, Anti Macchia for stain removal, and a delayed start function for flexible operation. Please read these instructions carefully before installation and use, and keep them for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Do not operate the washing machine if it is damaged or malfunctioning.
- Unplug the appliance before performing any maintenance or cleaning.
- Do not use flammable liquids near the washing machine.
- Ensure all water connections are secure to prevent leaks.

3. PRODUCT OVERVIEW

The Hotpoint Ariston WMTG 626BS washing machine is designed for efficiency and convenience. Below are its main components and key features.

Key Features:

- **Acqua Saver:** A low water consumption program for small loads (up to 2.5 kg), ideal for lightly soiled synthetic or mixed fabrics.
- **Anti Macchia:** Removes stubborn stains without pre-treatment, protecting colors and fabrics.
- **Livello di Sporco:** Three selectable soil levels (light, normal, intense) to adapt the wash to the degree of dirt.
- **Partenza Ritardata:** Allows you to set a delay to postpone the start of the selected program.
- **Scarico Facilitato:** Gentle drum opening for comfortable and effortless unloading.



Figure 3.1: Hotpoint Ariston WMTG 626BS Top-Loading Washing Machine, front view. This image shows the overall design of the appliance, including the top-loading access and the control panel.



Figure 3.2: Detailed view of the Hotpoint Ariston WMTG 626BS washing machine control panel and display. This image highlights the program selection dial and the digital display with various function buttons.



Figure 3.3: Detergent dispenser compartment of the Hotpoint Ariston WMTG 626BS washing machine. This view shows the different sections for detergent, softener, and pre-wash additives.

4. SETUP

4.1 Unpacking

Carefully remove all packaging materials, including the polystyrene base and any protective film. Ensure no parts are left inside the drum. Keep packaging materials out of reach of children.

4.2 Installation

- **Positioning:** Place the washing machine on a flat, stable surface. The appliance dimensions are approximately 40 cm (width) x 90 cm (height) x 60 cm (depth).
- **Leveling:** Adjust the feet of the washing machine to ensure it is perfectly level. This prevents excessive vibration and noise during operation.
- **Water Connection:** Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the hose is securely fastened to prevent leaks.
- **Drainage:** Position the drain hose into a standpipe or over the edge of a sink, ensuring it is not kinked or obstructed. The drain hose should be at a height between 65 cm and 100 cm from the floor.
- **Electrical Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of the appliance. Do not use extension cords or adapters.



Figure 4.1: Hotpoint Ariston WMTG 626BS washing machine in a kitchen environment. This image demonstrates the compact design suitable for various installation spaces.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The control panel features a program selection dial, a digital display, and various function buttons. Use the dial to select the desired wash program based on fabric type and soil level, and the buttons to adjust settings like temperature, spin speed, and special functions.

5.2 Loading Laundry

Open the top lid and the drum flaps. Load laundry into the drum, ensuring not to exceed the maximum capacity of 6 kg. Distribute items evenly to prevent imbalance during the spin cycle. Close the drum flaps and the top lid securely.



Figure 5.1: Interior view of the Hotpoint Ariston WMTG 626BS washing machine drum. This image shows the inside of the drum, ready for laundry loading.

5.3 Adding Detergent and Additives

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent to the main wash compartment. If using fabric softener or pre-wash additives, add them to their respective compartments, ensuring not to exceed the MAX fill line. Close the dispenser drawer gently.

5.4 Selecting a Program

Turn the program selection dial to choose the desired wash program based on fabric type and soil level. The digital display will show the default settings for the selected program. You can then adjust parameters such as:

- **Temperature:** Adjust the wash temperature using the dedicated button.
- **Spin Speed:** Modify the spin speed up to 1200 rpm.
- **Special Functions:** Select additional options like *Acqua Saver* for small, lightly soiled loads, *Anti Macchia* for stain removal, or *Partenza Ritardata* to delay the start of the cycle.
- **Livello di Sporco:** Choose between light, normal, or intense soil levels to optimize washing performance.

5.5 Starting a Wash Cycle

Once the program and settings are selected, press the Start/Pause button to begin the wash cycle. The machine will automatically lock the lid and start filling with water.

5.6 Ending a Wash Cycle

At the end of the cycle, the machine will signal completion. Wait for the lid to unlock automatically before opening it. Remove the laundry promptly to prevent wrinkles and odors. Turn off the machine and unplug it from the power outlet if not in immediate use.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine. Always unplug the appliance before cleaning or maintenance.

6.1 Cleaning the Detergent Dispenser

Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent or softener residue. Use a brush if necessary to clean stubborn buildup. Reinsert the drawer once clean and dry.

6.2 Cleaning the Filter

The washing machine has a filter that collects lint and small objects. Locate the filter (usually at the bottom front of the machine), place a shallow container underneath to catch any water, and carefully unscrew or open the filter cover. Remove any debris, clean the filter under running water, and then securely reattach it.

6.3 Cleaning the Exterior

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.

6.4 Winter Storage (if applicable)

If the washing machine is to be stored in an unheated area during winter, ensure all water is drained from the hoses and pump to prevent freezing and damage. Consult a qualified technician if unsure.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; lid not closed properly; program not selected; Start/Pause button not pressed.	Check power connection; ensure lid is securely closed; select a program and press Start/Pause.
Excessive vibration/noise	Machine not level; transport bolts not removed; uneven load; foreign objects in drum.	Adjust leveling feet; ensure transport bolts are removed (during installation); redistribute laundry; check drum for foreign objects.
Water not draining	Drain hose kinked or blocked; drain filter clogged; pump malfunction.	Check drain hose for kinks; clean the drain filter (see Section 6.2); if problem persists, contact service.
Poor washing results	Incorrect detergent dosage; overloaded machine; unsuitable program selected; water temperature too low.	Use correct detergent amount; do not overload; select appropriate program; ensure correct temperature setting.

8. TECHNICAL SPECIFICATIONS

Specification	Value
Brand	Hotpoint
Model Number	859991697430
Product Dimensions (W x H x D)	40 x 90 x 60 cm
Item Weight	57 kg
Capacity	6 Kilograms
Access Position	Top Load
Special Feature	High Efficiency
Color	White
Control Type	Touch
Recommended Uses	Residential
Included Components	Power cord

9. WARRANTY AND SUPPORT

Your Hotpoint Ariston WMTG 626BS washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions. For technical assistance, spare parts, or to schedule a service appointment, please contact Hotpoint customer support. Contact details can typically be found on the manufacturer's official website or in the documentation provided with your purchase.

