

[Manuals.plus](#) /

› [Ströme](#) /

› Ströme Double Door Air Fryer User Manual - Dual 4L Baskets, 2400W, Digital Touchscreen

## Ströme Double Door

# Ströme Double Door Air Fryer User Manual

Model: Double Door

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before using the appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.

## PRODUCT OVERVIEW

---

The Ströme Double Door Air Fryer is designed for healthy and efficient cooking, featuring two independent 4-liter baskets that allow you to prepare different dishes simultaneously. Its digital touchscreen and preset programs simplify operation.



Figure 1: Front view of the Ströme Double Door Air Fryer, showcasing its sleek black design and dual basket configuration.

## Components

- Main Unit with Digital Touchscreen
- Two 4-Liter Non-Stick Cooking Baskets
- Two Removable Crisper Plates (inside baskets)
- Power Cord

## Control Panel

The digital touchscreen provides intuitive control over all cooking functions, including preset programs, temperature, and time settings.



Figure 2: Close-up of the digital touchscreen control panel, displaying time, temperature, and various cooking functions like Grill, Bake, Dehydrate, Roast, Broil, Reheat, Bagel, and Keep Warm.

## BEFORE FIRST USE

---

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Clean Components:** Wash the removable cooking baskets and crisper plates with warm, soapy water. Rinse thoroughly and dry completely. The main unit can be wiped with a damp cloth.
3. **Initial Run (Optional):** To eliminate any manufacturing odors, you may run the air fryer empty for about 10-15 minutes at 180°C (350°F). Ensure good ventilation during this process.
4. **Placement:** Place the air fryer on a stable, level, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

---

The Ströme Double Door Air Fryer offers versatile cooking options with its dual baskets and digital controls.

## Power On/Off

- To turn on, plug the appliance into a power outlet. The digital display will illuminate.
- To turn off, press and hold the power button (usually represented by a play/pause icon) for a few seconds, or unplug the unit.

## Basic Air Frying

1. Place food in one or both cooking baskets. Do not overfill.
2. Insert the baskets back into the main unit.
3. Select the desired basket (1 or 2) on the touchscreen.
4. Adjust the temperature (40°C to 200°C) and time (1 minute to 12 hours, with specific limits under 80°C) using the Temp/Time arrows.
5. Press the Start/Pause button to begin cooking.
6. Shake or flip food halfway through cooking for even results. The unit may beep to remind you.

## Using Preset Programs

The air fryer comes with 8 preset programs for common dishes:

- Grill
- Bake
- Dehydrate
- Roast
- Broil
- Reheat
- Bagel
- Keep Warm

To use a preset program:

1. Place food in the basket(s).
2. Select the desired basket (1 or 2).
3. Press the corresponding preset icon on the touchscreen. The default time and temperature will display.
4. You can adjust the time and temperature manually if needed.
5. Press Start/Pause to begin.

## Dual Zone Functionality

This air fryer features two independent cooking zones, allowing you to cook different foods at different temperatures and times. It also includes special functions for synchronized cooking.



Figure 3: The dual baskets of the air fryer, demonstrating simultaneous cooking of chicken and french fries.

- **Sync Finish:** This function ensures both baskets finish cooking at the same time, even if they have different cooking times and temperatures. Set up each basket's program, then select 'Sync Finish'. The air fryer will automatically adjust the start times.
- **Match Cook:** This function allows you to quickly apply the same cooking settings (time and temperature) to both baskets. Set the desired program for one basket, then select 'Match Cook' to duplicate it for the other.

## COOKING TIPS

---

- For best results, preheat the air fryer for 3-5 minutes before adding food.
- Do not overcrowd the baskets. Cook in batches if necessary to ensure even cooking and crispiness.
- Lightly spray or brush food with oil for extra crispiness, especially for fresh vegetables or homemade fries.
- Shake the baskets or flip food every 5-10 minutes for even browning.
- Use an instant-read thermometer to check the internal temperature of meats for food safety.
- For recipes requiring longer cooking times at lower temperatures (e.g., dehydrating), refer to specific recipe guidelines.

## CLEANING AND MAINTENANCE

---

Regular cleaning ensures optimal performance and extends the life of your air fryer.



Figure 4: A user demonstrating the removal of the cooking baskets, which are designed for easy cleaning.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Clean Baskets and Crisper Plates:** The removable cooking baskets and crisper plates are Teflon-coated and can be washed by hand with warm, soapy water. They are also dishwasher safe. Avoid using abrasive cleaning pads or metal utensils, as these can damage the non-stick coating.
3. **Clean Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Clean Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food residue.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

## TROUBLESHOOTING

---

If you encounter any issues with your Ströme Double Door Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; unit not fully closed.	Ensure the power cord is securely plugged into a working outlet. Check if the baskets are fully inserted.
Food is not cooked evenly.	Baskets overcrowded; food not shaken/flipped.	Cook in smaller batches. Shake or flip food halfway through cooking.

Problem	Possible Cause	Solution
Food is not crispy.	Too much moisture; not enough oil; temperature too low.	Pat food dry before cooking. Lightly spray with oil. Increase temperature slightly if safe for the food.
White smoke coming from the unit.	Grease residue from previous use; high-fat food.	Clean baskets and crisper plates thoroughly. For high-fat foods, drain excess fat during cooking.
Appliance smells during first use.	Manufacturing residue.	This is normal. Run the air fryer empty for 10-15 minutes in a well-ventilated area before first use.

If the problem persists after trying these solutions, please contact customer support.

## TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	Double Door
Brand	Ströme
Power Output	2400 Watts
Capacity	2 x 4 Liters (8 Liters total)
Temperature Range	40°C - 200°C
Timer Function	1 minute to 12 hours (under 80°C)
Control Method	Digital Touchscreen
Special Features	Dual Zone functions (Sync Finish, Match Cook)
Non-stick Coating	Yes (on baskets/crisper plates)
Inner Material	Stainless Steel (housing)
Dishwasher Safe Parts	Yes (removable baskets/crisper plates)
Product Dimensions (D x W x H)	37.4D x 36.9W x 30.3H cm
Color	Black

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer where the product was acquired. Keep your proof of purchase for any warranty claims.

For further assistance or technical inquiries, please visit the official Ströme website or contact their customer service department.

