



[Manuals.plus](#) /

> [kensen](#) /

> Kensen 14-in-1 Professional Grooming Kit (Model GT-2200) User Manual

## kensen GT-2200

# Kensen 14-in-1 Professional Grooming Kit (Model GT-2200) User Manual

Comprehensive instructions for your Kensen grooming device.

## 1. INTRODUCTION

Thank you for choosing the Kensen 14-in-1 Professional Grooming Kit. This versatile device is designed to meet various grooming needs, including beard trimming, hair clipping, body grooming, and nose/ear hair removal. This manual provides essential information for safe and effective use, maintenance, and troubleshooting.

## 2. SAFETY INFORMATION

Please read all safety instructions before using the device to prevent injury or damage.

- Avoid using the trimmer on sensitive or irritated skin.
- Keep the device out of reach of children.
- Do not use the trimmer while it is charging.
- Ensure the device is completely dry before charging.
- Only use the provided charging cable.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.
- Follow recommended cleaning and maintenance procedures to ensure safe operation and longevity of the product.

## 3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Main Trimmer Unit
- Beard Trimmer Head
- Hair Clipper Head
- Body Shaver Head
- Nose/Ear Trimmer Head

- Adjustable Guide Comb (for beard trimming)
- Multiple Fixed Guide Combs (3mm, 6mm, 9mm, 12mm for hair clipping)
- Type-C Charging Cable
- Cleaning Brush
- User Manual



Image: All components of the Kensen 14-in-1 Professional Grooming Kit, including the main unit, various trimmer heads, guide combs, and accessories.

## 4. PRODUCT FEATURES

---

- **All-in-One Grooming:** Includes interchangeable heads for beard, hair, body, and nose/ear trimming.
- **Skin-Friendly Blades:** Corrosion-resistant stainless steel blades with R-shaped rounded tips to minimize skin irritation and ensure smooth gliding.
- **Dual-Speed Motor:** Choose between 6,000 RPM for fine detailing and 7,000 RPM for thicker hair, operating quietly below 65 dB.
- **IPX7 Waterproof:** Fully washable design allows for wet or dry use and easy cleaning under running water.
- **Long-Lasting Battery:** Up to 210 minutes of cordless runtime after a 2-hour Type-C charge.
- **LED Display:** Real-time battery level, charging status, and travel lock indicator for convenience.
- **Travel-Ready:** Compact design with a travel lock feature to prevent accidental activation.

# PRECISE AND SHARP, NO HAIR PULLING

- | Professional 3Cr13 Blades for Sensitive Skin
- | R-Shaped Head Protection Design
- | Improved and Wider Finishing Area



Image: Detail of the Kensen trimmer's precision 3Cr13 stainless steel blades with R-shaped head protection design, engineered for skin-friendly and precise trimming without pulling hair.

# GENTLE AND POWERFUL, TWO ADJUSTABLE SPEEDS



**210** *Minutes*  
of Cordless  
Operation Time



**6000** RPM

Suitable for Soft and Curly Hair



**7000** RPM

Suitable for Thick and Coarse Hair

Image: Illustration of the Kensen trimmer's internal components highlighting the dual-speed motor (6000 RPM for soft hair, 7000 RPM for thick hair) and its 210-minute cordless operation time.

# IPX7

## WATERPROOF

No damage even  
when used directly  
in the shower



Image: A man using the Kensen trimmer in a shower setting, illustrating its IPX7 waterproof capability for safe wet use and easy cleaning.

## 5. SETUP

### 5.1 Initial Charging

Before first use, fully charge the trimmer. Connect the Type-C charging cable to the trimmer and plug the other end into a compatible USB power adapter (not included). The LED display will show the charging status and battery percentage. A full charge takes approximately 2 hours and provides up to 210 minutes of runtime.

## LED Display with Intelligent Indicator Remaining Battery Level at a Glance

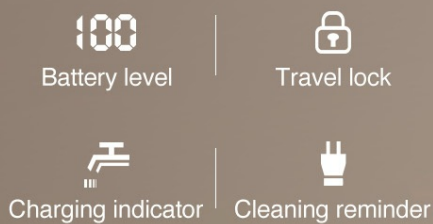


Image: The Kensen trimmer connected to a laptop via its Type-C charging cable, demonstrating its convenient charging method and long battery life of 210 minutes from a 1500mAh battery.

### 5.2 Attaching/Detaching Trimmer Heads

To attach a trimmer head, align the head with the main unit and press firmly until it clicks into place. To detach, gently pull the head away from the main unit.

Your browser does not support the video tag.

Video: Demonstration of attaching and detaching various trimmer heads and guide combs for the Kensen grooming kit. This video shows how to easily switch between different functions like hair clipping, beard trimming, and nose hair removal.

### 5.3 Attaching Guide Combs

For desired hair length, slide the appropriate guide comb onto the trimmer head until it locks. Ensure it is securely attached before use. The beard trimmer head features an adjustable comb for lengths between 1-6mm, while the hair clipper head uses fixed combs (3mm, 6mm, 9mm, 12mm).

# PRECISE CUTTING IN DIFFERENT LENGTHS

Create the Various Hairstyles You Desire



Image: Visual guide demonstrating how to achieve precise cutting lengths using the adjustable comb for beard trimming (1-2.5mm, 3-6mm) and fixed guide combs (3/6/9/12mm) for hair clipping with the Kensen grooming kit.

## 6. OPERATING INSTRUCTIONS

### 6.1 Power On/Off and Speed Selection

Press the power button to turn the trimmer on. The LED display will illuminate, showing the current battery level and speed setting. Press the power button again to cycle between the two speed modes (6000 RPM and 7000 RPM). Press and hold the power button to turn the trimmer off.

### 6.2 Beard Trimming

Attach the beard trimmer head and select the desired adjustable comb length. Move the trimmer against the direction of hair growth for an even trim. For detailing, remove the comb and use the blade directly.



Image: A man using the Kensen beard trimmer to shape his beard, demonstrating the effective and precise trimming capabilities for close-to-skin results with an adjustable limit comb (1-6mm).

### 6.3 Hair Clipping

Attach the hair clipper head and the appropriate fixed guide comb. Start with a longer comb length if unsure. Move the trimmer slowly and steadily against the direction of hair growth. For clean lines, use the blade without a comb.



Image: A person using the Kensen hair clipper on a child's head, illustrating its wider blades for fast trimming and the use of attachment combs (3, 6, 9, 12mm) for various hair lengths.

### 6.4 Body Grooming

Attach the body shaver head. This head is designed for sensitive areas and can be used wet or dry. Move the shaver gently over the skin, stretching the skin taut for a closer shave.



Image: A man using the Kensen body hair trimmer on his underarm, highlighting the V-shaped blade design which is perfect for hard-to-reach areas, with fixed-length guards (1mm, 6mm, 9mm).

### 6.5 Nose and Ear Trimming

Attach the nose/ear trimmer head. Gently insert the trimmer tip into the nostril or ear canal. Move it in a circular motion to trim unwanted hair. Do not insert too deeply.



Image: A man using the Kensen nose hair trimmer, demonstrating its high-speed rotation for effective hair removal without pulling, operating at 6000/7000 RPM.

## 7. MAINTENANCE

### 7.1 Cleaning

After each use, turn off the trimmer and detach the head. Rinse the trimmer head and blades under running water. Use the provided cleaning brush to remove any trapped hairs. Ensure all parts are dry before reattaching or storing the device.



Image: The Kensen trimmer head being rinsed under running water, demonstrating its IPX7 waterproof feature for easy and hygienic cleaning after use.

### 7.2 Storage

Store the trimmer and its accessories in a cool, dry place, away from direct sunlight and moisture. Ensure the travel lock is activated when storing or traveling to prevent accidental power-on.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted or travel lock is active.	Charge the trimmer fully. Deactivate the travel lock by pressing and holding the power button for 3 seconds.

Problem	Possible Cause	Solution
Poor cutting performance or pulling hair.	Blades are dull, dirty, or hair is too thick for current speed setting.	Clean the blades thoroughly. Try using the higher speed setting (7000 RPM) for thicker hair. Ensure blades are properly attached.
Trimmer stops during use.	Battery is low.	Recharge the trimmer. The LED display will indicate low battery.
Device not charging.	Charging cable or adapter issue, or device not properly connected.	Ensure the Type-C cable is securely connected to both the trimmer and the power adapter. Try a different USB port or adapter.

## 9. SPECIFICATIONS

---

- **Model Number:** GT-2200
- **Power Source:** Battery Powered
- **Battery Life:** Up to 210 minutes (after 2 hours charging)
- **Charging Type:** Type-C USB
- **Waterproof Rating:** IPX7
- **Blade Material:** Stainless Steel (3Cr13)
- **Motor Speeds:** 6000 RPM, 7000 RPM
- **Minimum Cutting Length:** 1 mm
- **Maximum Cutting Length:** 12 mm
- **Package Dimensions:** 9.92 x 6.93 x 2.36 inches
- **Weight:** 1.15 Pounds
- **Manufacturer:** kensen

## 10. WARRANTY & SUPPORT

---

Kensen offers a 12-month replacement warranty and lifetime service for this product. If you encounter any issues or have questions, please contact our customer service team. We are committed to resolving your concerns within 24 hours. For support, please refer to the contact information provided with your purchase or visit the official Kensen website.

Your browser does not support the video tag.

Video: An overview of the Kensen Body Hair Trimmer Set, demonstrating its various functions for shaving mustache, ear, and nose hair. This video highlights the versatility and ease of use of the grooming kit.

