

[Manuals.plus](#) /

> [tectake](#) /

> tectake Vertical Roller Blind (Model 406136) - Instruction Manual

tectake 406136

tectake Vertical Roller Blind (Model 406136) - Instruction Manual

1. PRODUCT OVERVIEW

The tectake Eloise vertical roller blind is designed to provide shade and privacy for your balcony or terrace. It features a robust construction and user-friendly operation, making it suitable for various outdoor settings.



Figure 1: tectake Vertical Roller Blind, 120 x 250 cm, Black.

This vertical blind offers optimal protection against sun, wind, and unwanted views. Its individual length adjustment allows it to adapt to various situations, providing the exact amount of protection needed. The robust polyester fabric is water-repellent and offers UV protection of 50+. The crank drive system ensures easy operation, and the included mounting material allows for quick installation on walls or ceilings.



Figure 2: Key features of the tectake vertical roller blind.

2. SAFETY INSTRUCTIONS

Please read these assembly and operating instructions carefully before installing and using this product. Failure to follow these instructions may result in injury or product damage.

- Keep children and pets away from the installation and operating area to prevent injuries from moving parts.
- Ensure all mounting hardware is securely fastened to a stable surface.
- Do not operate the blind in extreme weather conditions, such as strong winds or heavy storms, to avoid damage.
- Regularly inspect the blind for any signs of wear or damage. Do not use if damaged.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1x Vertical Roller Blind

- 1x Crank Handle
- Mounting Hardware (screws, wall plugs, brackets)
- 1x Assembly Instructions

4. SPECIFICATIONS

tectake
garden

AFMETINGEN

Totale afmetingen
120 x 10 x 250 cm

Afmetingen opgerold
120 x 10 x 14 cm

Afmetingen zijn bij benadering

**TECHNISCHE
DETAILS**

UV-bescherming 50+
Gewicht ca. 5 kg
Materiaal gepoedercoat aluminium, staal, 100% polyester met polyamidecoating, polypropyleen

INHOUD

Verticaal zonnescherf met handslinger
Montagemateriaal
Montagehandleiding

Productinformatie

The diagram shows a vertical sun shade with the following dimensions:

- Overall width: 120 cm
- Overall height: 250 cm
- Width of the fabric panel: 109 cm
- Height of the fabric panel: 246 cm
- Width at the bottom: 115 cm
- Thickness of the top rail: 8.5 cm

Figure 3: Product dimensions and technical details.

Feature	Detail
Model Number	406136
Overall Dimensions (W x D x H)	120 x 10 x 250 cm
Rolled Dimensions (W x D x H)	120 x 10 x 14 cm
Fabric Dimensions (W x H)	109 x 246 cm

UV Protection	50+
Crank Length	114 cm
Item Weight	4.8 kg
Material	Polyester fabric, Powder-coated aluminum frame
Color	Black
Assembly Required	Yes
Operation Mode	Manual (Crank)

5. SETUP AND INSTALLATION

The vertical roller blind is designed for secure installation on various surfaces, including walls and ceilings made of concrete, brick, or wood. Refer to the included assembly instructions for detailed, step-by-step guidance.



De **PA-gecoate polyesterstof** is uiterst robuust, waterafstotend en beschermt tegen UV-straling.



De **praktische handslinger** zorgt voor een uiterst energiezuinig uitrollen naar de gewenste lengte.



De cassette van **gepoedercoat aluminium** is uiterst stevig, duurzaam en weerbestendig.



De markies kan bij **volledig uitrollen** aan de 2 te monteren houders worden bevestigd met de elastieken.

Figure 4: Detailed view of components and mounting points.

Installation Steps:

1. **Choose Location:** Select a suitable location on your balcony or terrace wall/ceiling, ensuring sufficient clearance for the blind's dimensions.
2. **Mark Drilling Points:** Hold the mounting brackets in place and mark the drilling points accurately.
3. **Drill Holes:** Drill holes according to the marked points, using an appropriate drill bit for your wall material. Insert wall plugs if necessary.
4. **Attach Brackets:** Securely fasten the mounting brackets to the wall/ceiling using the provided screws.
5. **Mount Blind:** Carefully attach the roller blind cassette to the installed brackets. Ensure it is level and securely seated.
6. **Attach Crank:** Connect the crank handle to the designated mechanism on the blind.
7. **Secure Bottom:** When fully extended, the blind can be secured using the two fixing hooks at the bottom to prevent movement in light winds.

Always ensure the mounting surface is strong enough to support the weight of the blind and withstand operational forces.

6. OPERATING INSTRUCTIONS

The tectake vertical roller blind is operated manually using a crank handle, allowing for smooth and precise adjustment.

Variabel GEBRUIK

Met de soepele handslinger kan het zonnescherm snel naar de gewenste lengte worden uitgetrokken en zo aan elke situatie worden aangepast.



Figure 5: Variable use and crank mechanism.

Extending the Blind:

- Locate the crank handle.
- Insert the crank handle into the designated opening on the side of the blind's cassette.
- Turn the crank handle clockwise to lower the blind.
- Continue turning until the blind reaches your desired length.
- For added stability, secure the bottom of the blind to the fixing hooks if available.

Retracting the Blind:

- Turn the crank handle counter-clockwise to raise the blind.
- Continue turning until the blind is fully retracted into its cassette.
- Remove the crank handle when not in use.

The smooth crank system ensures effortless daily use and precise positioning of the blind.

7. MAINTENANCE

Proper maintenance will ensure the longevity and optimal performance of your tectake vertical roller blind. The fabric is designed for easy cleaning.

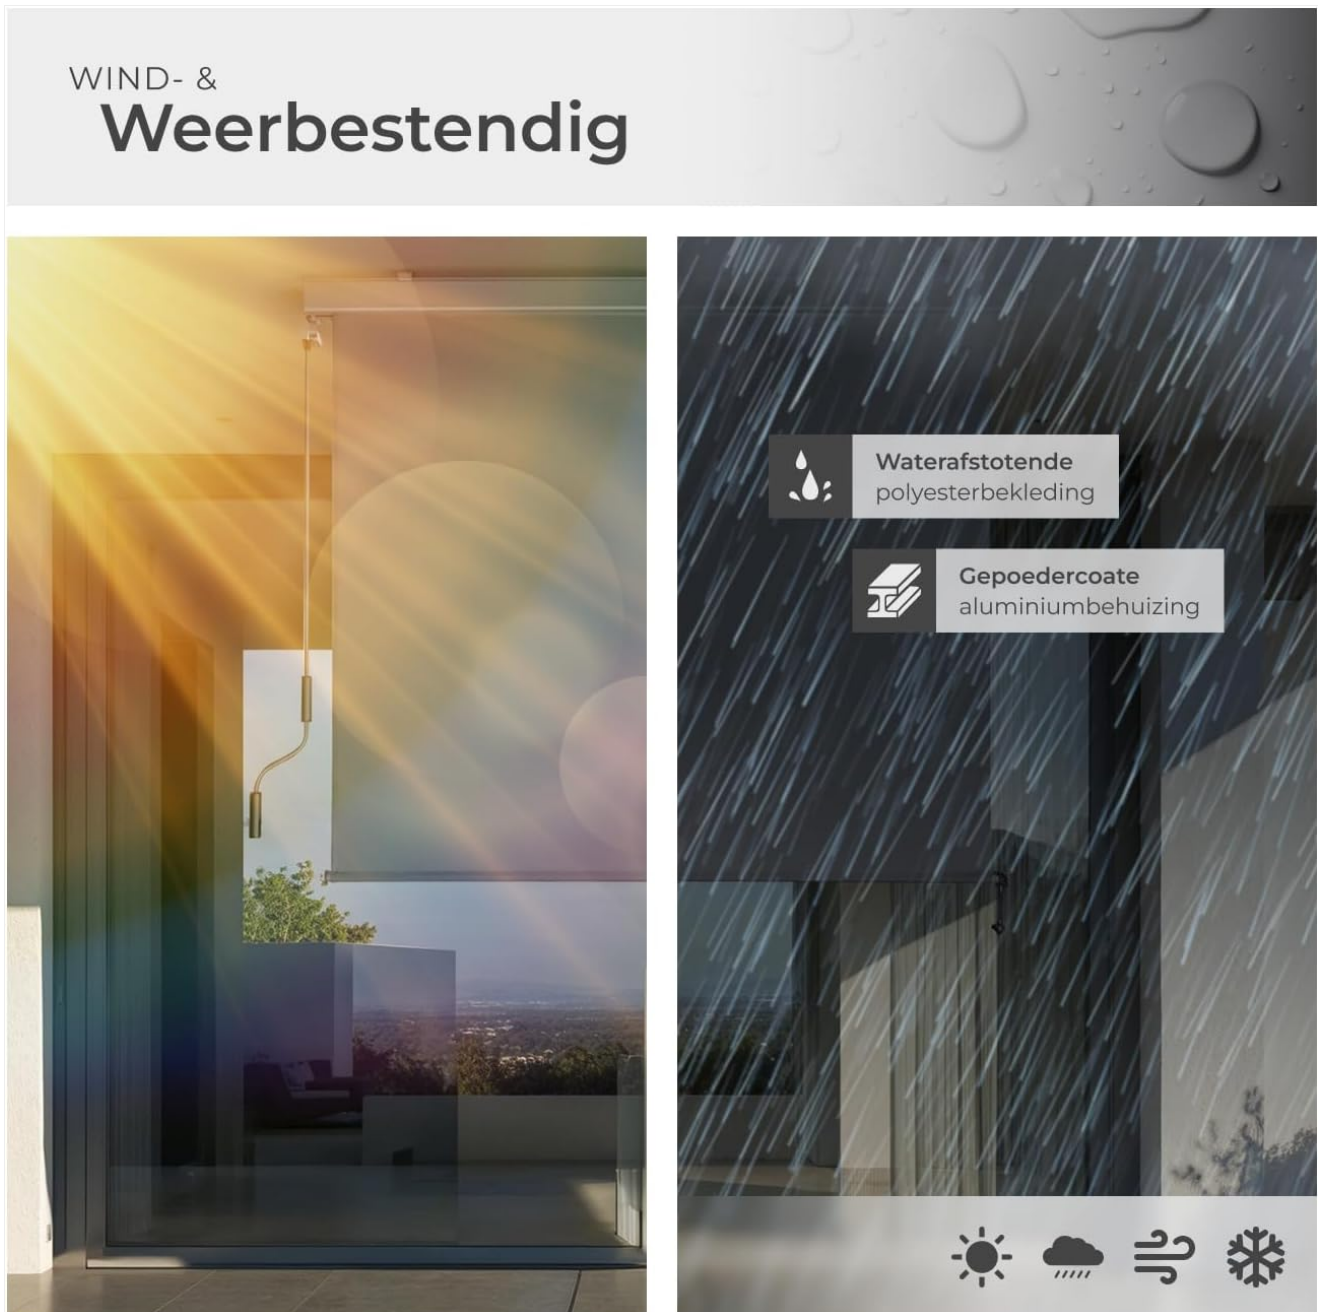


Figure 6: Wind and weather resistant features.

Cleaning the Fabric:

- To clean the fabric, simply wipe it with a damp cloth.
- For stubborn dirt, a mild soap solution can be used. Rinse thoroughly with a damp cloth afterwards.
- Avoid using harsh chemicals, abrasive cleaners, or stiff brushes, as these may damage the fabric's coating or color.
- Allow the fabric to air dry completely before retracting the blind to prevent mildew.

Frame and Mechanism Maintenance:

- Periodically check the aluminum frame and mounting hardware for any loose screws or signs of corrosion. Tighten or replace as needed.
- Ensure the crank mechanism operates smoothly. If it feels stiff, a small amount of silicone spray lubricant can be applied to moving parts (avoiding the fabric).

- Keep the area around the blind clear of debris that could obstruct its operation.

8. TROUBLESHOOTING

If you encounter any issues with your tectake vertical roller blind, refer to the following common solutions:

- **Blind not extending/retracting smoothly:** Check for any obstructions in the mechanism or fabric path. Ensure the crank handle is properly engaged and turning freely.
- **Blind not staying in position:** Verify that the wall brackets are securely fastened and the blind is correctly seated in them. If using the fixing hooks, ensure they are properly engaged.
- **Fabric appears wrinkled or uneven:** This can sometimes occur after prolonged storage or initial setup. Operating the blind fully up and down a few times may help smooth it out. Ensure the fabric is not catching on any part of the frame.
- **Unusual noises during operation:** Inspect the crank mechanism and roller for any loose parts or debris. Lubricate moving parts with silicone spray if necessary.

For persistent problems or issues not covered here, please contact tectake customer support.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact tectake customer service. Keep your purchase receipt and the product model number (406136) handy for faster assistance. You can typically find contact details on the manufacturer's official website or on the product packaging. tectake is committed to providing reliable products and support to its customers.



Figure 7: Enjoying a fully protected outdoor space.