

[Manuals.plus](#) /

> [OVENTE](#) /

> OVENTE 2-in-1 Electric Indoor Grill BQR1502B User Manual

## OVENTE BQR1502B

# OVENTE 2-in-1 Electric Indoor Grill User Manual

MODEL: BQR1502B

## Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact OVENTE customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.

## Product Overview and Components

The OVENTE 2-in-1 Electric Indoor Grill (Model BQR1502B) is designed for versatile indoor cooking, offering both grilling and raclette functions. It features a non-stick cooking plate, adjustable temperature control, and three mini raclette pans.



Image: The OVENTE 2-in-1 Electric Indoor Grill in use, showcasing its grilling surface with shrimp, skewers, asparagus, potatoes, and salmon, along with three raclette pans below containing various melted dishes.

Key components include:

- **Main Unit:** The base of the grill housing the heating elements and controls.
- **Non-Stick Cooking Plate:** A removable plate with both ribbed (grill) and flat (griddle) sections for diverse cooking.
- **Temperature Control Knob:** Used to adjust the heat level for cooking.
- **Raclette Pans (3):** Small individual pans designed for melting cheese, warming sauces, or cooking small portions.
- **Power Cord:** For connecting the appliance to an electrical outlet.

## Even Heat Distribution

1500W Power for Consistent Results



Image: The grill with its non-stick cooking plate removed, showing the illuminated U-shaped heating elements that provide even heat distribution.

### Setup

- 1. Unpacking:** Carefully remove all packaging materials and inspect the grill for any damage. Retain packaging for future storage or transport if needed.
- 2. Initial Cleaning:** Before first use, wipe the non-stick cooking plate and raclette pans with a damp cloth and mild detergent. Rinse thoroughly and dry completely. The main unit can be wiped with a damp cloth, but never immerse it in water.
- 3. Assembly:**
  - Place the main unit on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the appliance.
  - Position the non-stick cooking plate securely on top of the main unit, ensuring it sits flat and covers the heating elements.

- Insert the three raclette pans into their designated slots beneath the main cooking plate.

4. **Power Connection:** Ensure the temperature control knob is set to the "OFF" position before plugging the power cord into a standard 120V AC electrical outlet.

## Operating Instructions

This appliance offers versatile cooking options for various foods.



Image: A collage demonstrating the grill's versatility, showing it cooking steak, seafood, Korean BBQ, and pancakes.

## Temperature Control

The grill features an adjustable temperature control knob to select the desired heat level. The knob typically ranges from a minimum (MIN) setting for warming to a maximum (MAX) setting for searing.

# Precise Temperature Control

## Multiple Heat Levels



Image: A hand turning the temperature control knob on the side of the grill, indicating adjustable heat settings.

1. **Preheating:** Turn the temperature control knob to your desired setting. The indicator light will illuminate, signaling that the grill is heating. Allow 5-10 minutes for the grill to preheat thoroughly. The indicator light may cycle on and off during operation as the grill maintains the set temperature.
2. **Cooking:**
  - **Grilling/Griddling:** Place food directly onto the non-stick cooking plate. Use the ribbed section for grill marks and the flat section for griddling items like pancakes or eggs.
  - **Raclette Pans:** Place ingredients such as cheese, vegetables, or small portions of meat into the mini raclette pans and slide them into the slots beneath the main cooking plate. Monitor closely as cooking times will vary.
3. **Adjusting Temperature:** Adjust the knob as needed during cooking to achieve optimal results. Lower settings are suitable for keeping food warm or melting cheese, while higher settings are for searing meats.
4. **Finishing:** Once cooking is complete, turn the temperature control knob to the "OFF" position and unplug the appliance from the wall outlet. Allow the grill to cool completely before cleaning.

## Maintenance and Cleaning

---

Regular cleaning ensures the longevity and optimal performance of your OVENTE Electric Indoor Grill.

1. **Cool Down:** Always ensure the grill is unplugged and completely cool before attempting to clean any part.
2. **Remove Components:** Carefully remove the non-stick cooking plate and the raclette pans from the main unit.
3. **Cleaning Cooking Plate and Raclette Pans:**
  - These components are dishwasher-safe for convenient cleaning.
  - Alternatively, wash them by hand using warm, soapy water and a non-abrasive sponge or cloth. Avoid using metal scouring pads or harsh abrasive cleaners, as these can damage the non-stick coating.
  - Rinse thoroughly and dry completely before reassembling or storing.
4. **Cleaning Main Unit:**
  - Wipe the exterior of the main unit with a soft, damp cloth.
  - Do not immerse the main unit or its power cord in water or any other liquid.
  - Ensure no water enters the electrical components.
5. **Storage:** Once all parts are clean and dry, reassemble the grill or store the components separately in a dry place. The compact design allows for easy storage.



## Removable & Dishwasher-Safe Plate

Quick Cleanup • Compact Storage

Image: The removable non-stick cooking plate being placed into a dishwasher for easy cleaning.

## Troubleshooting

Problem	Possible Cause	Solution
Grill does not turn on.	Not plugged in; power outlet malfunction; temperature knob not turned on.	Ensure the power cord is securely plugged into a working outlet. Turn the temperature control knob to a desired heat setting. Check the circuit breaker.
Food is not cooking evenly.	Insufficient preheating time; uneven food placement; temperature setting too low.	Allow adequate preheating time (5-10 minutes). Distribute food evenly on the cooking surface. Increase the temperature setting if necessary.
Excessive smoke.	Food with high fat content; accumulated grease/food residue.	While designed to be smokeless, very fatty foods can produce some smoke. Ensure the drip tray (if applicable) is clean. Clean the cooking plate thoroughly after each use to prevent residue buildup.

Problem	Possible Cause	Solution
Non-stick coating appears damaged.	Use of metal utensils; abrasive cleaning.	Always use wooden, plastic, or silicone utensils. Clean with soft sponges and mild detergents. Avoid harsh chemicals or abrasive pads.

## Specifications

Feature	Detail
Model Number	BQR1502B
Brand	OVENTE
Power	1500 Watts
Voltage	120 Volts
Color	Beige
Material	Stainless Steel (heating elements), Non-stick coating (cooking plate)
Product Dimensions	18.5"D x 4.3"W x 9"H
Item Weight	6.84 pounds
Special Features	Non-Stick Coating, Temperature Control, Removable Cooking Plate, 3 Raclette Pans
UPC	810160330639



Image: A diagram illustrating the physical dimensions of the OVENTE Electric Indoor Grill.

## Warranty and Support

OVENTE warrants that this product shall be free from defects in material and workmanship under normal use and conditions for **1 year** from the original purchase date.

For warranty claims, technical support, or any inquiries regarding your OVENTE 2-in-1 Electric Indoor Grill, please contact OVENTE customer service. Refer to the official OVENTE website for the most current contact information. You can visit the OVENTE store online for more information:[OVENTE Store](#)