

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AROMA](#) /

› [AROMA AMT-600 Digital Metronome Tuner Instruction Manual](#)

AROMA AMT-600

AROMA AMT-600 Digital Metronome Tuner Instruction Manual

Your all-in-one device for precise tuning, rhythm practice, and pitch training.


INTRODUCTION

The AROMA AMT-600 Digital Metronome Tuner is a versatile 3-in-1 device designed for musicians of all levels. It integrates a metronome, tuner, and tone generator into a single compact unit, making it an essential tool for practice and performance. This device is compatible with a wide range of instruments, including guitar, bass, ukulele, violin, saxophone, trumpet, and other string and wind instruments.

Key features include a rechargeable battery, an advanced metronome with customizable rhythm settings, a precise digital tuner with a wide frequency range, a built-in tone generator for pitch training, and an HD color screen with adaptive backlight for optimal visibility in any environment.


3 in 1

Digital Metronome Tuner Tone Generator

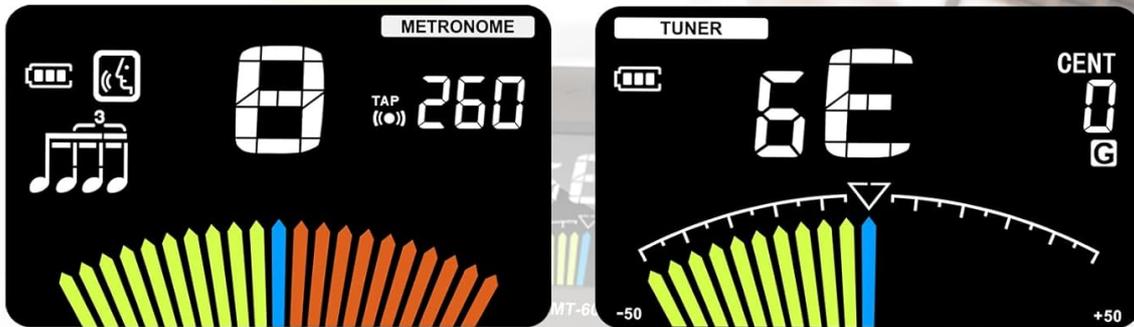

Metronome

Tuner

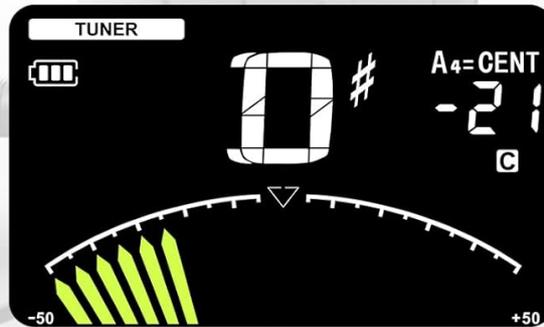

Tone Generator

Image: The AROMA AMT-600 Digital Metronome Tuner, showcasing its compact size and clear display.

SETUP

Charging the Device

The AMT-600 is powered by a 3.7V/600mAh rechargeable lithium battery. For optimal performance, ensure the device is fully charged before first use.

- Use only the provided USB-A to USB-C charging cable or a similar compatible cable. Do not use a USB-C to USB-C cable.
- Connect the USB-C end of the cable to the charging port on the device and the USB-A end to a standard USB power adapter (not included).
- A full charge takes less than 2 hours and provides over 5 hours of continuous use.

AROMA®

LONG-LASTING RECHARGEABLE LITHIUM BATTERY INCLUDED



< 2 hrs. to charge



5+ hours of use



USB-C Charge



Image: The AMT-600 device with its USB-C charging port and details on charging time and battery life.

Power On/Off

- To power on the device, press and hold the **POWER** button located on the right side.
- To power off, press and hold the **POWER** button again.

Using the Stand

The device features a sturdy rear stand that can be pulled out to keep it upright and visible on any flat surface.

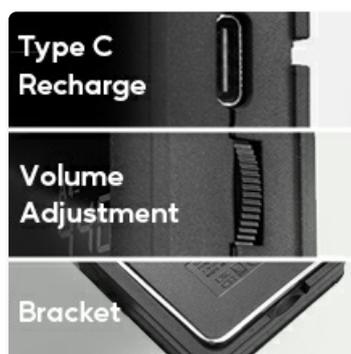


Image: Detailed view of the AMT-600's side features including the USB-C port, volume wheel, and foldable stand.

OPERATING INSTRUCTIONS

Switching Modes (Tuner/Metronome)

Press the **M/T** button to toggle between Metronome and Tuner modes. The current mode will be displayed on the screen.

Metronome Mode

In Metronome mode, you can customize various rhythm settings to enhance your practice.

- **Tempo Range:** Adjust tempo from 30 to 260 BPM using the **Up/Down arrow buttons**.
- **Beat Patterns:** Select from 10 beat patterns (0-9) using the **Up/Down arrow buttons**.
- **Rhythm Modes:** Choose from 8 rhythm modes by pressing the **Rhythm button** (musical note icon).
- **Voice Prompts:** Activate or deactivate English voice prompts by pressing the **VOICE** button.
- **Volume Adjustment:** Use the volume wheel on the side of the device to adjust the metronome's sound level.
- **Start/Stop:** Press the **START** button to begin or pause the metronome.



Image: The AMT-600 screen showing the metronome mode with tempo, beat, and rhythm indicators.

Tuner Mode

The tuner offers fast and accurate tuning for various instruments.

- **Tuning Modes:** Supports five modes: Chromatic (C), Guitar (G), Bass (B), Ukulele (U), and Violin (V). Cycle through these modes using the **Tuning Item button** (musical note icon).
- **Frequency Range:** Wide A0–C8 frequency range.
- **A4 Pitch:** Adjustable A4 pitch range from 410–450Hz using the **Up/Down arrow buttons**.
- **Accuracy:** Provides ± 0.5 cent tuning accuracy.
- **Input Options:** Use the built-in microphone for acoustic instruments or connect the included pickup cable for direct vibration sensing, ideal for string instruments.

AROMA®



Mode:

C(Chromatic), G(Guitar),
B (Bass) , V (Violin) ,
U (Ukulele)

Tolerance:

±0.5 cent

A4 Frequency:


410-450Hz



Flat



In Tune

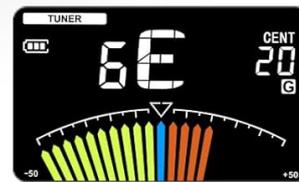


Sharp

Image: The AMT-600 in tuner mode, showing the display for tuning and the connected pickup clip.

Tuning Fastly and Accurately



Flat

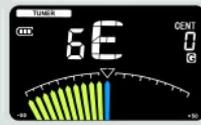

In Tune



Sharp

Modes

Chromatic, Guitar, Bass, Ukulele, Violin

Adjustable Pitch Range

410Hz-450Hz

Frequency Range

A0-C8

Tolerance

±0.5 cent



Image: The AMT-600 screen illustrating the visual feedback for flat, in-tune, and sharp notes in tuner mode.

Tone Generator

The built-in tone generator is excellent for ear training and developing sharper musical instincts.

- **Activation:** Press the **VOICE** button to activate the tone generator.
- **Tone Selection:** Use the **Up/Down arrow buttons** to select different reference tones tailored to your instrument.
- **Volume:** Adjust the volume using the side wheel.

Digital Metronome

Voice beat

Battery status

Rhythm pattern

Metronome meters

Metronome Mode

Tempo

Beat

Tempo Range: 30bpm to 260bpm

Beats: 0, 1, 2, 3, 4, 5, 6, 7, 8, 9

Rhythms:

Image: The AMT-600 screen showing the tone generator mode.

HD Color Screen with Adaptive Backlight

The large HD VA color screen features an intelligent backlight system that automatically adjusts to your environment, providing a glare-free, eye-friendly display at all times. This ensures clear access to tempo, pitch, and rhythm settings, allowing you to focus entirely on your music.

Official Operation Videos

Video: Digital Metronome Tuner Operation Instruction Video. This video demonstrates the basic functions and operation of the AMT-600 device.

Video: AMT600 Digital Metronome Tuner. A quick overview of the AMT-600's features and modes.

Video: AMT600 metronome tuner. Another brief demonstration of the metronome and tuner functions.

MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- Ensure the charging port is free from dust and debris to maintain proper charging functionality.
- Regularly charge the battery to prolong its lifespan, even if the device is not in frequent use.

TROUBLESHOOTING

- **Device not powering on:** Ensure the battery is charged. Connect the device to a power source using the provided USB-C cable and try again.
- **Inaccurate tuning:** Check that the correct instrument mode is selected. If using the pickup cable, ensure it is securely connected to both the device and the instrument. For acoustic tuning, ensure minimal background noise.
- **Metronome sound issues:** Check the volume level using the side wheel. Ensure the speaker is not obstructed.
- **Buttons unresponsive:** Some users have noted that the buttons may require a firm press. Ensure you are pressing them directly and with sufficient pressure.

SPECIFICATIONS

Feature	Detail
Item Model Number	AMT-600
Item Weight	6.3 ounces
Package Dimensions	5.47 x 3.62 x 1.1 inches
Battery Type	1 Lithium Metal battery (included)
Tuning Accuracy	±0.5 cent
A4 Pitch Range	410-450Hz
Metronome Tempo Range	30-260 BPM

WARRANTY AND SUPPORT

The AROMA AMT-600 Digital Metronome Tuner comes with a 2-year warranty. If you encounter any issues with your device, please contact AROMA customer support for assistance.

For further support or inquiries, please refer to the contact information provided in your product packaging or visit the official AROMA website.