

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MeesMeek](#) /

› [MeesMeek Projection Alarm Clock: Digital LCD Clock User Manual](#)

## MeesMeek 5282

# MeesMeek Projection Alarm Clock: Digital LCD Clock User Manual

Brand: MeesMeek | Model: 5282

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your MeesMeek Projection Alarm Clock (Model 5282). Please read this guide thoroughly to ensure proper use and to maximize the features of your device.

## PRODUCT OVERVIEW

The MeesMeek Projection Alarm Clock is designed to provide clear time display, alarm functions, and convenient projection of time onto a wall or ceiling. It features a 3.9-inch LCD screen displaying time, alarm time, calendar date, day of the week, and temperature. The clock supports both USB and battery power options.



Image 1: Front view of the MeesMeek Projection Alarm Clock, displaying current time, date, and temperature, with the projection feature active.

# All-in-One Compact Digital Alarm Clock



-  Alarm Clock
-  Battery and USB powered
-  Date
-  Weekend
-  Weekday
-  3.9-inch LCD screen
-  Temperature
-  Backlight Brightness 3-Level
-  12H/24H Format
-  Projection Brightness 3-Level
-  Snooze function
-  Alarm Volume 2-Level

Image 2: Overview of the MeesMeek Projection Alarm Clock's key features and display elements.

## SETUP

### 1. Powering the Clock

The clock can be powered in two ways:

- USB Power:** For continuous projection and backlight, connect the provided micro USB cable to the clock and the 5V 1A power adapter to a wall outlet.
- Battery Power:** For basic alarm clock functions and as a backup during power outages, insert 3 AAA batteries (not included) into the battery compartment. Note: When powered by batteries only, the projection and backlight will turn off after 5 seconds to conserve power.

# 2 Ways of Power Supply

No missed alarms during power outages

Powered by USB charger

( Power adapter and USB cable are included )



Powered by AAA batteries

( Not included )



**NOTE:** On battery power only, both the projection and the screen backlight only come on for 5 seconds, and their brightness cannot be adjusted.

Image 3: Illustration of connecting the USB power adapter and inserting AAA batteries for clock operation.

## 2. Setting Time and Date

Refer to the individual control buttons on the top of the clock for setting the year, month, date, and time. The clock supports both 12-hour and 24-hour formats.

Your browser does not support the video tag.

Video 1: Demonstrates how to easily set the calendar (year, month, date) and switch between 12H/24H time formats on the MeesMeek Projection Alarm Clock.

## 3. Setting the Alarm

The alarm can be set with two levels of volume. You can also activate a "Weekend Mode" which prevents the alarm from sounding on Saturdays and Sundays.

## 4. Adjusting Projection

The projector can swivel 180° to direct the time display onto your ceiling or wall. Use the focus ring to adjust the

sharpness of the projected image. Projection brightness can be set to 4 levels.



Image 4: Details on adjusting the projection angle, flipping the display, and using the focus ring for clarity.

## OPERATING INSTRUCTIONS

### 1. LCD Display Information

The 3.9-inch LCD screen displays the following information:

- Current Time (12H/24H format selectable)
- Alarm Time
- Calendar Date
- Day of the Week
- Temperature

# LCD Display with Backlight Brightness and Volume Adjustable

## Alarm Volume



## Projection Brightness



## Backlight Brightness



Image 5: Detailed view of the LCD display and options for adjusting alarm volume, projection brightness, and backlight brightness.

## 2. Snooze Function

When the alarm sounds, press the "Snooze" button on the top of the clock to temporarily silence the alarm for 9 minutes. The alarm will sound again after this period.



Image 6: Illustration of the snooze function and weekend mode feature.

### 3. Weekend Mode

Activate the "Weekend Mode" to prevent the alarm from sounding on Saturdays and Sundays. This feature is useful for maintaining a consistent alarm schedule during weekdays without needing to manually turn off the alarm on weekends.

### 4. Backlight Brightness

The LCD backlight has 4 adjustable brightness levels (Off, Low, Medium, High) for comfortable viewing in various lighting conditions.

### 5. Projection Brightness

The projection brightness can be adjusted to 4 levels (Off, Low, Medium, High) to suit your preference and room lighting.

## MAINTENANCE

To ensure optimal performance and longevity of your MeesMeek Projection Alarm Clock, please follow these maintenance tips:

- **Battery Backup:** Before initial use, insert 3 AAA batteries as a backup. This prevents the clock from resetting in case of a power failure.
- **Power Connection:** If the projection and backlight are not continuously on even when plugged in, check that the USB cable is securely connected and making good contact.
- **Cleaning:** Use a soft, dry cloth to clean the clock's surface and LCD screen. Avoid using abrasive cleaners or solvents.

## TROUBLESHOOTING

If you encounter any issues with your MeesMeek Projection Alarm Clock, refer to the following common solutions:

- **Projection is upside down:** Press and hold the projection button for 3 seconds to flip the projected image.
- **Projection is blurry:** Scroll the focus wheel located on the back of the clock to adjust the sharpness of the projected image.
- **Projection/Backlight turns off after 5 seconds:** This is normal behavior when the clock is powered by batteries only to save power. For continuous display, ensure the clock is plugged into a USB power source.
- **Clock not keeping time:** Ensure fresh AAA batteries are installed for backup and that the USB power connection is stable.

## SPECIFICATIONS

Feature	Detail
Brand	MeesMeek
Model Number	5282
Display Type	Digital
Product Dimensions	7"W x 3.5"H
Power Source	Corded Electric, Battery Powered
Batteries Required	3 AAA batteries (not included)
Special Features	Calendar Display, Temperature Display, Adjustable Brightness, 12H/24H, Projection Clock, Alarm, Snooze, Weekend Mode
Mounting Type	Tabletop
Material	Plastic
Item Weight	9.9 ounces (280 Grams)

## WARRANTY INFORMATION

This product comes with a **Limited Warranty**. For specific details regarding the terms and conditions of your warranty,

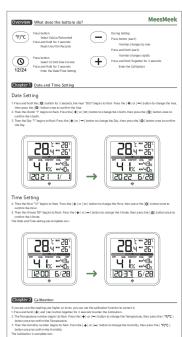
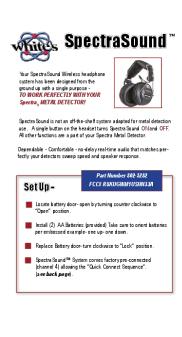
please refer to the documentation included with your purchase or contact MeesMeek customer support.

## CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your MeesMeek Projection Alarm Clock, please contact MeesMeek customer service. Contact information can typically be found on the product packaging or on the official MeesMeek website.



## Related Documents - 5282

	<p><a href="#">MeesMeek Model 6201 Digital Travel Alarm Clock User Manual</a></p> <p>This manual provides comprehensive instructions for setting up and operating the MeesMeek Model 6201 Digital Travel Alarm Clock, covering time, date, alarm, backlight, and troubleshooting.</p>
	<p><a href="#">MeesMeek Indoor Thermometer Hygrometer User Guide: Setup and Calibration</a></p> <p>Detailed instructions for setting up and calibrating your MeesMeek indoor thermometer and hygrometer, including button functions, date/time settings, and temperature/humidity calibration.</p>
	<p><a href="#">Whites SpectraSound Wireless Headphones - Setup and Quick Connect Guide</a></p> <p>User guide for the Whites SpectraSound wireless headphone system, detailing setup, connection sequences, channel selection, power levels, and troubleshooting for Spectra metal detectors.</p>
	<p><a href="#">Whites SpectraSound Wireless Headphones User Guide</a></p> <p>Instructions and setup guide for the Whites SpectraSound wireless headphone system, designed to work with Spectra metal detectors. Covers connection, channel selection, power levels, and troubleshooting.</p>