

[Manuals.plus](#) /

› [LEADZM](#) /

› LEADZM 12000 BTU Portable Air Conditioner User Manual

LEADZM JHS-A032-12KR2/ B1-W

LEADZM 12000 BTU Portable Air Conditioner User Manual

Model: JHS-A032-12KR2/ B1-W

1. INTRODUCTION

Thank you for choosing the LEADZM 12000 BTU Portable Air Conditioner. This unit is designed to provide efficient cooling, dehumidification, and air circulation for your indoor spaces. With its 3-in-1 functionality, smart Wi-Fi control, and user-friendly design, it offers a comfortable environment tailored to your needs. Please read this manual thoroughly before operation to ensure proper use, maintenance, and safety.



The portable air conditioner provides efficient cooling and air circulation.

Mouvement Facile

Roulez partout où vous le souhaitez



Salon



Chambre à coucher



Cuisine



Bureau

The portable design with smooth wheels and integrated handles allows for easy movement between rooms.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the power supply matches the voltage specified on the rating label.
- Do not operate the unit with a damaged cord or plug.
- Keep the unit upright during transport and operation.
- Do not block air inlets or outlets.
- Do not insert objects into the air vents.
- Unplug the unit before cleaning or servicing.
- Keep children and pets away from the unit during operation.
- Do not use in wet areas or near water.
- Only use accessories recommended by the manufacturer.

3. PRODUCT COMPONENTS

Carefully unpack your air conditioner and check that all items are included. If any parts are missing or damaged, contact your retailer.



Included components for the LEADZM Portable Air Conditioner.

1. AAA Batteries (for remote control)
2. Remote Control
3. Exhaust Hose
4. Instruction Manual (this document)
5. Fixing Screws
6. Drain Hose
7. Window Sealing Plate / Window Kit
8. Portable Air Conditioner Unit

4. SETUP & INSTALLATION

4.1 Placement

Place the air conditioner on a flat, stable surface, ensuring there is at least 30 cm (12 inches) of space around the unit for proper airflow. Avoid placing it near heat sources or in direct sunlight.

4.2 Window Kit Installation

The included window installation kit is designed for easy setup in most sliding window types. The exhaust hose can extend from 30 cm to 150 cm.

1. **Install the Window Sealing Plate:** Adjust the window sealing plate to fit your window opening and secure it.
2. **Attach the Exhaust Hose to the Adapter:** Connect one end of the exhaust hose to the window kit adapter.
3. **Connect the Exhaust Hose to the Unit:** Attach the other end of the exhaust hose to the exhaust outlet on the back of the air conditioner unit. Ensure all connections are secure to prevent hot air from re-entering the room.

Applicable aux Fenêtres Coulissantes



The unit is designed for easy installation with sliding windows.

Facile à installer

Facile à adapter à différentes formes de fenêtres. Installation avec peu de effort.



Step-by-step guide for exhaust hose and window kit installation.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The control panel on top of the unit allows for direct operation. It features buttons for Power, Mode, Fan Speed, Timer, Temperature Up/Down, and Wi-Fi.



The intuitive control panel for easy operation.

5.2 Operating Modes

- **Cooling Mode:** Provides powerful cooling with 12,000 BTU capacity. Adjust temperature using the Up/Down buttons.
- **Dehumidifier Mode:** Removes up to 56 liters of moisture per day, helping to reduce humidity and improve air quality.
- **Fan Mode:** Circulates air without cooling. Choose from 3 fan speeds (Low, Medium, High).

Déshumidification indépendante de l'air

Avec la fonction puissante et indépendante fonction de déshumidification, vous n'aurez plus jamais à plus jamais se soucier des jours humides.



Select your preferred fan speed for optimal comfort.

5.3 Wi-Fi App Control

Download the free mobile application to control your air conditioner from anywhere. This allows you to adjust settings, change modes, and set schedules remotely.



Control your unit conveniently via the smart Wi-Fi app.

5.4 Timer Function

Use the 24-hour timer to schedule when the unit turns on or off, optimizing energy usage and ensuring comfort upon arrival.

5.5 Sleep Mode

Activate Sleep Mode for quieter operation and adjusted temperature settings during the night, ensuring undisturbed rest.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your air conditioner.

- **Cleaning the Air Filter:** The air filter should be cleaned every two weeks or more frequently depending on usage. Remove the filter, wash it with warm, soapy water, rinse thoroughly, and let it air dry completely before reinstalling.
- **Draining Water:** In dehumidifier mode or high humidity conditions, the unit will collect water. When the internal water tank is full, the unit will stop operating and indicate a full tank. Drain the water using the drain hose provided.
- **Cleaning the Unit Exterior:** Wipe the exterior with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Before long-term storage, drain all water from the unit, clean the filter, and store it in an upright position in a dry, cool place.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on	No power, power cord unplugged, full water tank.	Check power connection, drain water tank.
Insufficient cooling	Blocked air filter, open windows/doors, room too large, exhaust hose not properly installed.	Clean air filter, close windows/doors, ensure proper exhaust hose installation, consider room size.
Unit is noisy	Unit not on a flat surface, fan speed too high.	Ensure unit is on a level surface, reduce fan speed. (Note: Portable AC units typically generate 53-56 dB of noise).
Water leakage	Drain plug not properly sealed, unit tilted.	Check drain plug, ensure unit is level.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	LEADZM

Feature	Detail
Model Number	JHS-A032-12KR2/ B1-W
Cooling Capacity	12000 BTU
Dehumidification Capacity	56 Liters/day
Operating Modes	Cooling, Dehumidifier, Fan
Fan Speeds	3 (Low, Medium, High)
Control Methods	App, Push Button, Remote Control
Noise Level	53-56 Decibels
Voltage	220 Volts
Power Consumption	1350 Watts
Product Dimensions (D x W x H)	35.6 x 34.5 x 70.6 cm
Item Weight	25.5 Kilograms
Max Window Opening Width/Height	150 cm
Seasonal Energy Efficiency Ratio (SEER)	20.5
Energy Efficiency Class	A
Compressor Type	Rotary Scroll
Outdoor Unit Required	No
Country of Origin	China



Kühlleistung : 10000BTU/H(ASHRAE)

Stromzufuhr : 220V/60Hz

AC-Abdeckungsbereich (Sq.Ft.) : 350

Temperatur-Einstellbereich : 16°F-32°F

Produktgewicht : 23.59KG

Produktabmessungen : 38cm x 41cm x 88cm

Product dimensions and key specifications.

9. WARRANTY & SUPPORT

This LEADZM Portable Air Conditioner comes with a **Limited Warranty**. For specific terms and conditions, please refer to the warranty card included with your product or contact the retailer.

For technical support, troubleshooting assistance, or warranty claims, please contact the seller (VICTOPV) or the manufacturer (LEADZM) directly through their official channels. Please have your model number (JHS-A032-12KR2/ B1-W) and purchase information ready.