

[Manuals.plus](#) /

› [Portronics](#) /

› Portronics Toad Ergo 3 Ergonomic Wireless Mouse User Manual

Portronics POR-3032

Portronics Toad Ergo 3 Ergonomic Wireless Mouse User Manual

Model: POR-3032

INTRODUCTION

This manual provides detailed instructions for the Portronics Toad Ergo 3 Ergonomic Wireless Mouse. Designed for comfort and precision, this mouse features an ergonomic vertical grip, adjustable DPI, tri-mode connectivity, and customizable RGB lighting. Please read this manual thoroughly to ensure proper use and maintenance of your device.



Front view of the Portronics Toad Ergo 3 Ergonomic Wireless Mouse, showcasing its white finish and ergonomic design.

WHAT'S IN THE BOX

Verify that all the following items are included in your package:

- 1N Wireless Mouse
- 1N USB Receiver
- 1N Charging Cable (USB-C)
- 1N User Documentation

SETUP GUIDE

Charging the Mouse

The Portronics Toad Ergo 3 mouse comes with a built-in rechargeable battery. Before first use, or when the battery is low,

charge the mouse using the provided USB-C cable.

1. Connect the USB-C end of the charging cable to the charging port on the front of the mouse.
2. Connect the USB-A end of the charging cable to a USB power adapter (not included) or a computer's USB port.
3. The RGB lighting will indicate charging status. A full charge typically takes a few hours.

Rechargeable Built-in Battery

Long-Lasting, USB-Charging Convenience



Image showing the USB-C charging port on the Portronics Toad Ergo 3 mouse, highlighting its rechargeable battery feature.

Connectivity Modes

The Portronics Toad Ergo 3 supports tri-mode connectivity, allowing you to connect to up to three devices simultaneously via 2.4GHz wireless or dual Bluetooth 5.3.



The Portronics Toad Ergo 3 mouse shown next to a laptop, demonstrating its 2.4 GHz and Bluetooth dual wireless modes.

2.4GHz Wireless Connection

1. Locate the USB receiver, usually stored in a compartment on the underside of the mouse.
2. Plug the USB receiver into an available USB port on your computer.
3. Turn on the mouse using the power switch on the bottom. The mouse should automatically connect to the receiver.

Bluetooth Connection (BT1 / BT2)

1. Turn on the mouse using the power switch on the bottom.
2. Press the mode switch button (usually on the bottom or top of the mouse) to select either BT1 or BT2 mode. The indicator light will flash, indicating pairing mode.
3. On your device (computer, tablet, etc.), go to Bluetooth settings and search for new devices.
4. Select "Portronics Toad Ergo 3" from the list of available devices to pair.
5. Once paired, the indicator light will become solid.

Ergonomic Design

The Portronics Toad Ergo 3 features a vertical ergonomic design that promotes a natural handshake posture, reducing wrist and forearm strain during extended use. This design helps maintain a neutral wrist position, enhancing comfort.



Ergonomic Design

Comfortable grip for extended use

A hand demonstrating the natural handshake grip supported by the ergonomic design of the Portronics Toad Ergo 3 mouse.

Ergonomic Mouse



Traditional Mouse



Visual comparison illustrating the difference in wrist posture between an ergonomic vertical mouse and a traditional flat mouse.

Button Functions

The mouse is equipped with 6 responsive buttons for efficient navigation and control:

6 Buttons Navigation

Better Navigation for efficiency and gaming

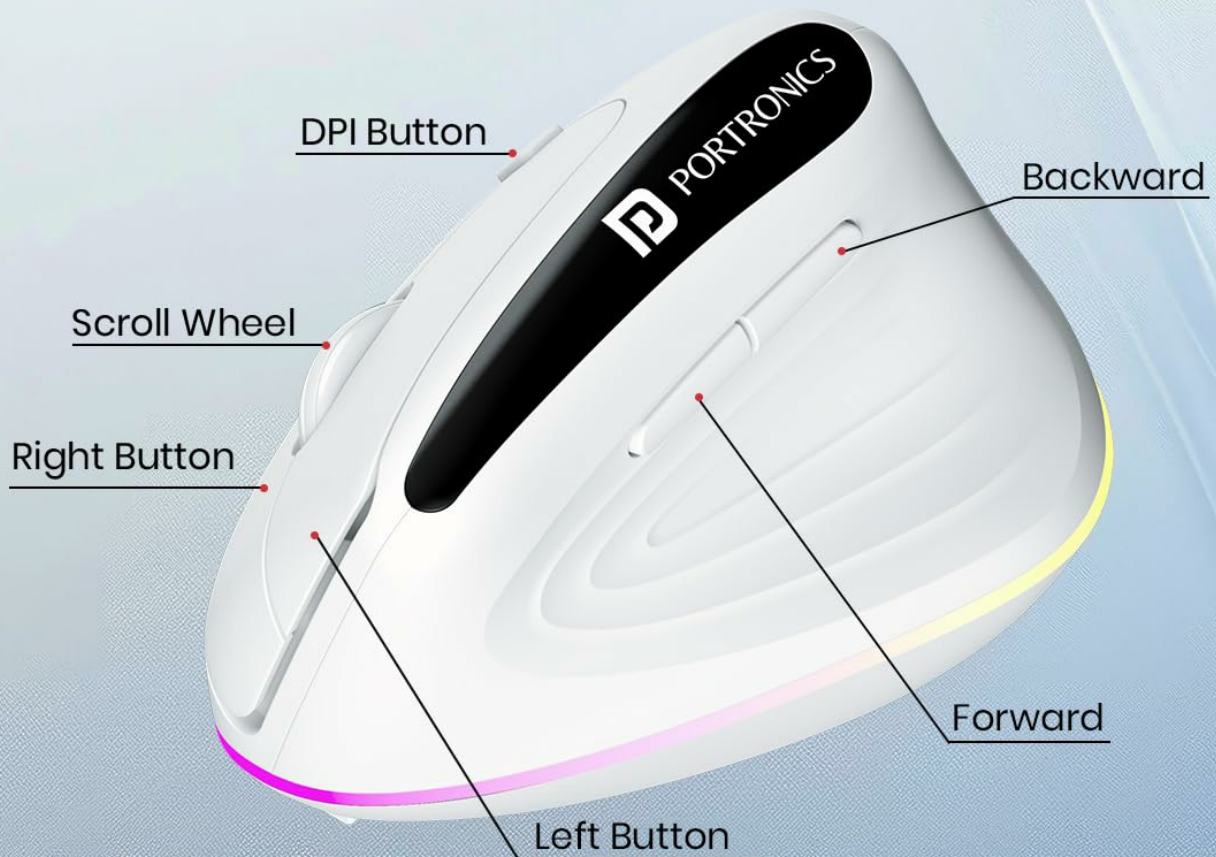


Diagram illustrating the placement and labeling of the six buttons on the Portronics Toad Ergo 3 mouse.



DPI Button



Scroll Wheel



Back & Forward



Wrist Support

Detailed close-up images of the DPI button, scroll wheel, side navigation buttons, and the wrist support area of the mouse.

- **Left-Click Button:** Standard primary click function.
- **Right-Click Button:** Standard secondary click function.
- **Scroll Wheel:** For vertical scrolling and middle-click function.
- **DPI Switch Button:** Adjusts cursor sensitivity (DPI).
- **Forward Button:** Navigates forward in web browsers or file explorers.
- **Backward Button:** Navigates backward in web browsers or file explorers.

Adjusting DPI (Sensitivity)

The mouse offers adjustable DPI levels up to 2400, allowing you to customize cursor speed and precision. Press the DPI switch button (located behind the scroll wheel) to cycle through available DPI settings (e.g., 1200, 1800, 2400 DPI).

Adjustable DPI upto 2400

Precision control with adjustable sensitivity



Visual representation of the adjustable DPI levels (1200, 1800, 2400) available on the Portronics Toad Ergo 3 mouse.

RGB Lighting

The Portronics Toad Ergo 3 features stylish multi-color RGB lighting at its base, adding an aesthetic element to your workspace. The lighting automatically activates when the mouse is in use and can indicate charging status or connectivity mode.



The Portronics Toad Ergo 3 mouse displayed on a desk, showcasing its vibrant RGB lighting feature.

MAINTENANCE

To ensure the longevity and optimal performance of your Portronics Toad Ergo 3 mouse, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the surface of the mouse. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, solvents, or abrasive cleaners.
- **Sensor Care:** Keep the optical sensor on the bottom of the mouse clean and free from dust or debris to ensure accurate tracking.
- **Battery Care:** To preserve battery life, avoid fully discharging the battery frequently. Charge the mouse when the low battery indicator appears. If storing the mouse for an extended period, charge it to about 50% before storage.
- **Storage:** Store the mouse in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Portronics Toad Ergo 3 mouse, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mouse not responding	Low battery; Incorrect connectivity mode; USB receiver not connected (2.4GHz); Bluetooth not paired.	Charge the mouse; Ensure correct mode (2.4GHz, BT1, BT2) is selected; Re-insert USB receiver; Re-pair Bluetooth.
Cursor movement is erratic or jumpy	Dirty optical sensor; Using mouse on an unsuitable surface; Low battery.	Clean the optical sensor; Use a mouse pad or a smooth, non-reflective surface; Charge the mouse.
Cannot connect via Bluetooth	Mouse not in pairing mode; Device's Bluetooth is off; Interference.	Ensure mouse is in BT1/BT2 pairing mode (flashing light); Turn on Bluetooth on your device; Move closer to the device; Try pairing with another device.
RGB lighting not working	Mouse is off or in power-saving mode; Battery is critically low.	Turn on the mouse; Charge the mouse fully.
Buttons not responding	Software glitch; Physical obstruction.	Restart the mouse and your computer; Check for any physical obstructions under the buttons.

PRODUCT SPECIFICATIONS

Brand	Portronics
Model Name	Toad Ergo 3
Item Model Number	POR-3032
Colour	White
Connectivity Technology	2.4 GHz Wireless, Bluetooth 5.3 (Dual Mode)
Movement Detection Technology	Optical
DPI Levels	Up to 2400 DPI (Adjustable)
Number of Buttons	6
Power Source	Battery Powered (Rechargeable Built-in Battery)
Battery Type	Lithium Battery (800 mAh)
Charging Port	USB-C
Operating System Compatibility	Windows (10/8.1/8/7), macOS (Ventura, Monterey, Big Sur, Catalina, Mojave)
Product Dimensions	11.8 x 8.1 x 0.1 cm
Item Weight	150 g
Country of Origin	China

WARRANTY AND SUPPORT

The Portronics Toad Ergo 3 Ergonomic Wireless Mouse comes with a **12-month manufacturer warranty** from the date of purchase. This warranty covers manufacturing defects and ensures peace of mind.

For warranty claims, technical support, or any inquiries, please contact Portronics customer service:

- **Email:** help@portronics.com
- **Phone:** +91 9555-245-245
- **Manufacturer/Importer Address:** Portronics Digital Private Limited, Ground Floor and First Floor, Property No. D 8 Upper Basement, Sector 8, Noida, Gautam Buddha Nagar, Uttar Pradesh, 201301.

Please retain your purchase receipt as proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question