

Angrox pour Philips TV

Angrox Universal Replacement Remote Control for Philips Smart 4K UHD Android TVs

Model: pour Philips TV

Brand: Angrox

INTRODUCTION

Welcome to your Angrox Universal Replacement Remote Control. This manual provides detailed instructions for setting up and operating your new remote, designed for seamless compatibility with various Philips Smart 4K UHD Android TVs. Please read this manual thoroughly to ensure optimal performance and longevity of your remote control.

1. SETUP

1.1 Battery Installation

The remote control requires two AAA alkaline batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

1.2 Initial Connection

This Angrox replacement remote control is designed for immediate use with compatible Philips Smart TVs. No programming or pairing is required. Simply insert the batteries, and the remote is ready to operate your television.



Image: Front, side, and back views of the Angrox Universal Replacement Remote Control. This image illustrates the physical design and battery compartment location.

2. OPERATING INSTRUCTIONS

2.1 Button Functions Overview

Familiarize yourself with the remote control's buttons and their primary functions.



Image: A detailed diagram illustrating each button on the Angrox remote control and its corresponding function.

Detailed Button Descriptions:

- **Standby/On (Power Button):** To switch the TV on or back to Standby.
- **APP Launcher:** Quickly launch the pictured app.
- **INFO:** To open or close programme info.
- **APPS:** To launch your apps page to display the list of apps that are pre-installed or installed by the user.
- **Quick Menu / MENU:** To open the Quick Menu with typical TV functions. Hold the MENU key to show the Gaming control bar when game signal detected and game mode enabled.
- **Search:** To open the Search tab on Home screen.
- **SOURCES:** To open or close the sources menu.
- **OK key:** To confirm a selection or setting. To open the channel list while watching TV.
- **Arrow/Navigation keys:** To navigate up, down, left or right.
- **Back:** To switch back to the previous channel you selected.
- **Home:** To open the Home menu.
- **TV Guide:** To open or close the TV Guide. Long press to open the channel list.

- **Colour keys (Red, Green, Yellow, Blue):** Direct selection of options. Blue key opens Help.
- **Volume +/-:** To adjust the volume level.
- **Channel +/-:** To switch to the next or previous channel in the channel list.
- **EXIT:** To switch back to watch TV or to stop an interactive TV application. When TV is on Standby mode, press the key to directly go to the last viewed TV source.
- **Mute:** To mute the sound or to restore it.
- **Number Keys (0-9):** To select a channel directly.
- **TEXT:** To open or close Text / Teletext.
- **Apps (Netflix, Prime Video, Rakuten TV, YouTube):** Quick access to dedicated streaming applications.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** For media playback.

2.2 Shortcut Buttons

The remote features dedicated shortcut buttons for popular streaming services and Ambilight control.



Image: The Angrox remote control with highlighted shortcut buttons for Prime Video, Ambilight, Netflix, Rakuten TV, and YouTube.

- **Prime Video:** Direct access to Amazon Prime Video.
- **Ambilight:** Control Philips Ambilight features.

- **Netflix:** Direct access to Netflix.
- **Rakuten TV:** Direct access to Rakuten TV.
- **YouTube:** Direct access to YouTube.

3. COMPATIBILITY

This Angrox replacement remote control is universally compatible with a wide range of Philips Smart TVs, including:



Image: Visual representation of the Angrox remote's compatibility with Philips 4K Ambilight TV, 4K Ultra HD TV, LED 4K TV, and OLED 4K TV.

- 4K Ambilight TV
- 4K Ultra HD TV
- LED 4K TV
- OLED 4K TV

It is designed to function with all Philips Smart TV models that utilize an infrared remote control.

4. PERFORMANCE FEATURES

Upgraded Philips TV Remote



0.2s Fast response



10m Transmitting distance



Image: Graphics indicating a 0.2-second fast response and a 10-meter transmitting distance for the remote control.

- **Fast Response:** Enjoy a quick response time of approximately 0.2 seconds for button presses.
- **Transmitting Distance:** Effective operating range up to 10 meters (approximately 33 feet).

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Care:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Replace batteries when the remote's response becomes sluggish or inconsistent.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

6.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with new AAA alkaline batteries.

- **Line of Sight:** Make sure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal.
- **Remote Sensor:** Ensure the TV's infrared sensor is not blocked or dirty.

6.2 Limited Functionality

- While this remote is broadly compatible, some specific advanced functions unique to certain original Philips remote models might not be replicated. Verify the button functions against the provided diagram.

6.3 Ambilight Functionality

Some user reviews indicate that Ambilight functionality might vary. If your Ambilight button does not work as expected, ensure your TV's Ambilight feature is enabled and configured correctly in your TV settings.

7. SPECIFICATIONS



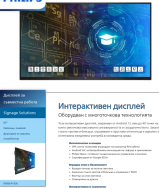



Feature	Detail
Brand	Angrox
Model	pour Philips TV
Compatible Devices	Philips Smart TV (4K Ambilight, 4K UHD, LED 4K, OLED 4K)
Special Feature	Universal
Connector Type	Infrared
Battery Type	2 x AAA Alkaline (not included)
Item Dimensions	22.7 x 6.2 x 2.4 cm
Item Weight	60 g
Color	Black

Note: Specifications are subject to change without prior notice.

8. WARRANTY AND SUPPORT

For product support or warranty inquiries, please contact your retailer or the manufacturer, Angrox, directly. Please refer to your purchase documentation for specific warranty terms and contact information.

Manufacturer: Angrox
ASIN: B0F83X2FQG

 <p>Quick start guide</p>	<p>Philips 5000 Series Android TV Quick Start Guide: Setup, Features, and Troubleshooting</p> <p>Comprehensive quick start guide for Philips 5000 Series Android TVs (models 55PFL5704, 5604, 5504, 50PFL5704, 5604). Covers initial setup, remote control usage, Google account integration, connectivity options, live TV, troubleshooting common issues, parental controls, and technical specifications.</p>
	<p>Philips 55BDL3650QE Màn hình EcoDesign 18/7 - Thông số kỹ thuật và Tính năng</p> <p>Khám phá màn hình kỹ thuật số Philips 55BDL3650QE EcoDesign 18/7 với hiệu suất 4K UHD, tiết kiệm năng lượng, Android 10, FailOver và các tính năng quản lý từ xa. Lý tưởng cho các giải pháp hiển thị thương mại.</p>
	<p>Philips 65BDL4152E Интерактивен дисплей за съвместна работа - Характеристики и спецификации</p> <p>Откройте интерактивный дисплей Philips 65BDL4152E с Android 13, 40-точков мультитач, OPS слот, сертификат Google EDLA и расширенная связность за совместни среди.</p>
	<p>Philips 55BDL3650QE: Pantalla Digital 4K UHD Ecológica para Señalización</p> <p>Descubra la pantalla digital Philips 55BDL3650QE, una solución de señalización 4K Ultra HD 18/7 con diseño ecológico, bajo consumo energético, tecnología Android 10 y funciones avanzadas para entornos comerciales.</p>
	<p>Philips OLED936 Series Quick Start Guide - Setup and Connections</p> <p>Comprehensive quick start guide for the Philips OLED936 series television. Learn how to unpack, assemble the stand, connect devices, and perform initial setup for your new TV.</p>
	<p>Philips 70PUS9006/12 Quick Start Guide</p> <p>Get started with your Philips 70PUS9006/12 television. This quick start guide provides essential information for setting up and using your new TV.</p>