



Manuals.plus /

› JOYMOR /

› JOYMOR 2-in-1 Wooden Baby Swing & Jumper Instruction Manual (Model B0F83Z7RLX)

JOYMOR B0F83Z7RLX

JOYMOR 2-in-1 Wooden Baby Swing & Jumper Instruction Manual

Model: B0F83Z7RLX | Brand: JOYMOR


1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use of the JOYMOR 2-in-1 Wooden Baby Swing & Jumper. Failure to follow these instructions may result in serious injury.

- **Age and Weight Limits:** This product is designed for toddlers aged 6 to 36 months, with a maximum weight capacity of 50 lbs (22.7 kg).
- **Adult Supervision Required:** Never leave a child unattended in the swing or jumper. Constant adult supervision is necessary.
- **Secure Placement:** Ensure the A-frame stand is placed on a flat, stable surface, both indoors and outdoors. Do not use on uneven ground.
- **Regular Inspection:** Before each use, inspect all components for wear, damage, or loose parts. Discontinue use immediately if any damage is found.
- **Assembly:** Only one adult is required for assembly. Ensure all parts are correctly installed and tightened according to the assembly instructions.
- **Material Safety:** The product is constructed from heavy-duty pine wood and high-strength ropes. All materials comply with sustainable eco-principles and multiple safety certifications.
- **Ergonomic Design:** The swing seat and bouncing harness are designed to support the baby's spinal curvature and promote gross motor skills.

EASY TO ASSEMBLY

01. Clear Instruction Manual

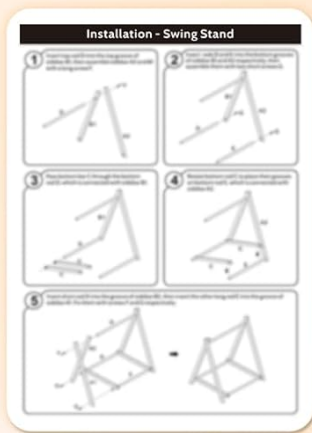

02. Simple Structure of The Frame

Image: Overview of safety features including the bouncer frame, stable triangle structure, and wood quality.

SAFE AND HIGH-QUALITY MATERIALS

 50lbs  6-36 Months



Image: Confirmation of safe and high-quality materials with relevant safety certifications.

2. PRODUCT OVERVIEW

The JOYMOR 2-in-1 Wooden Baby Swing & Jumper offers a versatile play solution for toddlers, combining a comfortable swing seat and an engaging jumper. Its A-frame design is foldable for convenience and made from durable spruce wood, suitable for both indoor and outdoor environments.

- **Dual Functionality:** Easily converts between a baby swing seat and a baby swing bouncer.
- **Montessori Principles:** Designed to enhance balance, physical coordination, and athletic abilities through play.
- **Portable Design:** The A-frame is foldable for compact storage and easy transport.
- **Durable Construction:** Made with heavy-duty pine wood for longevity.



Image: The complete JOYMOR 2-in-1 Wooden Baby Swing and Jumper set.

REPLACABLE SEAT



Image: Demonstration of the replaceable seat feature, highlighting the swing seat and bouncer options.

3. SETUP AND ASSEMBLY

The JOYMOR 2-in-1 Wooden Baby Swing & Jumper is designed for straightforward assembly. Follow these steps carefully to ensure proper setup.

3.1 Unpacking and Parts Identification

Carefully remove all components from the packaging. Verify that all parts listed in the instruction manual are present and undamaged. Refer to the included clear instruction manual for a detailed parts list and assembly diagrams.

EASY TO STORE

01. Multiple Uses

Can Be Used as Kids Clothes Rack



02. Foldable Frame

Can Be Folded for Storage

Image: All components laid out for assembly, alongside the instruction manual.

3.2 A-Frame Assembly

1. Connect the wooden bars to form the A-frame structure. Ensure all connections are secure.
2. Insert and tighten all screws as indicated in the assembly manual. Do not overtighten.
3. Verify the frame is stable and all joints are firm before proceeding.

3.3 Swing Seat / Jumper Attachment

1. Choose either the swing seat or the jumper attachment.
2. Carefully attach the chosen accessory to the top bar of the A-frame using the provided ropes/hooks. Ensure the attachment is centered and securely fastened.
3. Double-check all knots and connections to confirm they are tight and will not loosen during use.

4. OPERATING INSTRUCTIONS

This section provides guidance on how to safely use the JOYMOR 2-in-1 Wooden Baby Swing & Jumper.

4.1 Using the Baby Swing Seat

- Gently place your child into the swing seat, ensuring they are seated comfortably and securely.
- Always use the safety harness or restraint system if applicable, ensuring it is snug but not restrictive.
- Initiate swinging motion gently. Avoid excessive force or high swinging.
- Maintain constant supervision while the child is in the swing.

4.2 Using the Baby Jumper

- Ensure the jumper attachment is securely fastened to the A-frame.
- Carefully place your child into the jumper harness, ensuring their legs are positioned correctly and the harness is secure around their torso.
- Adjust the height of the jumper so that the child's feet can comfortably touch the ground or a firm surface, allowing for bouncing motion.
- Supervise the child at all times during jumper use.

4.3 Indoor and Outdoor Use

The JOYMOR swing and jumper is suitable for both indoor and outdoor environments. When using outdoors, ensure the area is clear of hazards and the stand is on a stable, level surface. Avoid prolonged exposure to harsh weather conditions to preserve the wood and fabric components.



JOYMOR



Image: The swing being used both indoors and outdoors.

5. MAINTENANCE

Proper maintenance will extend the life and ensure the safety of your JOYMOR 2-in-1 Wooden Baby Swing & Jumper.

- **Cleaning:** Wipe wooden parts with a damp cloth and mild soap. Dry immediately. Fabric components (swing seat, jumper harness) can be hand-washed with mild detergent and air-dried. Do not use harsh chemicals or abrasive cleaners.
- **Inspection:** Regularly check all screws, bolts, ropes, and wooden joints for tightness and wear. Tighten any loose fasteners. Inspect ropes for fraying and wood for splinters or cracks.
- **Storage:** The A-frame is foldable for compact storage. When not in use, especially for extended periods or during inclement weather, fold the frame and store it in a dry, protected area to prevent damage. The folded frame can also be used as a children's clothes rack.

JOYMOR



Image: The foldable design of the A-frame, illustrating its use as a clothes rack and for compact storage.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your JOYMOR 2-in-1 Wooden Baby Swing & Jumper.

- **Instability of Frame:** Ensure all screws are fully tightened and the frame is placed on a completely flat surface. Re-check assembly steps.
- **Swing/Jumper Not Level:** Verify that the ropes are adjusted evenly and securely attached to the top bar.
- **Parts Not Fitting:** Double-check the assembly manual to ensure you are using the correct parts for each step and that they are oriented correctly. Do not force parts together.
- **Squeaking Noises:** Inspect joints for friction. A small amount of food-grade lubricant can be applied to wooden joints if necessary, ensuring it does not come into contact with the child.

If you encounter issues not listed here or require further assistance, please contact JOYMOR customer support.

7. SPECIFICATIONS

Brand	JOYMOR
Model	B0F83Z7RLX
Color	Beige
Product Dimensions (D x W x H)	31.1" x 36.6" x 47.2" (79cm x 93cm x 120cm)
Frame Material	Wood (Pine)
Finish Type	Unfinished
Assembly Required	Yes
Recommended Age	6-36 Months
Weight Capacity	50 lbs (22.7 kg)



Image: Product dimensions for the A-frame baby swing.

8. WARRANTY AND SUPPORT

JOYMOR is committed to providing high-quality products. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims.

For product support, missing parts, or any questions regarding the JOYMOR 2-in-1 Wooden Baby Swing & Jumper, please contact JOYMOR customer service through the retailer where the product was purchased or visit the official JOYMOR website for contact information.