

Ktaxon BHC002

Ktaxon Baby High Chair Instruction Manual

Model: BHC002

1. SAFETY INFORMATION

Please read all instructions carefully before assembly and use of the Ktaxon Baby High Chair. Failure to follow these instructions could result in serious injury or death.

- **Always use the 5-point safety harness** to secure your child in the high chair.
- Never leave your child unattended in the high chair.
- Ensure all parts are correctly assembled and securely fastened before each use.
- Do not use the high chair if any components are broken, torn, or missing.
- The high chair is suitable for children aged **6 to 36 months** and weighing up to **33 pounds (15 kg)**.
- Keep children away from the product during assembly and disassembly.
- Place the high chair on a flat, stable surface. Avoid placing it near stairs, windows, or heat sources.
- Do not allow children to climb on or play with the high chair.

2. PRODUCT OVERVIEW

The Ktaxon Baby High Chair (Model BHC002) is a versatile 6-in-1 feeding and seating solution designed for comfort, safety, and convenience. It adapts to your child's growth and various needs.



Image 2.1: Ktaxon Baby High Chair in its primary high chair configuration, with additional views of its versatile modes.

Key Features:

- **6-in-1 Convertible Design:** Functions as a high chair with/without wheels, toddler chair with/without wheels, and rocking chair with/without wheels.
- **Adjustable Backrest:** 3 recline positions for feeding, resting, or playing.
- **Removable Dual-Layer Tray:** Adjustable to 3 positions, easy to clean, suitable for eating and playing.
- **5-Point Safety Harness:** Ensures child security.
- **Soft PU Seat Pad:** Removable, machine-washable, and ergonomically designed for comfort.
- **Sturdy Construction:** Heavy-duty steel frame with anti-slip footrests or locking casters.
- **Space-Saving:** Foldable design for easy storage and portability.
- **Detachable Storage Bag:** Convenient for storing essentials.

6-IN-1 CONVERTIBLE DESIGN



Image 2.2: Illustration of the 6-in-1 convertible design, showcasing various seating modes.

3. SETUP AND ASSEMBLY

The Ktaxon Baby High Chair requires assembly. Please follow these general steps. Refer to the included assembly diagrams for detailed visual instructions.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list in your physical manual.
2. **Assemble Legs:** Attach the leg frames to the main seat unit. Ensure they click securely into place. Depending on the desired configuration (high chair, toddler chair, rocking chair), select the appropriate leg extensions or rocking bases.
3. **Attach Footrest:** Slide the footrest into the designated slots on the leg frame until it locks.
4. **Install Seat Pad:** Place the soft PU seat pad onto the seat shell, ensuring it is properly aligned and secured.
5. **Attach Tray:** Slide the tray onto the armrests. Ensure it is securely latched.
6. **Final Check:** Before first use, double-check that all connections are firm and secure.

4. OPERATING INSTRUCTIONS

4.1 Adjusting the Backrest

The backrest can be adjusted to three different recline positions.

1. Locate the backrest adjustment button on the rear of the seat.
2. Press and hold the button.
3. Gently push or pull the backrest to the desired position.
4. Release the button to lock the backrest in place. Ensure it is securely locked before placing your child in the chair.



Image 4.1: Adjusting the 3-position recline backrest.

4.2 Using and Adjusting the Tray

The high chair features a removable dual-layer tray that can be adjusted to three positions.

1. **Attaching/Removing the Tray:** Press the release buttons on both sides of the tray and slide it onto or off the armrests.
2. **Adjusting Tray Position:** With the tray attached, press the adjustment buttons (usually located underneath the tray or on the armrests) and slide the tray forward or backward to one of the three positions. Release the buttons to lock.

3. The top layer of the tray is detachable for easy cleaning.



Image 4.2: Demonstrating the 3-position adjustable tray.

4.3 Securing Your Child with the 5-Point Harness

Always use the 5-point safety harness to keep your child secure.

1. Place your child in the seat.
2. Bring the shoulder straps over your child's shoulders and the waist straps around their waist.
3. Connect the shoulder straps to the waist straps, then insert the buckles into the central buckle until they click.
4. Adjust the straps to ensure a snug fit, leaving enough room for one finger between the strap and your child.



Image 4.3: Key safety features including the 5-point safety harness.

4.4 Converting Between Modes (6-in-1 Design)

The high chair can be configured into various modes. Refer to the assembly instructions for specific steps on changing leg configurations (e.g., adding/removing wheels, attaching rocking bases, adjusting leg height).

- **High Chair:** Standard configuration for feeding at table height.
- **Toddler Chair:** Lower the seat for independent seating.
- **Rocking Chair:** Attach the rocking bases for gentle soothing.
- **With/Without Wheels:** Attach or remove the locking casters for mobility or stationary use.

4.5 Folding for Storage and Portability

The high chair is designed to fold for compact storage and easy transport.

1. Remove the tray and any accessories.
2. Ensure the backrest is in its most upright position.
3. Locate the folding mechanisms (refer to your physical manual for exact locations).
4. Engage the folding mechanisms and gently collapse the chair.

5. Ensure the chair is fully folded and locked in the folded position before moving or storing.

5. MAINTENANCE

5.1 Cleaning

Regular cleaning will help maintain the hygiene and appearance of your high chair.

- **Tray:** The dual-layer plastic tray is wipe-clean and the top layer is removable for easy washing. It can be hand-washed with mild soap and water or placed in the dishwasher (top rack recommended).
- **Seat Pad:** The soft PU seat pad is removable and machine-washable. Use a gentle cycle with cold water and mild detergent. Air dry only; do not tumble dry.
- **Frame and Other Parts:** Wipe down the metal frame and plastic components with a damp cloth and mild soap. Rinse thoroughly and dry completely.
- Avoid using abrasive cleaners or harsh chemicals, as these can damage the materials.



Image 5.1: Demonstrating the easy-to-clean features of the high chair.

5.2 Storage

When not in use, store the high chair in a clean, dry place away from direct sunlight and extreme

temperatures.

6. TROUBLESHOOTING

If you encounter any issues with your Ktaxon Baby High Chair, please refer to the following common solutions:

- **Chair feels unstable:** Ensure all leg connections are fully engaged and locked. Check that the anti-slip footrests are properly positioned on a flat surface.
- **Backrest not reclining/locking:** Verify that the adjustment button is fully pressed during adjustment and released completely to lock into one of the three positions.
- **Tray difficult to attach/remove:** Ensure the release buttons are fully depressed when sliding the tray. Check for any obstructions in the tray tracks.
- **Harness not securing:** Make sure all five points of the harness are correctly buckled and adjusted snugly to your child's size.
- **Folding mechanism stuck:** Ensure the tray is removed and the backrest is upright. Check for any debris or obstructions in the folding joints. Do not force the mechanism.

If problems persist, please contact Ktaxon customer support for assistance.

7. SPECIFICATIONS

Feature	Specification
Model Number	BHC002
Product Dimensions (L x W x H)	28.35 x 23.62 x 36.22 inches (72 x 60 x 92 cm)
Item Weight	7.72 pounds (3.5 kg)
Maximum Weight Recommendation	33 pounds (15 kg)
Suitable Age	6 - 36 Months
Material Type	Metal (Iron Pipe), Plastic (PP), PU Leather
Material Composition	39% Plastic, 22% Iron Pipe
Batteries Required	No
Portability	Yes (Foldable)

Suitable Age : 6-36 Months

Weight Capacity : 33 LBS



Image 7.1: Product dimensions in both assembled and folded states.

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact the seller directly. Keep your proof of purchase for any warranty claims.

If you have questions regarding assembly, operation, or maintenance that are not covered in this manual, please reach out to Ktaxon customer service.