

[Manuals.plus](#) /

› [AAOBOSI](#) /

› AOBOSI Slow Juicer 135MM (Model KS-CE-1907B-WT) Instruction Manual

AAOBOSI KS-CE-1907B-WT

AOBOSI Slow Juicer 135MM Instruction Manual

MODEL: KS-CE-1907B-WT

Brand: AAOBOSI

1. Introduction

Thank you for choosing the AOBOSI Slow Juicer. This appliance is designed to extract juice from various fruits and vegetables efficiently, preserving nutrients through its slow masticating process. Featuring a 135mm wide feed chute, a silent 220W copper motor, and BPA-free materials, it offers a convenient and healthy juicing experience. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Image: The AOBOSI Slow Juicer in white, showcasing its design and a freshly prepared glass of juice.

2. Safety Instructions

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Always ensure the juicer is correctly assembled and the safety lock is engaged before operation.
- Do not insert fingers or other objects into the feed chute while the juicer is operating. Use the food pusher provided.
- The appliance features an automatic safety stop function: the machine will stop if the lid is opened during operation.
- The juicer is equipped with overheat protection. If the motor overheats, the appliance will automatically shut off. Allow it to cool down before resuming use.
- All food-contact parts are made from BPA-free materials.
- Keep the appliance out of reach of children.

- Do not immerse the motor base in water or other liquids.
- Unplug the juicer from the power outlet before cleaning or when not in use.



Image: Illustration of the automatic safety sensors, which prevent operation if the lid is not properly closed.



Image: Visual guide to the safety lock mechanism, which prevents accidental startup.

3. Product Components

The AOBOSI Slow Juicer consists of several key components:

- **Motor Base:** Contains the powerful 220W motor and control panel.
- **Juicing Bowl:** Collects the extracted juice.
- **Auger (Masticating Screw):** Slowly presses and crushes ingredients.
- **Filter Basket:** Separates juice from pulp, featuring a triple filter system for high yield.
- **Feed Chute Assembly:** Includes the wide 135mm opening and lid.
- **Pulp Container:** Collects the dry pulp.
- **Juice Container:** Collects the fresh juice.

- **Cleaning Brush:** For easy cleaning of the filter and other parts.
- **Food Pusher:** To safely guide ingredients into the feed chute.

Extracteur de jus à mastication pour usage domestique

Taille adaptée aux cuisines et aux appartements



Image: An exploded diagram illustrating the main parts of the juicer and their relative positions.

4. Setup

Follow these steps to assemble your AOBOSI Slow Juicer:

1. **Step 1:** Place the juicing bowl onto the motor base, ensuring it is securely seated.
2. **Step 2:** Insert the filter basket into the juicing bowl, then place the auger (masticating screw) inside the filter basket.
3. **Step 3:** Attach the feed chute assembly onto the juicing bowl. Ensure the lid is open during installation.
4. **Step 4:** Rotate the feed chute assembly clockwise until the locking symbol aligns, securing it in place. You should

hear a click.

Before first use, wash all detachable parts (juicing bowl, auger, filter, feed chute, containers) with warm soapy water, rinse thoroughly, and dry.

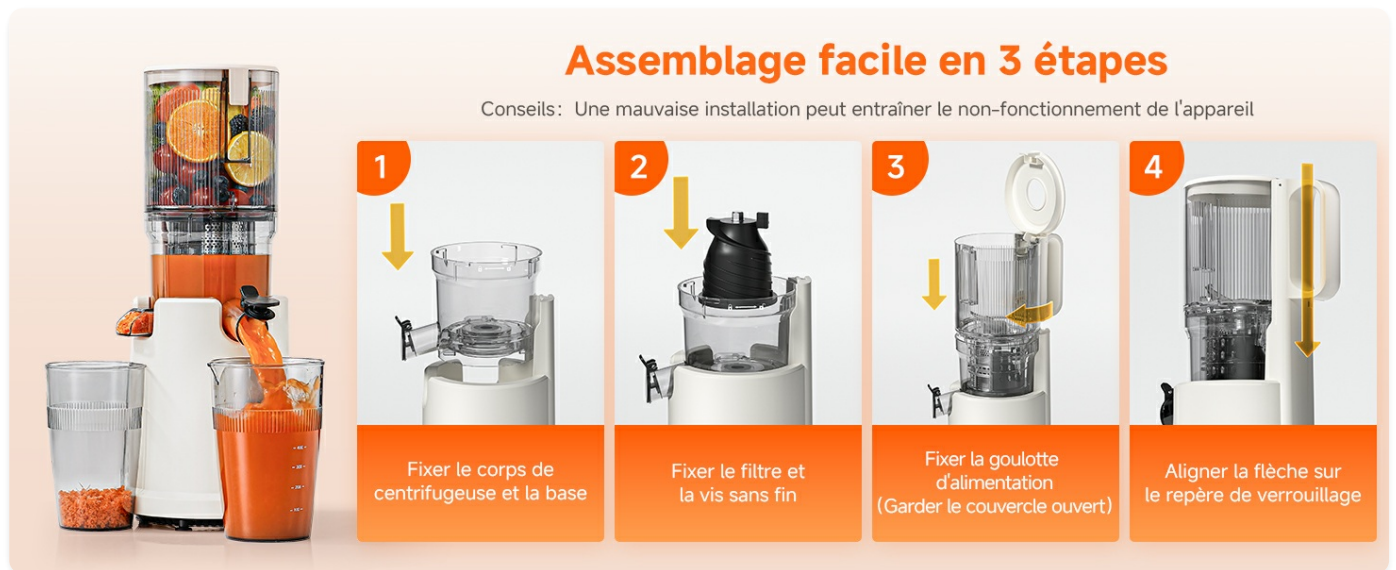


Image: Step-by-step instructions for assembling the juicer, highlighting the locking mechanism.

5. Operating Instructions

Operating your AOBOSI Slow Juicer is straightforward:

1. **Preparation:** Wash fruits and vegetables thoroughly. For most items, pre-cutting is not necessary due to the 135mm wide feed chute. For very fibrous ingredients or those with hard seeds/pits, it is recommended to remove them or cut into smaller pieces.
2. **Placement:** Place the pulp container under the pulp outlet and the juice container under the juice outlet.
3. **Power On:** Plug in the juicer and press the 'ON' button.
4. **Juicing:** Gently feed ingredients into the wide feed chute. Use the food pusher only if necessary to guide ingredients. Do not force ingredients into the chute.
5. **Modes:** The juicer features 'Soft' and 'Hard' modes to optimize extraction for different types of produce. Select the appropriate mode for your ingredients.
6. **Reverse Function:** If ingredients get clogged, press and hold the 'R' (Reverse) button to clear the blockage. Release the button to resume normal operation.
7. **Completion:** Once juicing is complete, press the 'OFF' button and unplug the appliance.



135MM

Goulotte d'alimentation plus large et plus grande

Accepte les fruits et légumes entiers – sans découpe

Image: The 135mm wide feed chute, demonstrating its capacity for whole fruits and vegetables.

Technologie de pressage lent

90 RPM Slow Juicing - Pour un jus riche en nutriments



Pommes



poires



carottes



betteraves



céleri



gingembre



kale



6. Maintenance and Cleaning

Regular cleaning ensures the longevity and hygiene of your juicer:

1. **Disassembly:** Ensure the juicer is unplugged. Turn the feed chute assembly counter-clockwise to unlock and remove it. Then, remove the auger, filter basket, and juicing bowl from the motor base.
2. **Rinsing:** Rinse all detachable parts under running water immediately after use to prevent pulp from drying and sticking.
3. **Washing:** Use the included cleaning brush and warm soapy water to thoroughly clean the filter basket and other components. Pay special attention to the mesh of the filter.
4. **Drying:** Dry all parts completely before reassembling or storing.
5. **Motor Base:** Wipe the motor base with a damp cloth. Never immerse the motor base in water.


Note: The juicer parts are not dishwasher safe. Hand washing is recommended.

Démontage et nettoyage faciles en 3 étapes

Conseil : Activez la fonction de marche arrière lorsque les aliments se bouchent et laissez le couvercle ouvert pour faciliter le démontage



Ouvrez le couvercle et faites tourner la goulotte d'alimentation

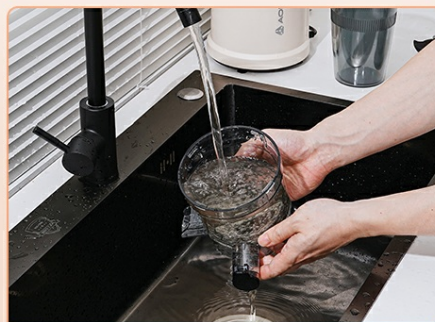

Laver facilement à l'eau



Équipé d'une brosse

Image: Step-by-step guide for easy disassembly and cleaning of the juicer components.

7. Troubleshooting

If you encounter any issues with your AOBOSI Slow Juicer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; parts not assembled correctly; safety lock not engaged; overheat protection activated.	Check power connection; reassemble all parts ensuring the safety lock is engaged; allow unit to cool down if overheated.
Ingredients are clogged.	Too many ingredients at once; fibrous ingredients causing blockage.	Press and hold the 'R' (Reverse) button to clear the blockage. Feed ingredients slowly.

Problem	Possible Cause	Solution
Low juice yield or wet pulp.	Filter clogged; ingredients too soft or too hard for current mode; improper assembly.	Clean the filter thoroughly; ensure correct mode (Soft/Hard) is selected; check assembly.
Excessive noise during operation.	Parts not assembled correctly; foreign object inside.	Disassemble and reassemble all parts correctly; check for any foreign objects.

8. Specifications

Feature	Detail
Brand	AAOBOSI
Model Number	KS-CE-1907B-WT
Color	White
Product Dimensions (L x W x H)	38P x 34I x 19.5H centimeters
Material	Stainless Steel
Recommended Uses	Fruits, Vegetables, Leafy Greens, Nuts, Ginger
Capacity	1.5 Liters
Wattage	200 Watts
Power Source	Corded Electric
Voltage	220 Volts (AC)
Number of Speeds	1
Blade Material	Stainless Steel
Dishwasher Safe	No
Special Features	Whole fruit processing, Cold press technology, Reverse function, Automatic safety function

9. Warranty and Support

Your AOBOSI Slow Juicer comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the reliable quality of our product.

In addition to the warranty, our products benefit from **lifetime support and excellent technical service**. If you have any questions, require assistance with troubleshooting, or need spare parts, please contact our customer support team. We are committed to providing prompt and helpful service to ensure your satisfaction.

For support, please refer to the contact information provided on the product packaging or our official website.

© 2026 AAOBOSI. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question