

[Manuals.plus](#) /

› [Mocagen](#) /

› Mocagen MC22 Mobile Gaming Controller User Manual

Mocagen MC22

Mocagen MC22 Mobile Gaming Controller User Manual

Model: MC22

Brand: Mocagen

1. PRODUCT INTRODUCTION

The Mocagen MC22 Mobile Gaming Controller is designed to enhance your mobile gaming experience on both iPhone and Android devices. It features Hall Effect joysticks and non-linear triggers for precise control, programmable back buttons, dynamic lighting, and a turbo mode for rapid-fire actions. The ergonomic design ensures comfort during extended play sessions, and its stretchable mechanism accommodates phones with cases, fitting devices from 4 to 8.1 inches.



MOGAM

Image: The Mocagen MC22 controller with a smartphone inserted, showcasing its design and compatibility with various gaming platforms.

2. PACKAGE CONTENTS

Verify that all items are present in your product packaging:

- Mocagen MC22 Mobile Gaming Controller
- USB-C Charging Cable
- Carrying Pouch
- User Manual

3. SETUP AND CONNECTION

3.1 Attaching Your Phone

The controller features a stretchable design that accommodates smartphones between 4 and 8.1 inches, even with a

phone case attached. Simply pull the two sides of the controller apart and carefully place your phone into the central slot. Ensure the phone is securely seated.



Image: A visual guide demonstrating how to insert a smartphone into the Mocagen MC22 controller, emphasizing its compatibility with various phone sizes and cases.

3.2 Bluetooth Connection

1. Ensure your smartphone's Bluetooth is turned on.
2. Press and hold the **HOME** button on the controller. The LED4 indicator will flash rapidly, indicating pairing mode.
3. On your phone, search for Bluetooth devices. For iOS, find "DUALSHOCK 4 Wireless Controller". For Android, find "Wireless Controller".

4. Select the controller to connect. Once successfully paired, LED4 will remain steadily lit.

Your browser does not support the video tag.

Video: This video demonstrates the unboxing, phone attachment, and initial setup of the Mocagen MC22 controller, including connecting it to a smartphone via Bluetooth and showcasing gameplay.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To power on: Press the **HOME** button.
- To power off: Press and hold the **HOME** button for approximately 5 seconds until the controller powers down.

4.2 Programmable Buttons & Turbo Mode

The MC22 features two programmable back buttons (MR/ML) that allow you to assign complex command combinations for quicker execution in games. Additionally, the adjustable Turbo function provides rapid-fire capabilities, with settings for 5, 12, or 20 presses per second.



Image: The rear view of the Mocagen MC22 controller, illustrating the programmable MR and ML back buttons and their use for mapping game combos.

AUTO & MANUAL TURBO

Auto/manual modes, 3 adjustable speeds for lightning- fast attacks that gets you one step closer to victory !



Image: A close-up of the Mocagen MC22 controller demonstrating the Auto & Manual Turbo feature, with options for 5, 12, or 20 shots per second.

4.3 Vibration Feedback

The controller includes dual vibration motors that provide tactile feedback, enhancing immersion during gameplay by simulating in-game actions like hits and explosions.

4.4 Dynamic Lighting

Dynamic multi-color lighting on the joysticks and buttons enhances the gaming atmosphere, providing visual feedback and a stylish appearance.

2 Hall Effect Joysticks



No Drift, No Touch



0 Deadzone

2 Analog Triggers



<0.1mm Response



256-Level Precision



Image: A detailed view of the Mocagen MC22 controller, emphasizing the Hall Effect Joysticks and Analog Triggers, both featuring dynamic lighting effects.

4.5 Multi-Platform Compatibility

The Mocagen MC22 controller supports a wide range of cloud and mobile handheld games, including compatibility with services like Xbox Game Pass, Steam Link, and GeForce NOW. It is designed for use with native-supported controller games and various gaming platforms (excluding PS Remote Play).



Image: The Mocagen MC22 controller displaying its broad compatibility with different gaming platforms and cloud streaming services.

5. MAINTENANCE

5.1 Charging

The controller is equipped with a long-lasting battery that can be fully charged within 2 hours, providing approximately 15 hours of gameplay. Use the provided USB-C cable to charge the device. Note: The controller cannot directly charge your phone while in use.

5.2 Cleaning

To clean the controller, use a soft, dry cloth. Avoid using harsh chemicals or abrasive materials that could damage the surface or internal components.

6. TROUBLESHOOTING

- **Controller not connecting:** Ensure Bluetooth is enabled on your phone and the controller is in pairing mode (LED4 flashing rapidly). Try forgetting the device in your phone's Bluetooth settings and re-pairing.
- **Input lag or unresponsiveness:** Ensure the controller is fully charged. Move closer to your device to minimize interference.
- **Buttons not working as expected:** Verify that the game you are playing supports external controllers. Some games may require specific in-game settings adjustments.
- **Vibration not working:** Check in-game settings to ensure vibration feedback is enabled.

7. SPECIFICATIONS

Feature	Detail
Model	MC22
Compatibility	iPhone (4-8.1 inch devices), Android (4-8.1 inch devices)
Connection	Bluetooth
Joysticks	Hall Effect, no drift, no wear
Triggers	Analog, non-linear
Programmable Buttons	2 back buttons (MR/ML)
Turbo Function	Adjustable (5/12/20 presses per second)
Vibration Feedback	Dual motors
Lighting	Dynamic multi-color LED
Charging Port	USB-C
Charging Time	Approx. 2 hours
Play Time	Approx. 15 hours
Dimensions (Package)	9.49 x 4.57 x 2.52 inches
Item Weight	13.12 ounces
Manufacturer	Mocagen

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official Mocagen website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question