

[Manuals.plus](#) /

> [eboboin](#) /

> User Manual for eboboin Multi-Functional Beard Trimmer Kit

eboboin WL600

User Manual for eboboin Multi-Functional Beard Trimmer Kit

Model: WL600

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- This appliance is intended for household use only.
- Do not immerse the charging base or power adapter in water. The trimmer unit itself is IPX7 waterproof and can be rinsed under water.
- Keep the appliance away from children.
- Do not use the appliance if the blades are damaged or broken, as this may cause injury.
- Ensure the appliance is fully charged before first use to optimize battery life.
- Only use the provided USB charging cable.
- Avoid using the trimmer on irritated or broken skin.

PRODUCT OVERVIEW

Package Contents

- Main Trimmer Unit
- Full-Size Trimmer Head
- Precision Trimmer Head
- Design Trimmer Head
- Micro Shaver Head
- Body Hair Trimmer Head
- Nose/Ear Trimmer Head
- 5 Guide Combs (various lengths)
- Charging Stand Base
- USB Charging Cable

- Cleaning Brush
- Lubricating Oil
- User Manual

Component Identification

The eboboin Multi-Functional Beard Trimmer Kit includes a main cordless trimmer unit and six interchangeable heads designed for various grooming needs. The kit also features a convenient charging stand to keep all accessories organized.



Image: Complete eboboin Beard Trimmer Kit showing the main unit, various trimmer heads, guide combs, charging stand, USB cable, cleaning brush, and oil.

SETUP AND CHARGING

Initial Charge

Before first use, fully charge the trimmer for approximately 1.5 hours. A full charge provides up to 120 minutes of cordless operation.

1. Connect the USB charging cable to the charging port on the trimmer or the charging stand.
2. Plug the other end of the USB cable into a 5V USB power source (e.g., laptop, USB wall adapter,

power bank, car charger).

3. The indicator light on the trimmer will illuminate during charging and change color or turn off when fully charged.


CONVENIENT AND SAFE USB CHARGING

120
MINS
WORK TIMES

1.5
HOUR
FULL CHARGE

Adapter
Only 5V

Usb Cable
100-240V

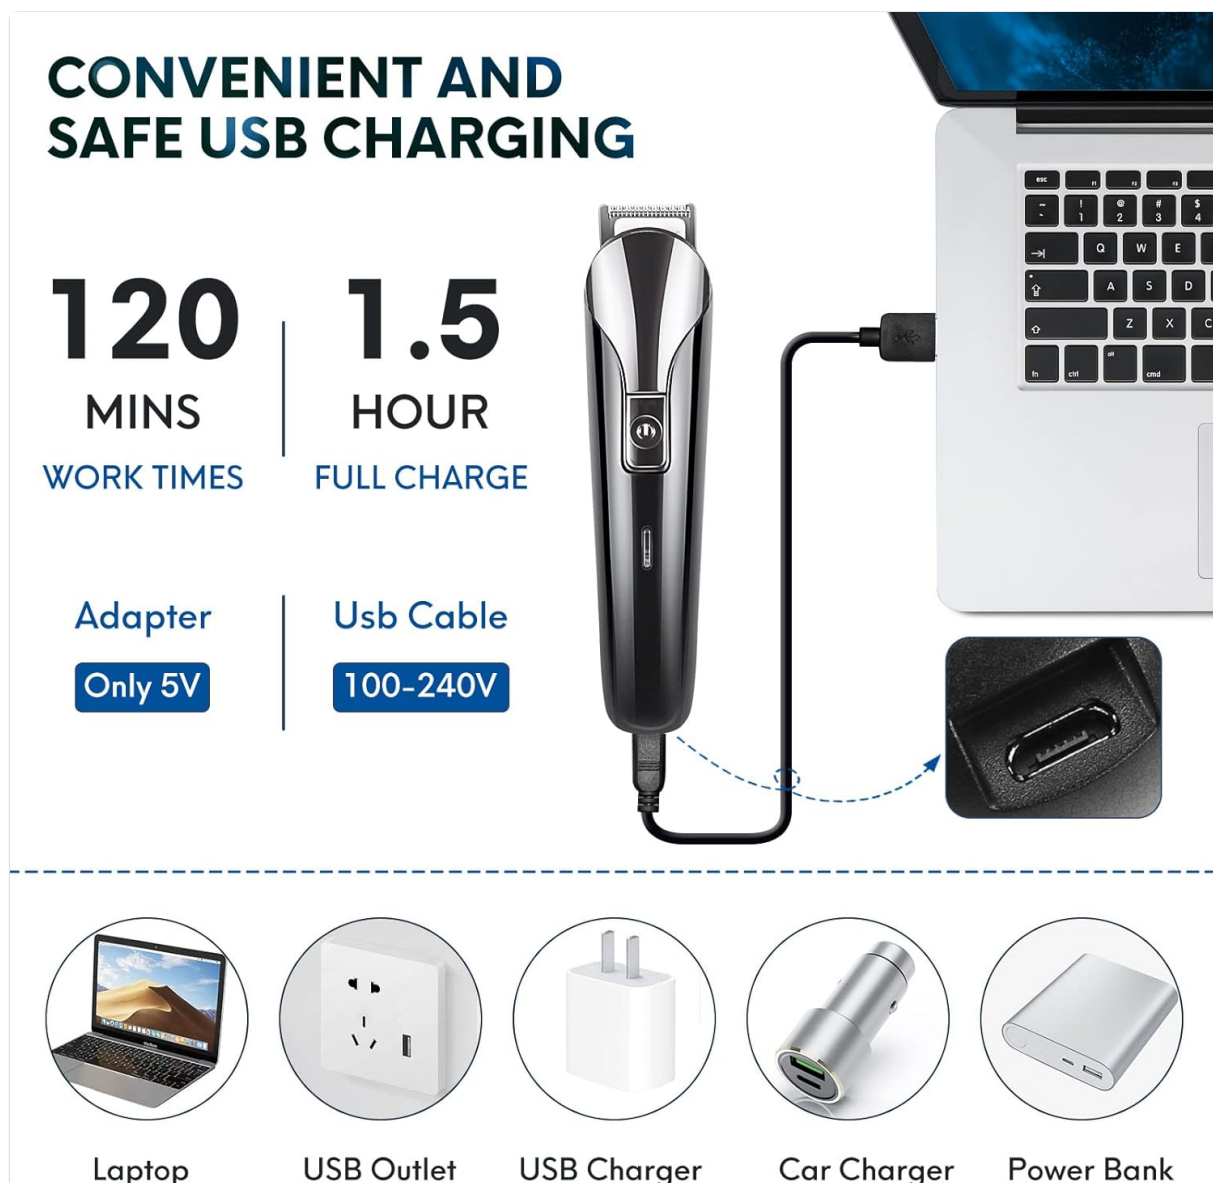

The illustration shows a black trimmer with a silver accent being charged via a USB cable. The cable is plugged into a laptop's USB port. A close-up inset shows the USB-A connector of the cable. Below the main illustration, five circular icons represent different power sources: a laptop, a USB outlet, a USB charger, a car charger, and a power bank.

Laptop USB Outlet USB Charger Car Charger Power Bank

Image: Illustration of the trimmer being charged via USB, showing compatibility with laptops, USB outlets, USB chargers, car chargers, and power banks.

Attaching and Detaching Trimmer Heads

The trimmer comes with multiple interchangeable heads for different grooming tasks.

1. **To Remove a Head:** Push the trimmer head upwards from the backside until it detaches. No need to unscrew.
2. **To Install a Head:** Insert the lug of the desired trimmer head into the guiding slot on the main unit. Push the back of the trimmer head towards the device until it clicks securely into place.

Attaching Guide Combs

Guide combs are used with certain trimmer heads to achieve desired hair lengths.

1. Slide the front part of the guide comb onto the blade teeth of the trimmer head.
2. Press down the center of the guard with your fingers until it snaps securely onto the trimmer head.



Image: Step-by-step visual guide demonstrating how to remove and install trimmer heads, and how to attach guide combs.

OPERATING INSTRUCTIONS

General Trimming Tips

- Ensure your skin and hair are clean and dry before trimming for best results.
- Always trim against the direction of hair growth for a closer cut.
- Use light pressure and smooth, even strokes.
- Start with a longer guide comb if you are unsure of the desired length, and gradually reduce the length.

Using Specific Trimmer Heads

Each head is designed for a specific grooming purpose:

- **Full-Size Trimmer:** Ideal for general beard trimming, hair cutting, and defining hairlines.
- **Precision Trimmer:** For detailed styling, sharp lines, and intricate designs on beards or hair.
- **Design Trimmer:** Specialized for creating patterns and precise edges in hair and beard styles.
- **Micro Shaver:** For a close, smooth finish on small areas, such as cheeks or necklines, after trimming.
- **Body Hair Trimmer:** Designed for efficient and comfortable trimming of body hair.
- **Nose/Ear Trimmer:** Safely removes unwanted hair from the nose and ears.

Multifunctional Grooming Kit



Full-Size Trimmer



Precision Trimmer



Design Trimmer



Micro Shaver



Body Hair Trimmer



Nose/Ear Trimmer

Image: Visual representation of the six different trimmer heads (Full-Size, Precision, Design, Micro Shaver, Body Hair, Nose/Ear) and their intended uses on a person.

How To Install/Remove the Head/Guard

Trimmer Head Removal



1 Push the trimmer head upwards from the backside.

Trimmer Head Installation



1 Insert the lug of the trimmer head into the guiding slot.

Install the Hair Guard




1 Slide the front part of the guard onto the blade teeth.



2 You don't need to unscrew the screws on the head.



2 Push the back of the trimmer head towards the device.

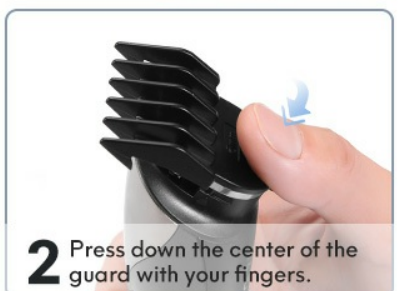

2 Press down the center of the guard with your fingers.

Image: A detailed diagram showcasing each trimmer head (Body Hair, Precision, Design, Micro Shaver, Nose & Ear, Wide Trimmer) and its specific application.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your trimmer.

Daily Cleaning

- After each use, turn off the trimmer and detach the head.
- Use the provided cleaning brush to remove any loose hairs from the blades and the trimmer body.
- Wipe the trimmer body with a damp cloth.

Deep Cleaning (Waterproof Feature)

The trimmer unit is IPX7 waterproof, allowing for thorough rinsing.

1. Ensure the trimmer is turned off and disconnected from the charging cable.
2. Rinse the detachable trimmer heads and the main unit under running water.
3. For best hygiene, you can use the trimmer in the shower.
4. Allow all parts to air dry completely before reassembling or storing.



Image: The eboboin trimmer being rinsed under water, highlighting its waterproof design for easy cleaning.

Blade Care

To maintain blade sharpness and performance, apply a small drop of the provided lubricating oil to the blades after every few uses, especially after wet cleaning. Turn the trimmer on for a few seconds to distribute the oil evenly.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Trimmer does not turn on.	Battery is depleted. Charge the trimmer fully. Ensure the charging cable is properly connected to a working power source.
Poor trimming performance or pulling hair.	Blades may be dull or clogged with hair. Clean the blades thoroughly. Apply lubricating oil to the blades. Ensure the correct trimmer head and guide comb are used for the hair type.
Trimmer makes unusual noise.	Hair or debris may be caught in the motor or blades. Clean the trimmer thoroughly. If the issue persists, contact customer support.
Skin irritation after use.	Ensure blades are clean and sharp. Use light pressure. Trim on clean, dry skin. Avoid using on already irritated skin.

SPECIFICATIONS

- **Model Number:** WL600
- **Power Source:** USB Rechargeable (Built-in Lithium-ion battery)
- **Charging Time:** Approximately 1.5 hours
- **Operating Time:** Up to 120 minutes (cordless)
- **Waterproof Rating:** IPX7 (whole body washable)
- **Dimensions (Package):** 10.55 x 7.36 x 3.15 inches
- **Weight (Package):** 1.21 Pounds
- **Color:** Black
- **Recommended Use:** Beard, Hair, Body, Nose, Ear, Face, Mustache

WARRANTY AND SUPPORT

Your eboboin Multi-Functional Beard Trimmer Kit is covered by a manufacturer's warranty against defects in materials and workmanship. For specific warranty terms, support, or service inquiries, please refer to the warranty card included in your package or contact eboboin customer service directly through the retailer's platform or the official brand website.

Please retain your proof of purchase for warranty claims.