

## Gueray Y-01

# Gueray Portable CD Player Bluetooth (Model Y-01) User Manual

Your Guide to Setup, Operation, and Maintenance

Brand: Gueray | Model: Y-01

## 1. INTRODUCTION

Thank you for choosing the Gueray Portable CD Player Bluetooth (Model Y-01). This device offers versatile audio playback options, including CD, Bluetooth 5.0 (receive and transmit), FM radio, USB, and AUX input/output. It features dual speakers, a rechargeable battery, and can be used as a desktop unit or wall-mounted. This manual provides detailed instructions to help you set up, operate, and maintain your CD player.

## 2. SAFETY INFORMATION

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid placing the device near heat sources or in direct sunlight.
- Use only the provided Type-C charging cable.
- Do not attempt to disassemble or repair the unit yourself. Contact qualified service personnel.
- Keep out of reach of children.
- Ensure proper ventilation when operating the device.

## 3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Gueray Portable CD Player (Model Y-01)
- Remote control
- Type-C Charging cable
- User manual (this document)
- Wall plate & Four screws

## 4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Gueray Portable CD Player.



Figure 4.1: Front view of the Gueray Portable CD Player, showcasing its design and full battery indicator.



Figure 4.2: Detailed diagram of the CD player's ports and controls.

## Controls and Ports:

1. **USB Port:** For USB flash drive playback.
2. **Earphones Port:** 3.5mm jack for private listening.
3. **Power Indicator:** Light indicating power status.
4. **Type-C Charging Port:** For charging the internal battery.
5. **Power Switch:** To turn the device on or off.
6. **Mode Button:** To switch between CD, Bluetooth, FM, USB, and AUX modes.
7. **Volume -:** Decrease volume.
8. **Volume +:** Increase volume.
9. **Previous Song/Fast Back:** Navigate to the previous track or fast rewind.
10. **Play/Pause:** Start or pause playback.
11. **Next Song/Fast Forward:** Navigate to the next track or fast forward.
12. **Dust Cover:** Removable cover for CD compartment.

## 5. SETUP

### 5.1 Charging the Device

Before first use, fully charge the CD player using the provided Type-C charging cable. Connect the cable to the Type-C charging port on the device and the other end to a compatible USB power adapter (not included) or computer USB port. The power indicator will show charging status.

### 5.2 Power On/Off

To power on the device, slide the Power Switch to the 'ON' position. To power off, slide it to the 'OFF' position.

### 5.3 Placement Options

The Gueray CD Player is designed for both desktop and wall-mount use.

- **Desktop Use:** Utilize the integrated back brace for stable support on any flat surface.
- **Wall Mounting:** Use the included wall plate and screws to securely mount the player on a wall. Ensure the mounting surface is suitable and follow standard safety procedures for drilling.



Figure 5.1: The CD player in desktop orientation, demonstrating USB playback.



Figure 5.2: The CD player wall-mounted and demonstrating AUX and FM radio functions.

## 6. OPERATING INSTRUCTIONS

### 6.1 Inserting/Removing a CD

The CD player features a removable dust cover for easy access to the CD compartment.

1. To open, align the bottom of the lid with the player's slot and insert it.
2. Press down on the circle on the lid until you hear a 'click' sound. The installation is complete.
3. To remove the dust cover, gently pull it upwards from the top edge.
4. Place a CD (CD, CD-R/RW, MP3, WMA format) onto the spindle, label side up.
5. Close the dust cover securely.

### 6.2 CD Playback

1. Ensure a CD is properly inserted.
2. Press the 'Mode' button on the device or 'CD/USB' button on the remote until 'CD' mode is selected.
3. The CD will begin playing automatically. If not, press the 'Play/Pause' button.

4. Use the 'Previous Song/Fast Back' and 'Next Song/Fast Forward' buttons to navigate tracks.
5. Press 'Play/Pause' to pause or resume playback.
6. Adjust volume using 'Volume +' and 'Volume -' buttons.

### **6.3 Bluetooth Receive Mode (Connecting to the CD Player)**

This mode allows you to stream audio from your phone, tablet, or other Bluetooth devices to the CD player's speakers.

1. Press the 'Mode' button on the device or the 'Bluetooth' button on the remote to switch to Bluetooth mode. The indicator light will turn dark blue.
2. Long press the 'Play/Pause' button for 3 seconds to activate Bluetooth Receive Mode.
3. On your mobile phone or device, activate Bluetooth and search for devices. Select 'Y-01' from the list to pair.
4. Once connected, play music on your mobile device, and the audio will transmit to the CD player's speakers.

### **6.4 Bluetooth Transmit Mode (Connecting from the CD Player)**

This mode allows you to transmit audio from the CD player (CD/USB source) to external Bluetooth headphones or speakers.

1. Press the 'Mode' button on the device or 'CD/USB' button on the remote to select CD or USB mode.
2. Long press the 'Play/Pause' button for 3 seconds, or short-press the Bluetooth transmission button on the remote control, to activate Bluetooth Transmit Mode.
3. Ensure your Bluetooth headphones or speakers are in pairing mode. The CD player will automatically attempt to pair with nearby Bluetooth devices.

# All in One Multifunctional CD Player with Speakers



USB Playing



Type-C port



Bluetooth receiving and transmitting



FM Radio



3.5mm AUX Input/Output



Headphone



Sleep shutdown



A-B Repeat



Rechargeable 1800mAh



Removable Dust Cover



Hifi Loudspeakers



Support Remote control



Figure 6.1: Dual Bluetooth capabilities for receiving and transmitting audio.

## 6.5 FM Radio

1. Press the 'Mode' button on the device or the 'FM Radio' button on the remote to switch to FM mode.
2. The player will automatically scan and store available FM stations.
3. Use the 'Previous Song/Fast Back' and 'Next Song/Fast Forward' buttons to navigate through stored stations.

## 6.6 USB Playback

1. Insert a USB flash drive into the USB port.
2. Press the 'Mode' button on the device or 'CD/USB' button on the remote to select 'USB' mode.
3. The player will automatically detect and play compatible audio files (e.g., MP3, WMA).
4. Use the navigation and play/pause buttons as with CD playback.

## 6.7 AUX Mode

1. Connect an external audio device (e.g., smartphone, MP3 player) to the AUX input/output port using a 3.5mm audio cable (not included).

2. Press the 'Mode' button on the device or 'AUX' button on the remote to select 'AUX' mode.
3. Control playback from your external device. The CD player will act as a speaker.

## 6.8 Remote Control Usage

The included remote control allows convenient operation from a distance. Ensure 2 AAA batteries (not included) are installed. Point the remote towards the front of the CD player for optimal response.

## 6.9 Advanced Playback Features

- **A-B Repeat:** For repeating a specific section of a track.
- **Sleep Timer:** Set a timer for the player to automatically turn off.
- **Repeat Modes:** Supports single-track repeat, all-track repeat, and playlist playback modes.
- **Programming Playback:** Allows you to create a custom playback order for tracks.

# 7. MAINTENANCE

## 7.1 Cleaning

Wipe the exterior of the CD player with a soft, dry cloth. Do not use abrasive cleaners or solvents. For the CD lens, use a specialized CD lens cleaner if necessary.

## 7.2 Dust Cover

The removable dust cover helps protect the CD mechanism from dust accumulation, which can cause skipping or playback errors. Ensure the cover is properly installed when not changing CDs.

## 7.3 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Recharge the device when the battery level is low. If storing the device for an extended period, charge it periodically to maintain battery health.

# 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is depleted. Power switch is off.	Charge the device using the Type-C cable. Ensure the power switch is in the 'ON' position.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly. Dust cover not properly closed.	Clean the CD. Ensure the CD is inserted correctly. Close the dust cover firmly.
Bluetooth pairing fails (Receive Mode).	CD player not in pairing mode. Other Bluetooth devices interfering.	Ensure the CD player is in Bluetooth Receive Mode (long press Play/Pause). Turn off other Bluetooth devices within 10 meters. Try resetting your mobile device's Bluetooth.

Problem	Possible Cause	Solution
Bluetooth pairing fails (Transmit Mode).	External device not in pairing mode. Interference.	Ensure your Bluetooth headphones/speakers are in pairing mode. Turn off other Bluetooth devices. If using Bluetooth headphones, try resetting them and reconnecting.
No sound from speakers.	Volume is too low or muted. Headphones connected.	Increase the volume. Disconnect headphones if you want sound from speakers.
FM radio reception is poor.	Weak signal in current location.	Relocate the player to an area with better reception.

## 9. SPECIFICATIONS

Feature	Detail
Brand	Gueray
Model	Y-01
Connectivity Technology	Bluetooth 5.0 (Receive/Transmit)
Supported Disc Formats	CD, CD-R/RW, MP3, WMA
Playback Modes	CD, Bluetooth, FM Radio, USB, AUX
Battery	1800mAh Rechargeable (included)
Charging Port	Type-C
Speakers	Built-in Dual Speakers (Hi-Fi)
Dimensions (approx.)	9.33 x 7.8 x 2.32 inches
Item Weight	1.76 pounds
Included Components	CD Player, Remote control, Type-C Charging cable, User manual, Wall plate & Four screws

## 10. WARRANTY AND SUPPORT

Gueray products are designed for reliability and performance. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims. For technical support, troubleshooting assistance, or inquiries regarding your Gueray Portable CD Player (Model Y-01), please refer to the contact information provided with your purchase or visit the official Gueray website.

