

## Pro4 TWS Bluetooth Earphone

# Generic Pro4 TWS Bluetooth Earphones User Manual

Model: Pro4 TWS Bluetooth Earphone

Brand: Generic

## INTRODUCTION

The Generic Pro4 TWS Bluetooth Earphones are designed to provide a high-quality wireless listening experience. These earbuds feature 9D stereo sound for rich audio, a built-in microphone for clear calls, and an ergonomic in-ear design for comfortable wear. They are compatible with various Bluetooth-enabled devices, including iPhones.

Key features include:

- **9D Stereo Sound Quality:** Enjoy enhanced bass and clear treble for an immersive audio experience.
- **Wireless Freedom:** True Wireless Stereo (TWS) technology ensures a seamless Bluetooth connection without tangled wires.
- **Built-in Microphone:** Facilitates hands-free calls and clear voice communication.
- **Comfortable In-Ear Design:** Ergonomically designed for a secure and comfortable fit during extended use.
- **Wide Device Compatibility:** Works with iPhone and other Bluetooth-enabled devices.

## WHAT'S IN THE BOX

Please check the package contents upon unboxing:

- Pro4 TWS Bluetooth Earphones (Left and Right)
- Charging Case
- Charging Cable
- User Manual (this document)

# New TWS Pro 4



Pro 4 TWS Wireless  
Headphones Bluetooth  
compatible 5.0  
waterproof headset with  
Mic for Xiaomi iPhone

Image: The Pro4 TWS Bluetooth Earphones nestled in their white charging case, accompanied by a white charging cable.

## SETUP

### 1. Initial Charging

Before first use, fully charge the earphones and charging case. The charging case has a capacity of 200mAh. A full charge for the earphones can take up to 12 hours (initial charge may vary).

1. Connect the provided charging cable to the charging port on the case.
2. Connect the other end of the cable to a USB power source (e.g., computer, wall adapter).
3. The indicator light on the charging case will show charging status. Once fully charged, the indicator light may change or turn off.
4. Place the earphones into the charging case to charge them.

## **STRONG POWER RESERVE**

**5.0 low power technology, built-in large capacity lithium battery,  
guarantee your wireless music**



**3-4Hours**  
Call / listen

**200mAh**  
Charge chamber capacity

\*The above data are all from the manufacturer's laboratory.  
Due to the different environmental equipment, please refer to the actual product

Image: The Pro4 TWS earphones inside their charging case, highlighting the 200mAh charge chamber capacity and estimated 3-4 hours of call/listen time per earbud charge.

## 2. Bluetooth Pairing

The Pro4 TWS Earphones use Bluetooth 4.0 for wireless connectivity. Follow these steps to pair them with your device:

1. Ensure the earphones are charged and placed in the charging case.
2. Open the charging case lid. The earphones will automatically enter pairing mode (indicator lights may flash).
3. On your smartphone or Bluetooth-enabled device, go to the Bluetooth settings.
4. Search for available devices. You should see "Pro4 TWS" or a similar name appear in the list.
5. Select "Pro4 TWS" to connect. Once connected, a voice prompt or indicator light change will confirm successful pairing.
6. After initial pairing, the earphones should automatically connect to your device when removed from the case and Bluetooth is enabled on your device.



Image: The Pro4 TWS charging case positioned near various smartphones, illustrating its compatibility with both iOS and Android operating systems.

## OPERATING INSTRUCTIONS

### Wearing the Earphones

Gently insert the earphones into your ears, ensuring a comfortable and secure fit. The ergonomic in-ear design helps to provide optimal sound isolation and comfort.

## Basic Functions


The Pro4 TWS earphones typically feature touch controls for various functions. While specific touch gestures are not detailed in the product information, common functions include:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.
- **Activate Voice Assistant:** Triple tap on either earbud (e.g., Siri, Google Assistant).

*Note: Specific touch controls may vary. Refer to the quick start guide included in your package for precise instructions if available.*

## Battery Life

The earphones offer approximately 3-5 hours of headphone life on a single charge. The charging case provides 4-5 additional charges, extending daily use to up to 24 hours. For calls, the earphones provide about 3-4 hours of talk time.

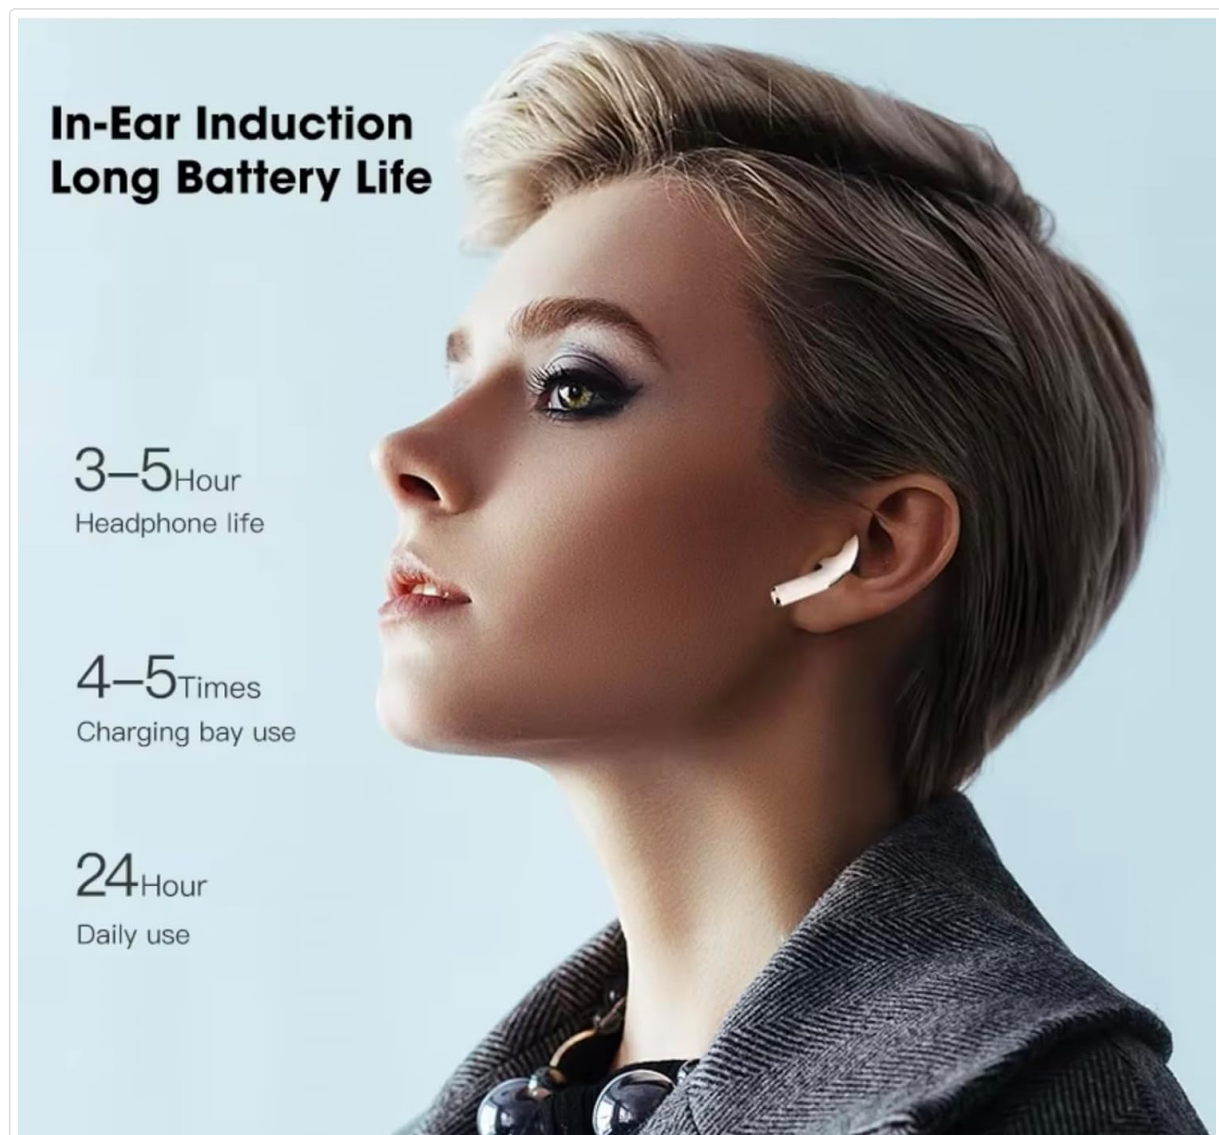

**In-Ear Induction  
Long Battery Life**

3–5<sup>Hour</sup>  
Headphone life

4–5<sup>Times</sup>  
Charging bay use

24<sup>Hour</sup>  
Daily use

Image: A person wearing a Pro4 TWS earbud, with text indicating 3-5 hours of headphone life, 4-5 times charging bay use,

## MAINTENANCE

---

To ensure the longevity and optimal performance of your Pro4 TWS Earphones, follow these maintenance guidelines:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Avoid using abrasive materials or harsh chemicals.
- **Storage:** When not in use, store the earphones in their charging case to protect them from dust, dirt, and physical damage.
- **Avoid Moisture:** While the product may have some water resistance, avoid submerging the earphones or charging case in water. Keep them away from excessive moisture and humidity.
- **Charging:** Use only the provided charging cable or a certified equivalent. Avoid overcharging by disconnecting once fully charged.
- **Temperature:** Do not expose the earphones to extreme temperatures (hot or cold) as this can affect battery life and performance.

## TROUBLESHOOTING

---

If you encounter issues with your Pro4 TWS Earphones, try the following troubleshooting steps:

- **Earphones not pairing:**
  - Ensure both earphones are charged.
  - Turn off and on your device's Bluetooth.
  - Forget "Pro4 TWS" from your device's Bluetooth list and try pairing again.
  - Place earphones back in the case, close the lid, wait a few seconds, then open to re-enter pairing mode.
- **No sound or low volume:**
  - Check the volume level on both your device and the earphones.
  - Ensure earphones are properly seated in your ears.
  - Reconnect the earphones to your device.
- **Charging issues:**
  - Verify the charging cable is securely connected to both the case and the power source.
  - Try a different USB port or power adapter.
  - Ensure the charging contacts on the earphones and inside the case are clean and free of debris.
- **One earbud not working:**
  - Place both earbuds back into the charging case, close the lid, and then take them out again to re-sync.
  - Try resetting the earphones (refer to specific reset instructions if available in a separate quick start guide).

## SPECIFICATIONS

---

<b>Model Name</b>	Pro4 TWS Bluetooth Earphone
<b>Brand</b>	Generic
<b>Connectivity Technology</b>	Wireless (Bluetooth 4.0)
<b>Ear Placement</b>	In Ear
<b>Form Factor</b>	In Ear
<b>Audio Driver Type</b>	Dynamic Driver
<b>Impedance</b>	32 Ohm
<b>Noise Control</b>	None
<b>Headphones Jack</b>	No Jack
<b>Charging Time</b>	Up to 12 Hours (initial charge)
<b>Earphone Battery Life</b>	3-5 Hours (listening), 3-4 Hours (call)
<b>Charging Case Capacity</b>	200mAh (provides 4-5 additional charges)
<b>Compatible Devices</b>	Bluetooth-enabled devices
<b>Item Weight</b>	22 Grams (earphones)
<b>Manufacturer</b>	MixBuds
<b>Package Dimensions</b>	4.5 x 4 x 0.5 inches

## WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not available in the provided product details. Please refer to the packaging or contact the retailer for warranty terms and support options.