

## LIGE LG89143

# LIGE LG89143 Men's Quartz Analog Watch Instruction Manual

Model: LG89143

## INTRODUCTION

Thank you for choosing the LIGE LG89143 Men's Quartz Analog Watch. This timepiece combines classic design with reliable functionality, featuring a precise quartz movement, durable materials, and a date display. This manual provides essential information for setting up, operating, and maintaining your watch to ensure its longevity and accurate performance.





Image: The LIGE LG89143 watch featuring a black dial, silver-tone case, and black leather strap.

## FEATURES OVERVIEW

- **Premium Materials:** High-strengthened glass crystal, genuine leather strap, and stainless steel case.
- **Precise Quartz Movement:** Japanese-origin quartz movement for accurate timekeeping.
- **Date Display:** Practical date function for daily utility.
- **Luminous Hands:** Allows for easy time reading in low-light conditions.
- **Water Resistance:** 30 meters (3 ATM) for protection against sweat, rain, and daily splashes.
- **Scratch Resistant Design:** High-strength mineral glass crystal (500-600Hv) for durability.

### 30M WATERPROOF



### HIGH HARDNESS MINERAL GLASS



### LUMINOUS EFFECT



### DURABLE LEATHER STRAP



Image: A visual summary of the watch's key features, including water resistance, mineral glass, luminous hands, and leather strap.

## SETUP AND OPERATING INSTRUCTIONS

Your LIGE LG89143 watch is designed for ease of use. Follow these steps to set the time and date.

### Setting the Date and Time

#### 1. Adjusting the Date:

- Gently pull the crown out to the **first position**.
- Rotate the crown either clockwise or counter-clockwise (depending on the specific movement) until the correct date appears in the date window.
- Once the date is set, push the crown back in to the normal operating position.

#### 2. Adjusting the Time:

- Gently pull the crown out to the **second position** (fully extended).
- Rotate the crown to move the hour and minute hands until the correct time is displayed.
- To ensure precise time setting, it is recommended to set the time a few minutes ahead and then turn the crown backward to the exact time.



- Once the time is set, push the crown back in to the normal operating position.

## FUNCTION DESCRIPTION



Image: Illustration detailing the crown positions for adjusting the date and time on the watch.

**Important Note:** Always ensure the crown is fully pushed back in after setting the time or date to maintain the watch's water resistance.

## MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch case and strap regularly with a soft, dry cloth to remove dust and dirt. For the leather strap, avoid excessive moisture.
- **Water Resistance:** The watch is 30M (3 ATM) water resistant, suitable for daily splashes, hand washing, and rain. **It is not suitable for swimming, showering, bathing, or diving.** Avoid contact with hot water or corrosive liquids.
- **Temperature Extremes:** Avoid exposing your watch to extreme temperatures (hot or cold) or sudden temperature changes, as this can affect the movement and battery life.
- **Magnetic Fields:** Keep the watch away from strong magnetic fields, which can interfere with the quartz movement's accuracy.
- **Battery Replacement:** The watch is powered by a nonstandard battery (included). When the watch stops or the second hand skips, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.



## Product Parameters

MODEL: LG89143
WATER RESISTANT DEPTH: 30ATM
CASE MATERIAL: Stainless Steel
MOVEMENT : Hight Quality Quartz Movement
SPECIAL FEATURES:Date,Luminous
BAND MATERIAL: LEATHER
ITME SHAPE: ROUND

Image: The watch demonstrating its daily life water resistance against splashes.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch stops or runs intermittently	Low battery or internal movement issue.	Replace the battery. If the problem persists, consult a watch technician.
Date does not change at midnight	Date was set during the "forbidden" hours (typically between 9 PM and 3 AM) or incorrect time setting.	Avoid setting the date between 9 PM and 3 AM. If the date is stuck, manually advance the time past midnight to correct the date, then reset the time.
Watch hands are not luminous	Insufficient exposure to light.	Expose the watch dial to a strong light source for a few minutes to charge the luminous material. The effect is more noticeable in complete darkness.

## SPECIFICATIONS

- **Model Number:** LG89143
- **Movement:** High Quality Quartz Movement (Japanese-origin)
- **Case Material:** Stainless Steel
- **Case Diameter:** 40mm
- **Case Thickness:** 12mm
- **Band Material:** Genuine Leather
- **Band Width:** 20mm
- **Clasp Type:** Buckle
- **Crystal:** High-strength Mineral Glass (500-600Hv)
- **Water Resistance:** 30 Meters (3 ATM)
- **Special Features:** Date Display, Luminous Hands
- **Battery:** 1 Nonstandard Battery (included)

## OFFICIAL PRODUCT VIDEO

Watch this video for a detailed overview of the LIGE LG89143 watch's features and design.

Your browser does not support the video tag.




 

Video: A promotional video showcasing the LIGE LG89143 watch, highlighting its design, materials, and functionality.

## WARRANTY AND SUPPORT

LIGE offers a comprehensive customer service policy for your watch.

- **Warranty:** The LIGE LG89143 watch comes with two years of customer service support.
- **Returns and Exchanges:** A 60-day return and exchange policy is available.
- **Contact Support:** If you have any questions, require assistance, or need to utilize your warranty, please contact our customer service team. Refer to your purchase documentation for specific contact details.

## Related Documents - LG89143

	<p><a href="#">LIGE GPS Smartwatch: GloryFitPro App Installation and User Guide</a></p> <p>A comprehensive guide for LIGE GPS Smartwatches, detailing the download, installation, and usage of the GloryFitPro app. Learn how to register, log in, bind your device, and configure watch settings, along with important GPS notes and FCC compliance information.</p>
	<p><a href="#">LIGE 696 Smartwatch User Manual: Features, Health Monitoring, and Bluetooth Calls</a></p> <p>Comprehensive user manual for the LIGE 696 Sport Smart Watch for Men. Learn about its 1.96-inch screen, blood oxygen monitoring, Bluetooth calls, 100+ sport modes, and IP68 waterproofing.</p>
	<p><a href="#">LIGE BT Call Smartwatch User Manual - Setup and Operation</a></p> <p>Comprehensive user manual for the LIGE BT Call Smartwatch, covering app download, Bluetooth pairing, device operation, and features. Learn how to set up and use your LIGE smartwatch.</p>
	<p><a href="#">LIGE Men's Smart Watch 189 (I9) - User Manual &amp; Features</a></p> <p>Comprehensive user guide for the LIGE Men's Luxury Smart Watch 189 (I9). Covers features like full circle touch screen, Bluetooth calls, waterproof design, fitness tracking, and compatibility with Android/iOS.</p>
	<p><a href="#">LIGE BW0616/2025 Smart Watch User Manual and Specifications</a></p> <p>Comprehensive technical specifications and user information for the LIGE BW0616 and LIGE 2025 smart watches. This guide details features like the ultra HD screen, waterproof design, fitness tracking, LED flashlight, and Bluetooth connectivity for men.</p>

## LIGE Watch Manual

Setting Up Your New Watch

Look for your watch to determine which button you press.

The manual includes:

- Time zone
- Day of the week
- Chronograph (stopwatch)

Watch with a watch

- 1. Press the crown to set the time. Hold it for the first 10 seconds.
- 2. Press the crown to set the date. Hold it for the first 10 seconds.
- 3. Press the crown to set the day of the week. Hold it for the first 10 seconds.

### General Instructions

Setting the time zone



- 1. Set the watch to 12:00 (if not set, press the crown to set the time).
- 2. Set the watch to 12:00 (if not set, press the crown to set the time).
- 3. Set the watch to 12:00 (if not set, press the crown to set the time).
- 4. Set the watch to 12:00 (if not set, press the crown to set the time).
- 5. Set the watch to 12:00 (if not set, press the crown to set the time).
- 6. Set the watch to 12:00 (if not set, press the crown to set the time).
- 7. Set the watch to 12:00 (if not set, press the crown to set the time).
- 8. Set the watch to 12:00 (if not set, press the crown to set the time).
- 9. Set the watch to 12:00 (if not set, press the crown to set the time).
- 10. Set the watch to 12:00 (if not set, press the crown to set the time).

## [LIGE Watch Manual: Setting Up and Using Your Watch](#)

Comprehensive guide for LIGE watches, covering basic parts, setting time, date, day, and using chronograph functions across various models. Includes step-by-step instructions for different watch types.