



Manuals.plus /

› **ORIENTAL CHERRY** /

› Halloween Decorations - 11.5 Ft Animated Hovering Witch Animatronics User Manual

ORIENTAL CHERRY MM446

User Manual: 11.5 Ft Animated Hovering Witch Animatronics

Model: MM446 | Brand: ORIENTAL CHERRY

INTRODUCTION

This manual provides essential information for the safe and effective setup, operation, and maintenance of your ORIENTAL CHERRY 11.5 Ft Animated Hovering Witch Animatronics. Please read these instructions carefully before assembly and use.



Image: The 11.5 Ft Animated Hovering Witch Animatronics, showing its impressive height compared to a 6 ft person, holding a broomstick.

IMPORTANT SAFETY INFORMATION

- For outdoor use only.
- Unplug the unit during inclement weather conditions.
- Keep the animatronics away from flammable materials.

- Do not allow children to play on or near the display.
- Requires 3 AAA batteries (not included). Ensure correct battery polarity during installation.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Hovering Witch Figure (with attached clothing and hair)
- Broomstick Pole (multi-section for assembly)
- Base Stand (with extension brackets)
- Ground Stakes (for securing the base)
- Assembly Hardware (screws, wing nuts for base)

SETUP INSTRUCTIONS

1. **Assemble the Base Stand:** Connect the base stand sections and secure them using the provided hardware. Ensure the base is stable and flat.



Image: Close-up view of the base stand with extension brackets and ground stakes, illustrating how to secure the base.

2. **Insert the Broomstick Pole:** Assemble the broomstick pole sections and insert the bottom end firmly into the assembled base stand.
3. **Attach the Witch Figure:** Carefully attach the hovering witch figure to the top of the broomstick pole. Ensure it is securely fastened and balanced.
4. **Install Batteries:** Locate the battery compartment on the witch figure (typically on the back or underside). Insert 3 AAA batteries, observing the correct polarity (+/-). Close the compartment securely.
5. **Placement:** Position the animatronics in your desired outdoor location. For optimal stability, use the provided ground stakes to anchor the base firmly into the ground. Ensure the area is clear of obstructions and flammable materials.



Image: The animated hovering witch displayed outdoors in a residential yard, demonstrating typical placement.

OPERATING INSTRUCTIONS

The Animated Hovering Witch is equipped with sound and touch activation sensors.

- **Activation:** The animatronics will activate when a sound is detected nearby or when the figure is touched.
- **Features:** Upon activation, the witch's eyes will illuminate with bright LEDs, its jaw will move, and eerie audio scripts will play in tandem with the animations.



Image: A detailed close-up of the witch's face, highlighting the glowing green eyes (lighting effects) and the mechanism for the moving jaw, along with a speech bubble indicating audio playback.



Image: Another close-up of the witch's face, emphasizing the haunting green light effects emanating from its eyes.

- **Deactivation:** The animatronics will automatically cease its sequence after a short period and enter standby mode, awaiting the next activation.

Note: No official product videos with creator_type: Seller were provided in the input data. Therefore, no videos are embedded in this manual.

MAINTENANCE

- **Cleaning:** To clean the animatronics, gently wipe surfaces with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Avoid getting water into electronic components.
- **Storage:** When not in use, disassemble the animatronics and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. Original packaging is recommended for storage.
- **Battery Replacement:** If the animatronics' performance diminishes, replace the 3 AAA batteries with new ones, ensuring correct polarity. Remove batteries if storing for extended periods to prevent leakage.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------------|--|---|
| Animatronics not activating. | <ul style="list-style-type: none"> o No batteries or dead batteries. o Incorrect battery polarity. o Sensor obstruction or malfunction. | <ul style="list-style-type: none"> o Install new AAA batteries. o Check battery polarity. o Ensure sensors are clear and unit is in an area where sound/touch can be detected. |
| Lights or sound not working. | <ul style="list-style-type: none"> o Low battery power. o Internal connection issue. | <ul style="list-style-type: none"> o Replace batteries. o If problem persists, contact customer support. |
| Witch is unstable. | <ul style="list-style-type: none"> o Base not properly assembled or secured. o Uneven ground. | <ul style="list-style-type: none"> o Re-check base assembly and ensure all hardware is tightened. o Use ground stakes and place on a level surface. |

SPECIFICATIONS

- **Model Number:** MM446
- **Brand:** ORIENTAL CHERRY
- **Product Dimensions (L x W x H):** 42 x 20 x 137 inches (approximately 11.5 feet tall)
- **Item Weight:** 21.8 pounds
- **Frame Material:** Plastic
- **Light Color:** Purple (eyes)
- **Power Source:** 3 x AAA Batteries (not included)
- **Activation:** Sound & Touch Activated Sensor



Image: Diagram illustrating the dimensions of the animated hovering witch, showing a height of 137.8 inches (approximately 11.5 feet) and a width of 42 inches.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's return policy or contact ORIENTAL CHERRY customer service directly. Keep your purchase receipt for any warranty claims.

You can visit the ORIENTAL CHERRY Store for more information.

