

KEEPLUCK ST-551

KEEPLUCK ST-551 3-in-1 Coffee Machine Instruction Manual

1. INTRODUCTION

The KEEPLUCK ST-551 coffee machine offers excellent compatibility, adapting to all your coffee needs. It works with Nespresso Original and Dolce Gusto capsules, as well as ground coffee, allowing you to enjoy your favorite beverage at any time. Its intelligent functions, including energy saving and customizable water quantity, are designed for user convenience and a comfortable coffee experience.

2. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only accessories recommended by the manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always ensure the water tank is filled with pure water before operation.
- Be cautious of hot surfaces and steam during operation.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your KEEPLUCK ST-551 coffee machine:



Caratteristiche di base del prodotto

Modello	ST-551	Tensione	220-240 V
Frequenza	50/60Hz	Potenza	1450 W
Capacità serbatoio acqua	600 ML		
Tipi di capsule compatibili	Per capsule Nespresso Original, Per Dolce Gusto capsule , Per Caffè Macinato		

Figure 1: KEEPLUCK ST-551 Coffee Machine Components

- A:** Handle
- B:** Capsule Adapter
- C:** Drip Tray Cover
- D:** Drip Tray
- E:** Small Cup Button
- F:** Large Cup Button
- G:** Power Button
- H:** Water Tank Lid
- I:** Water Tank

Included Accessories



Figure 2: Machine and Accessories

- 1: Coffee Machine
- 2: Ground Coffee Scoop
- 3: Hydraulic Tools
- 4: Dolce Gusto Adapter
- 5: Nespresso Adapter
- 6: Ground Coffee Adapter

4. SETUP AND FIRST USE

Follow these steps for initial setup and your first coffee brew:



Figure 3: Setup and Brewing Steps

1. **Step 1: Fill Water Tank.** Add pure water to the water tank. Ensure the water level is between the MIN and MAX marks.
2. **Step 2: Power On.** Plug the machine into a suitable power outlet and press the power button (G) to start automatic heating. The indicator lights will flash during heating and become steady when ready.
3. **Step 3: Insert Coffee.** Open the handle (A) and insert the appropriate capsule adapter (B) for your chosen coffee type (Nespresso Original, Dolce Gusto, or ground coffee). Place your capsule or ground coffee into the adapter.

4. **Step 4: Brew Coffee.** Place your coffee cup under the coffee outlet. Press either the small cup button (E) or the large cup button (F) to begin brewing.

5. OPERATING INSTRUCTIONS

Brewing Coffee

Once the machine is ready (indicator lights are steady), you can brew your coffee:

- **For Nespresso Original Capsules:** Use the Nespresso adapter.
- **For Dolce Gusto Capsules:** Use the Dolce Gusto adapter.
- **For Ground Coffee:** Use the ground coffee adapter and a suitable amount of ground coffee.

After inserting the coffee, place your cup and press the desired cup button (small or large) to start brewing. The machine will automatically stop when the pre-set volume is dispensed.

Customizing Cup Volume

You can adjust the default volume for both small and large cups:

- **Small Cup Volume Adjustment:**

1. Place your coffee cup under the coffee outlet.
2. While the machine is operating, press and hold the small cup button (E).
3. Release the button once the desired coffee volume is reached (Minimum: 15 seconds, Maximum: 90 seconds). The new volume is now saved.

- **Large Cup Volume Adjustment:**

1. Place your coffee cup under the coffee outlet.
2. While the machine is operating, press and hold the large cup button (F).
3. Release the button once the desired coffee volume is reached (Minimum: 15 seconds, Maximum: 90 seconds). The new volume is now saved.

6. COFFEE COMPATIBILITY

The KEEPLUCK ST-551 is designed for versatility, supporting multiple coffee formats:



Figure 4: 3-in-1 Coffee Machine Compatibility

Compatible Coffee Types

- Nespresso Original capsules
- Dolce Gusto capsules
- Ground coffee

Incompatible Coffee Types and Usage Warnings

**Uso Compatibile**



Per Nes*resso originale



Per D*Ice Gu*to



Per caffè macinato

**Uso Incompatibile**



ESE



Ver*uo



Fre*nych Ro*st



Tas*imo

Figure 5: Compatible vs. Incompatible Coffee Types



Evita il più possibile l'uso di capsule di caffè confezionate in plastica.



Non utilizzare capsule di caffè ammaccate o danneggiate.



Non utilizzare fondi di caffè troppo grossolani o troppo fini.

Figure 6: Coffee Usage Warnings

- This machine is **not compatible** with ESE pods, Vertuo capsules, French Roast capsules, or Tassimo pods.
- Avoid using plastic-packaged coffee capsules as much as possible.
- Do not use dented or damaged coffee capsules.
- When using ground coffee, ensure the grind size is appropriate. Do not use coffee grounds that are too coarse or too fine, as this can affect brewing quality and machine performance.

7. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure optimal performance and longevity of your coffee machine.

- **General Cleaning:** The machine should be thoroughly cleaned monthly or after every 200 cups of coffee, or when you notice a decrease in coffee liquid quantity and a slower flow.
- **Removable Parts:** The removable drip tray (D) and water tank (I) are easy to clean and help reduce bacterial growth. Wash them with warm, soapy water and rinse thoroughly.
- **Exterior Cleaning:** Wipe the exterior of the machine with a damp cloth. Do not use abrasive cleaners or scourers.
- **Descaling:** Periodically descale the machine to prevent mineral buildup. Refer to descaling instructions for coffee machines, typically involving a descaling solution and running it through the machine.
- **Dishwasher Safety:** The machine and its components are **not dishwasher safe**.

8. TROUBLESHOOTING

Pressure Release Function

If the machine is under high pressure and the lever does not open:

Funzione di rilascio della pressione:

1. Quando la macchina è ad alta pressione e la leva non si apre, rimuovere il serbatoio dell'acqua e premere il pulsante situato sotto la macchina per rilasciare la pressione.

2. Se dopo aver seguito questi passaggi non è ancora possibile aprire la leva, provare a premerla più volte fino a quando non si riesce ad aprirla.

Suggerimenti: dopo aver rilasciato la pressione, uscirà un po' di liquido. Si tratta di una situazione normale.



Figure 7: Pressure Release Procedure

1. Remove the water tank (I).
2. Press the button located underneath the machine to release the pressure.
3. If the lever still cannot be opened after following these steps, try pressing the button multiple times until it opens.

Tip: A small amount of liquid may be released after pressure is released. This is normal.

Common Issues

- **Coffee is not hot enough:** Ensure the machine has fully preheated before brewing. Descaling may also improve heating efficiency.
- **Machine vibrates excessively:** Ensure the machine is placed on a stable, flat surface. Check that all removable parts (water tank, drip tray, capsule adapter) are correctly seated.
- **Water leaks from the machine:** Check that the water tank is properly inserted and not overfilled. Ensure the drip tray is correctly positioned. If leaks persist, contact customer support.
- **Coffee flow is slow or inconsistent:** This often indicates a need for cleaning or descaling. Ensure the capsule or ground coffee adapter is not clogged.

9. SPECIFICATIONS

Detailed technical specifications for the KEEPLUCK ST-551 coffee machine:



Figure 8: Basic Product Features

Feature	Detail
Brand	KEEPLUCK
Model Number	ST-551
Capacity	600 ml
Color	Black
Product Dimensions (D x W x H)	28P x 11.5I x 25H cm (11 x 4.5 x 9.84 inches)
Special Features	Single cup brewing, Removable water tank
Coffee Maker Type	Espresso Machine
Operation Mode	Fully Automatic
Power Source	Electric Current
Compatible Coffee Types	Nespresso Original capsules, Dolce Gusto capsules, Ground coffee
Voltage	220-240 V
Frequency	50/60 Hz
Power	1450 W
Material	Stainless Steel, Plastic
Dishwasher Safe	No
UPC	768365232473

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact KEEPLUCK customer service through their official website or the retailer where the product was purchased. Please have your model number (ST-551) and purchase date ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I reset the KEEPLUCK ST-551 coffee machine to its original factory manufacturing state?

While the KEEPLUCK ST-551 manual mentions the existence of "factory settings," it does not provide a specific button combination to perform a full system reset. However, you can easily fix incorrect brew volumes by...

[Read full answer](#)