

TYEMUI TY-ND-GA181

TYEMUI Electric 2 Burner Cooktop

Model: TY-ND-GA181

INTRODUCTION

Thank you for choosing the TYEMUI Electric 2 Burner Cooktop, Model TY-ND-GA181. This appliance is designed for efficient and versatile cooking, featuring a ceramic glass surface and infrared heating technology. This manual provides essential information for the safe and effective use of your new cooktop. Please read it thoroughly before operation and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or damage when using the appliance, follow basic safety precautions, including the following:

- Read all instructions before using the cooktop.
- Ensure the cooktop is connected to a 110V power supply.
- Do not touch hot surfaces. Use handles or knobs.
- Always supervise children when the appliance is in use. This cooktop includes a **Child Lock** feature to prevent accidental operation.
- Do not immerse cord, plugs, or appliance in water or other liquid.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The cooktop features an **Overheating Protection** system and an **Auto Shut-Off** function for safety.
- A **Hot Surface Indicator** will illuminate when the cooking zones are hot, even after they have been turned off. Exercise caution.
- Use only flat-bottomed cookware suitable for electric cooktops.
- Do not place metallic objects such as knives, forks, spoons, and lids on the cooktop surface as they can get hot.

2000W High Power & 9 Power Levels

Satisfy all your cooking needs



Pause



Timer



Child Lock



Shatter
Proof Glass



Overheating
Protection



Residual
Heat Indicator



Image: Overview of the TYEMUI Electric Cooktop highlighting safety features like Pause, Timer, Child Lock, Shatter Proof Glass, Overheating Protection, and Residual Heat Indicator, along with its 2000W high power and 9 power levels.

WHAT'S IN THE BOX

Upon unpacking, please ensure all components are present and in good condition:

- TYEMUI Electric 2 Burner Cooktop
- Power Cord
- User Manual (this document)
- Bottom Feet Pads (for countertop use)
- Scraper (for cleaning)

3A HIGH STANDARD PACKAGING

Delivery with our 360° sponge foam packaging for superior shock resistance, ensuring each cooktop arrives in **PERFECT CONDITION**.

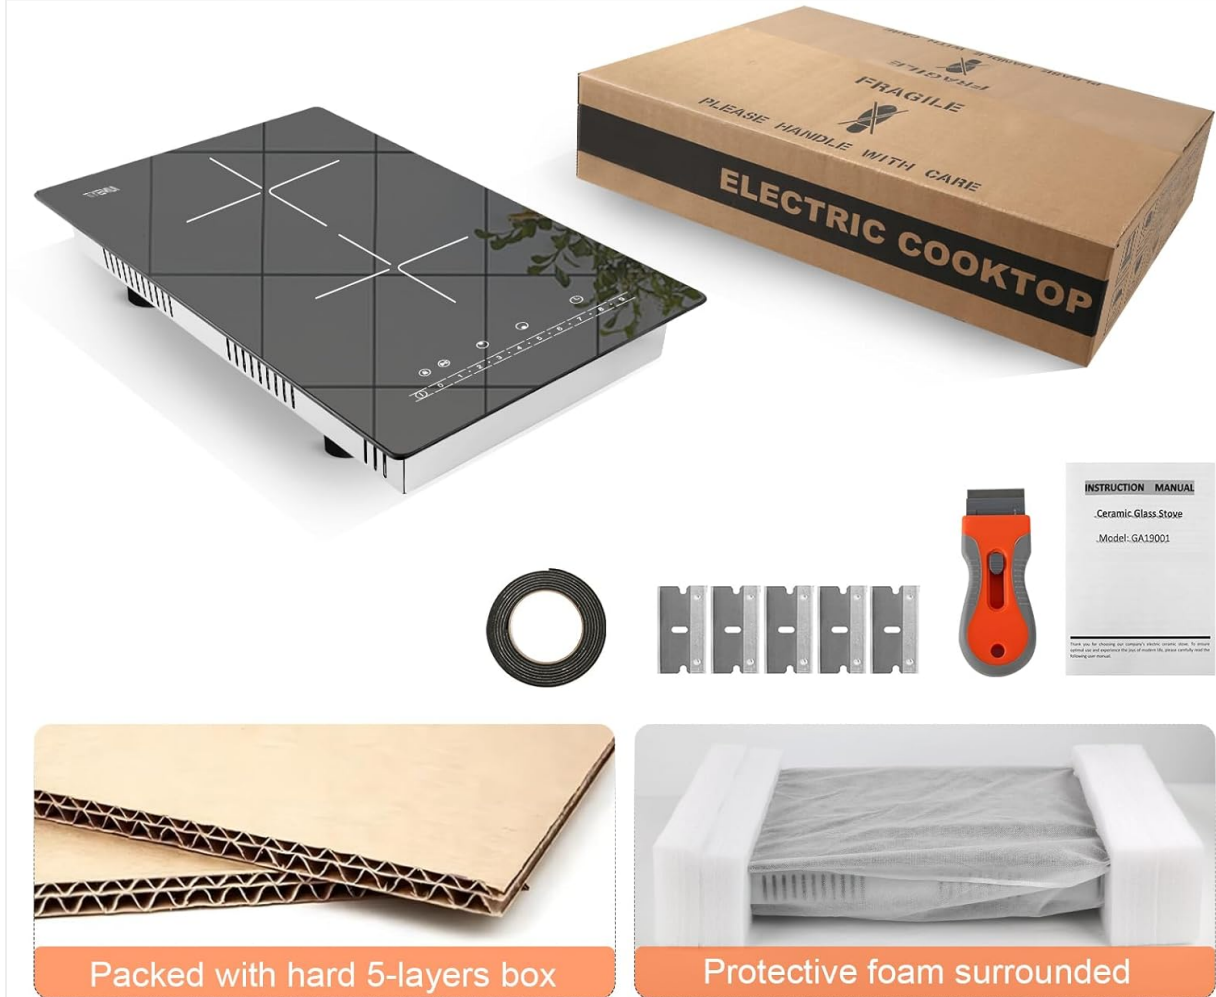


Image: The TYEMUI Electric Cooktop shown in its packaging, alongside included accessories such as the power cord, user manual, bottom feet pads, and a scraper.

SETUP AND INSTALLATION

Your TYEMUI cooktop offers flexible installation options:

Countertop Use:

For portable use, attach the provided bottom feet pads to the base of the cooktop. Place the cooktop on a stable, flat, heat-resistant surface, ensuring adequate ventilation around the unit. Plug the power cord into a standard 110V outlet.

Built-in Installation:

The cooktop can be integrated into your kitchen counter. Ensure the cutout dimensions in your countertop match the cooktop's specifications. The product dimensions are approximately 20.5 inches (D) x 11.45 inches (W) x 2.3 inches (H). Consult a qualified electrician or installer for built-in applications to ensure proper wiring and ventilation.

2 INSTALLATION METHODS



Image: Illustration showing two installation methods for the TYEMUI Electric Cooktop: as a countertop unit with feet, and built-in into a kitchen counter, with key dimensions indicated.

OPERATING INSTRUCTIONS

The TYEMUI cooktop features intuitive slide touch controls for precise cooking.

Control Panel Overview:

SIMPLER & QUICKER OPERATION BUTTONS

one touch to reach your desired power,
hassle-free & ponder-free



Image: Detailed view of the TYEMUI Electric Cooktop's control panel, labeling buttons for ON/OFF, Timer/Power Level Selection, Up Heating Zone (1200W), Down Heating Zone (800W), Pause&Go, Child Lock, and Timer.

Basic Operation:

1. **Power On:** Touch the **ON/OFF** button to turn on the cooktop.
2. **Select Heating Zone:** Touch the desired heating zone (Up Heating Zone or Down Heating Zone) to activate it. The Up Heating Zone provides 1200W, and the Down Heating Zone provides 800W.
3. **Adjust Power Level:** Slide your finger along the power level indicator (1-9) or tap directly on the desired level to set the heat. Level 9 is the highest setting.
4. **Timer Function:** Touch the **Timer** button, then use the slide control to set the cooking time up to 99 minutes. The cooktop will automatically turn off when the timer expires.
5. **Pause/Resume:** Touch the **Pause&Go** button to temporarily pause cooking. Touch it again to resume.
6. **Keep Warm:** Activate the Keep Warm function to maintain food at an ideal serving temperature. Refer to the specific control panel icon for this feature.
7. **Child Lock:** To prevent accidental operation, touch and hold the **Child Lock** button for a few seconds to activate or deactivate.
8. **Power Off:** Touch the **ON/OFF** button to turn off the cooktop. The hot surface indicator will remain lit

until the surface has cooled.

Cookware Compatibility:

The infrared heating technology works with all types of flat-bottom cookware, including:

- Stainless Steel
- Cast Iron
- Aluminum
- Glass
- Ceramic
- Enamel
- Copper



Image: Diagram illustrating the TYEMUI Electric Cooktop's compatibility with various flat-bottom cookware types, including Stainless Steel, Magnetic Pot, Cast Iron Pan, Cast Iron Wok, Enamel, Copper/Aluminum, Ceramics, and Glass. It also shows the 1200W and 800W heating zones.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your cooktop.

1. **Before Cleaning:** Always ensure the cooktop is turned off, unplugged, and completely cool to the touch. The hot surface indicator light should be off.
2. **Daily Cleaning:** For light spills and general cleaning, wipe the ceramic glass surface with a damp cloth and mild detergent. Dry thoroughly with a clean cloth.
3. **Stubborn Stains:** For burnt-on food or stubborn stains, use the included scraper to gently remove residue. Hold the scraper at a shallow angle to avoid scratching the surface. Follow up with a ceramic cooktop cleaner if necessary, then wipe clean and dry.
4. **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the glass surface.
5. **Control Panel:** Wipe the control panel with a soft, damp cloth. Ensure no liquid enters the control area.



Image: A person cleaning the sleek glass top of the TYEMUI Electric Cooktop with a sponge and detergent, demonstrating its easy-to-clean surface. An included scraper is also shown.

TROUBLESHOOTING

If you encounter issues with your cooktop, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Child Lock activated.	Check if the power cord is securely plugged into a working 110V outlet. Deactivate Child Lock by pressing and holding the Child Lock button.
Heating zone not heating or heating slowly.	Incorrect power level; unsuitable cookware; overheating protection activated.	Increase the power level. Ensure cookware has a flat bottom and is suitable for electric cooktops. If overheating protection activated, allow the unit to cool down.
Control panel unresponsive.	Moisture on panel; Child Lock activated; temporary electronic glitch.	Wipe the control panel dry. Deactivate Child Lock. Try unplugging the unit for a few minutes and then plugging it back in to reset.
Cooktop emits an unusual smell during first use.	Normal for new appliances.	This is typically residual manufacturing oils burning off. Ensure good ventilation. The smell should dissipate after a few uses.

If the problem persists after trying these solutions, please contact TYEMUI customer support.

SPECIFICATIONS

Brand: TYEMUI

Model: TY-ND-GA181

Type: Electric 2 Burner Infrared Cooktop

Material: Glass Ceramic

Heating Elements: 2 (Radiant)

Wattage: 2000W total (1200W + 800W)

Voltage: 110 Volts

Controls Type: Touch (Slide Control)

Product Dimensions (D x W x H): 20.5" x 11.45" x 2.3"

Special Features: Automatic Shut-Off, Timer, Child Lock, Hot Surface Indicator, Overheat Protection, Keep Warm function, Pause/Resume.

WARRANTY AND SUPPORT

TYEMUI products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please contact TYEMUI customer support directly. Please have your model number (TY-ND-GA181) and purchase details ready when contacting support.

You can typically find contact information on the TYEMUI official website or through your retailer's support channels.

