

ZMISHIBO 24 Inch Flush Mount Ceiling Fan

ZMISHIBO 24 Inch Flush Mount Ceiling Fan with Light and Remote

USER MANUAL

1. Introduction

This manual provides comprehensive instructions for the safe installation, operation, and maintenance of your ZMISHIBO 24 Inch Flush Mount Ceiling Fan with Light and Remote. Please read this manual thoroughly before installation and retain it for future reference.

Your new ceiling fan features a modern design, 7 fan blades, 6-speed settings, 2500 lumens of light output, and convenient control via both a remote control and a mobile application.

2. Safety Information

- Ensure the power is turned off at the circuit breaker before installation or maintenance.
- All electrical connections must be in accordance with local codes and ordinances. If you are unfamiliar with electrical wiring, consult a qualified electrician.
- The mounting structure must be capable of supporting the weight of the fan (approximately 7.43 pounds).
- Do not bend the fan blades during installation or cleaning.
- Keep children away from the fan during operation.
- Do not insert objects into the path of the fan blades.

3. Package Contents

Verify that all components are present before beginning installation:

- Ceiling Fan Unit (with integrated light)
- Remote Control (2 AAA batteries included)
- Mounting Hardware Kit
- Instruction Manual



Product Size



Memory
Function



120 Volt



2500 LM



After-sales
Service



Room Size:

Height:
7FT-10FT

Length & Width:
8.5FT x 8.5FT

Image: Product dimensions and key features. The fan measures 24 inches in diameter and 6.4 inches in height. It features a memory function, 120 Volt operation, 2500 Lumens brightness, and includes after-sales service. Recommended room size is 8.5ft x 8.5ft with a ceiling height of 7ft-10ft.

4. Setup and Installation

Installation of this flush mount ceiling fan is designed to be straightforward. However, if you are unsure about any steps, it is recommended to consult a qualified electrician.

1. **Prepare for Installation:** Turn off power at the main circuit breaker. Ensure the existing electrical box is securely mounted and capable of supporting the fan's weight.

2. **Mounting Bracket Installation:** Attach the mounting bracket to the electrical junction box using the provided screws.
3. **Wiring Connections:** Connect the fan's electrical wires to the household wiring according to the wiring diagram in the detailed instructions (refer to the included paper manual for specific diagrams). Ensure all connections are secure.
4. **Secure the Fan Unit:** Carefully lift the fan unit and attach it to the mounting bracket. Secure it with the appropriate screws.
5. **Final Checks:** Ensure all connections are tight and the fan is securely mounted. Restore power at the circuit breaker.

For detailed wiring diagrams and step-by-step visual guides, please refer to the comprehensive installation instructions included in your product packaging.

5. Operating Instructions

Your ZMISHIBO ceiling fan offers multiple functions for enhanced comfort and lighting.

5.1 Fan Operation

- **6 Speed Settings:** The fan features 6 adjustable speeds, from a gentle breeze to a powerful airflow, to suit your preference.
- **Reversible Function:**
 - **Summer Mode (Forward Cool Airflow):** Blades rotate counter-clockwise to push cool air downwards, creating a cooling effect.
 - **Winter Mode (Reverse Warm Airflow):** Blades rotate clockwise to draw cool air up towards the ceiling, circulating warm air trapped near the ceiling.



Reversible Air Circulation for Summer & Winter



Image: Illustration of the reversible air circulation feature, showing forward airflow for summer and reverse airflow for winter, along with 6 fan speed indicators.

5.2 Light Operation

- **3 Color Temperatures (3CCT):** Choose between Warm White (3000K), Natural White (4500K), and Cool White (6000K) to match your mood or activity.
- **Dimmable Function:** Adjust the light brightness from 10% to 100% steplessly to create the desired ambiance.
- **Memory Function:** The light will remember your last chosen brightness and color temperature setting when turned off and on again.



Three Color Temperatures



Image: Visual representation of the three available color temperatures: 3000K (warm), 4500K (natural), and 6000K (cool).



Image: Depicts the smooth dimming capability of the light, adjustable from 10% to 100% brightness.

5.3 Timer Function

Set a 2-hour timer for the fan or light to automatically turn off, providing convenience for sleeping or leaving a room.



Image: Illustrates the intelligent 2-hour timer setting feature.

6. Control Methods

6.1 Remote Control

The included remote control allows for convenient operation of all fan and light functions from anywhere in the room. Ensure the 2 AAA batteries are correctly installed.

- **Power Button:** Turns the fan and light on/off.
- **Fan Speed Buttons (1-6):** Adjusts fan speed.
- **Light On/Off Button:** Controls the light independently.
- **Color Temperature Buttons:** Cycles through 3000K, 4500K, and 6000K.
- **Dimming Buttons:** Increases or decreases light brightness.
- **Timer Button:** Activates the 2-hour timer.
- **Reverse Function Button:** Toggles between summer and winter modes.
- **Night Light Button:** Activates a low-brightness night light mode.

6.2 App Control

For additional control and smart features, download the "Fanlamp Pro" app from the Google Play Store or Apple App Store. App control requires Bluetooth connectivity.

1. Download and install the "Fanlamp Pro" app on your smartphone.
2. Ensure Bluetooth is enabled on your device.
3. Open the app and follow the on-screen instructions to pair your fan.
4. Once paired, you can control fan speeds, light settings, timer, and other functions via the app.



Image: Displays both the physical remote control and the "Fanlamp Pro" mobile application interface for controlling the ceiling fan. Key functions like code pairing, bright setting, night light, and reverse function are highlighted.

7. Maintenance

- **Cleaning:** Before cleaning, ensure the power is turned off. Use a soft, damp cloth to wipe down the fan and light fixture. Do not use abrasive cleaners or solvents.
- **Blade Cleaning:** Gently wipe the fan blades to remove dust. Avoid bending the blades.
- **Light Source:** The LED light source is integrated and not user-replaceable. If the light fails, contact customer support.

8. Troubleshooting

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low.	Check circuit breaker; Verify wire connections; Replace remote control batteries.
Light does not turn on	No power to the light; Loose wire connections; Remote control battery low.	Check circuit breaker; Verify wire connections; Replace remote control batteries.
Remote control not working	Batteries are dead or incorrectly installed; Remote not paired.	Replace batteries; Refer to pairing instructions in the full manual.
Fan is noisy	Loose mounting screws; Blades are unbalanced.	Tighten all mounting screws; Ensure blades are securely attached and balanced.

9. Specifications

- **Brand:** ZMISHIBO
- **Model:** 24 Inch Flush Mount Ceiling Fan
- **Color:** Black
- **Material:** Aluminum
- **Power Source:** DC
- **Light Source Type:** LED
- **Brightness:** 2500 Lumens
- **Color Temperature:** 3000K/4500K/6000K (Adjustable)
- **Fan Speeds:** 6
- **Control Method:** App, Remote Control
- **Special Features:** Dimmable, Reversible Function, Timer, Memory Function
- **Item Weight:** 7.43 pounds
- **Dimensions:** 24 Inch (Diameter)
- **Batteries:** 2 AAA batteries (for remote, included)

10. Warranty and Support

ZMISHIBO offers a 2-year customer support period for this product. If you encounter any issues or have questions regarding your ceiling fan, please contact ZMISHIBO customer service for assistance.

For warranty claims or technical support, please refer to the contact information provided in your product packaging or visit the official ZMISHIBO website.