

[Manuals.plus](#) /

> [FELEMAN](#) /

> FELEMAN 12-inch Dual Screen Portable DVD Player Instruction Manual (Model: Dual Screen with HD)

FELEMAN Dual Screen with HD

FELEMAN 12-inch Dual Screen Portable DVD Player Instruction Manual

Model: Dual Screen with HD

1. INTRODUCTION

Thank you for choosing the FELEMAN 12-inch Dual Screen Portable DVD Player. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read it thoroughly before use to ensure optimal performance and longevity of your product.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

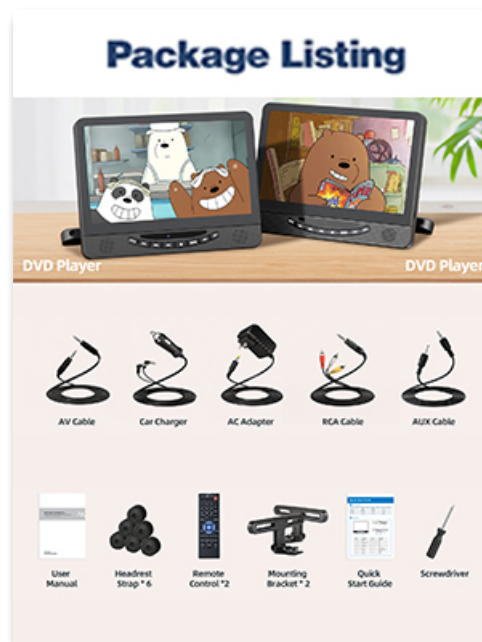


Image Description: A visual representation of the package contents, including the two main DVD player units, two remote controls, two mounting brackets, six headrest straps, an AV cable, a car charger, an AC adapter, an RCA cable, an AUX cable, a user manual, a quick start guide, and a screwdriver.

- FELEMAN 12-inch Portable DVD Player (Main Unit) x 1
- FELEMAN 12-inch Portable DVD Player (Secondary Unit) x 1
- Remote Control x 2
- Mounting Bracket x 2
- Headrest Strap x 6
- AV Cable x 1
- Car Charger x 1
- AC Power Adapter x 1
- RCA Cable x 1
- AUX Cable x 1
- User Manual x 1
- Quick Start Guide x 1
- Screwdriver x 1

3. PRODUCT FEATURES

- **12-inch Full HD 1080P Display:** Enhanced screen technology provides clear and vibrant images.
- **Dual Screen Functionality:** Play the same movie on both screens or two different movies simultaneously.
- **HDMI Input:** Connect external devices like phones, computers, Raspberry Pi, Xbox, PlayStation, Switch, Kindle Fire, or TV sticks to sync up to 1080P video and audio. *(Note: HDMI input only; HDMI output is not supported. Confirm your phone supports HDMI output.)*
- **AV In/Out Function:** Connect to a television for a larger viewing experience or link the two DVD players.
- **Rechargeable Battery:** Built-in high-capacity battery provides approximately 5 hours of playback time.
- **Multiple Power Options:** Operates via built-in battery, car charger, or AC power adapter.
- **Broad Media Compatibility:** Supports DVD, CD, VCD, SVCD, CD-R/+R, CD-RW/+RW, DVD-R/+R, DVD-RW/+RW discs (Blu-ray not supported). USB support for VOB, AVI, FLV, DAT, DIVX, XVID, MPEG1, MPEG2 files (max 32GB FAT32, 720*576 pixel).
- **Last Memory Function:** Automatically resumes playback from where you left off.
- **Dual Front Stereo Speakers:** Delivers clear and loud audio.
- **Headphone Jacks:** Allows for private listening.
- **Adjustable Screen Angle:** Customize viewing angle for comfort.

4. SETUP

4.1 Mounting in a Vehicle

The FELEMAN Dual Screen Portable DVD Player offers two methods for headrest installation: mounting brackets or headrest straps.

Fast and Easy Installation



Image Description: A visual guide demonstrating the installation of the DVD player onto a car headrest using the provided mounting bracket. It illustrates installing the base, aligning and securing the player, and adjusting the screen angle.

Using Mounting Brackets:

- 1. Install the Base:** Slide the mounting bracket base onto the metal posts of your car's headrest.
- 2. Align and Secure:** Position the DVD player onto the base, ensuring the holes align. Use the provided screwdriver to tighten the screw, securing the player to the base.
- 3. Insert Player:** Slide the DVD player firmly into the mounted base.
- 4. Adjust Angle:** Loosen the adjustment screw on the side to tilt the screen to your desired viewing angle (up to 135 degrees), then re-tighten.

Using Headrest Straps:

Wrap the headrest straps around the headrest and secure the DVD player to the back of the seat. Ensure the straps are tight to prevent movement during travel.

4.2 Connecting Dual Screens

To enable dual screen playback, connect the main DVD player to the secondary DVD player using the supplied AV cable.

One Order to Get Double Happiness

Watch 2 Different Movies



Share The Same Movie



Image Description: This image illustrates the versatility of the dual screen system. It shows how two separate movies can be played simultaneously, or how a single movie can be shared across both screens using an AV cable connection, ideal for car entertainment.

- Locate the AV OUT port on the main DVD player and the AV IN port on the secondary DVD player.
- Connect one end of the AV cable to the AV OUT port of the main player.

- Connect the other end of the AV cable to the AV IN port of the secondary player.
- Once connected, you can choose to play the same movie on both screens or different movies, depending on the player's settings.

5. OPERATING INSTRUCTIONS

5.1 Powering the Device

Your FELEMAN DVD player can be powered in three ways:

HDMI Input — Screen Mirroring

Sync up To 1080P Full HD video to the player via 3 in 1 smartphone to HDMI Cable(not included)



Raspberry Pi



Xbox



PlayStation



Switch



Phone



Computer



Kindle Fire



TV Stick



Note: 1.Only support HDMI input, not output.
2.HDMI input only applicable to the devices with HDMI output function.

Image Description: This image highlights the three versatile power options for the DVD player: an AC adapter for standard wall outlets, a built-in rechargeable battery offering up to 5 hours of use, and a car charger for convenient power on the go.

- **Built-in Battery:** The player has a high-capacity rechargeable battery. Ensure it is charged before portable use.
- **Car Charger:** Use the provided car charger to power the device and charge the battery while in your vehicle.
- **AC Power Adapter:** Use the provided AC adapter to power the device and charge the battery from a standard wall outlet.

5.2 Disc Playback

1. Open the disc cover gently.
2. Insert a compatible DVD or CD with the label side facing up.
3. Close the disc cover. The player will automatically detect and begin playback.
4. Use the controls on the player or the remote control to navigate menus, play, pause, stop, and adjust volume.

5.3 USB Playback

1. Insert a USB flash drive (up to 32GB, FAT32 format) into the USB port.
2. The player will detect the USB device. Navigate to the USB menu using the remote or player controls.
3. Select the desired video, audio, or image file for playback.

5.4 HDMI Input (Screen Mirroring)

Connect external devices to mirror their screen content onto the DVD player.

3 Charger Systems

No more worries about running out of battery



Image Description: This image illustrates the HDMI input capability, showcasing how the DVD player can sync 1080P Full HD video from a variety of devices, including gaming consoles, smartphones, and streaming sticks, for screen mirroring. A note clarifies that only HDMI input is supported, not output.

- Connect your external device (e.g., smartphone, game console) to the DVD player's HDMI IN port using a compatible HDMI cable (not included).
- Switch the DVD player's input source to HDMI.
- The content from your external device will now be displayed on the DVD player screen.

5.5 AV Output to TV

Enjoy movies on a larger screen by connecting the DVD player to a television.

Sync Screen to TV

Enjoy movies with your family




Image Description: This image demonstrates how to connect the portable DVD player to a television using the included RCA cable, allowing a family to enjoy movies on a larger screen, enhancing the viewing experience for multiple people.

- Connect the RCA cable (included) from the AV OUT port of the DVD player to the AV IN ports (typically yellow, white, red) on your television.
- Select the corresponding AV input source on your television.
- The DVD player's content will now be displayed on your TV.

5.6 Last Memory Function

The player automatically saves your last playback position. When you power on the device again, it will resume from where you left off.

Last Memory & Multi-Formats

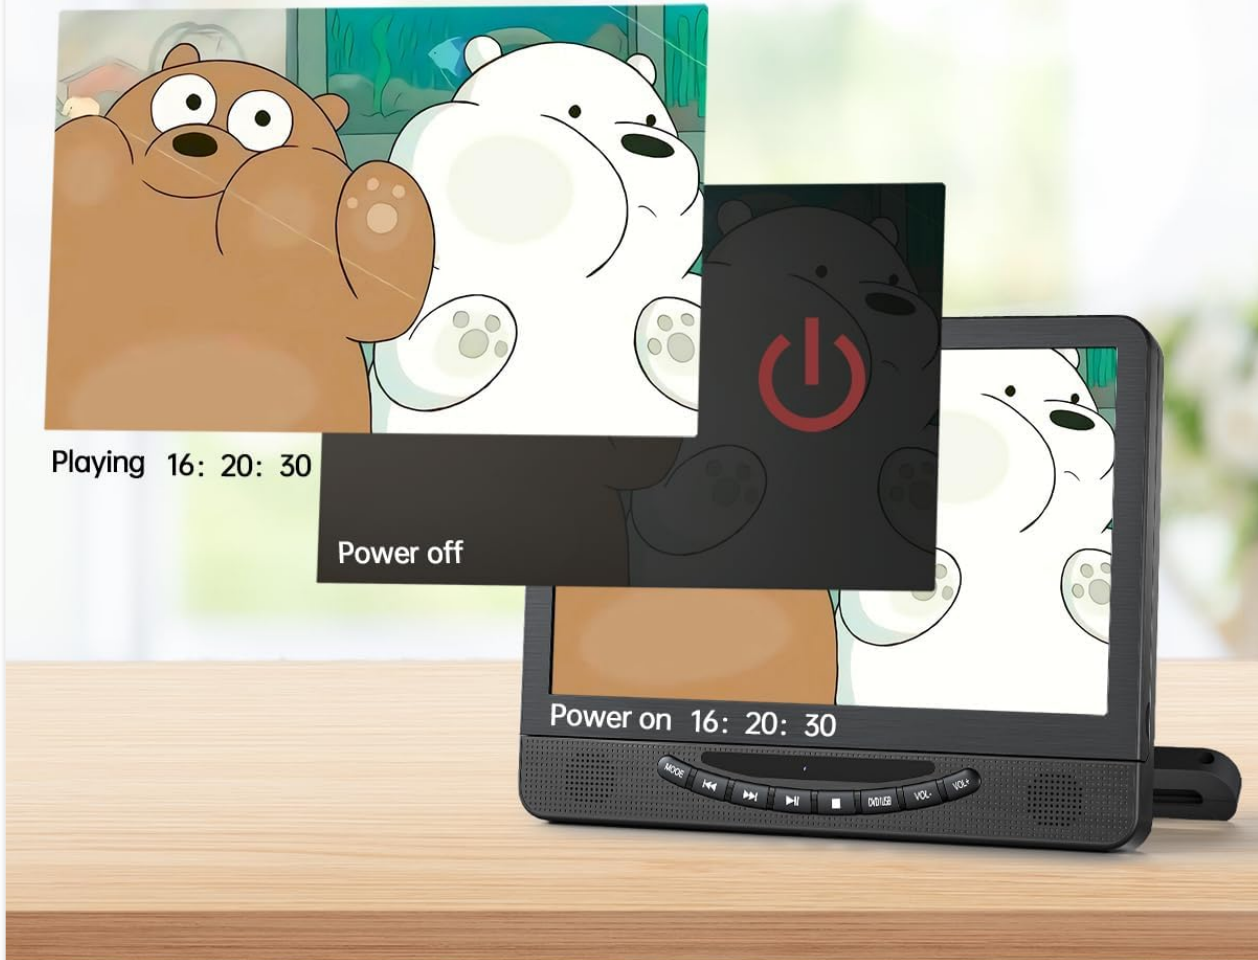

Video Formats:

VOB / AVI/ FLV / DAT / XVID/
DIVX / MPEG 1, MPEG 2



DVD Formats:

DVD, CD, VCD, SVCD, DVD±R,
DVD±RW, CD±R, CD±RW
(Blu-Ray not supported)



Audio Formats:

MP3, WMA



Image Formats:

JPG/JPEG

Image Description: This image visually explains the 'Last Memory' feature, showing how the player remembers the exact point a movie was stopped and resumes from there upon restart. It also lists the various video, DVD, audio, and image formats supported by the device.

6. MAINTENANCE

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. Do not use abrasive cleaners or solvents.
- **Cleaning the Unit:** Wipe the exterior of the player with a soft, dry cloth.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches to ensure smooth playback. Store discs in their cases when not in use.

- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. If storing the device for an extended period, charge the battery to about 50% every few months.
- **Storage:** Store the DVD player in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your FELEMAN DVD player, please refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|-----------------------------|--|--|
| No power | Battery drained; Power adapter/car charger not connected properly; Power button not pressed. | Charge the battery; Ensure power connections are secure; Press and hold the power button. |
| No disc playback | Disc inserted incorrectly; Disc is dirty or scratched; Incompatible disc format. | Reinsert disc label side up; Clean or replace disc; Ensure disc is a supported format (not Blu-ray). |
| No sound | Volume too low; Mute function activated; Headphone connected. | Increase volume; Deactivate mute; Disconnect headphones if using speakers. |
| Image distortion/No picture | Loose AV/HDMI cable; Incorrect input source selected; Disc/file corruption. | Check all cable connections; Select correct input source (AV, HDMI, Disc, USB); Try a different disc/file. |
| Remote control not working | Batteries drained; Obstruction between remote and player; Remote sensor blocked. | Replace remote batteries; Remove any obstructions; Ensure remote is pointed at the player's sensor. |

If the problem persists after trying these solutions, please contact FELEMAN customer support for further assistance.

8. SPECIFICATIONS

| Feature | Specification |
|-----------------------------|--|
| Brand | FELEMAN |
| Model Number | Dual Screen with HD |
| Screen Size | 12 Inches (31 cm visible diagonal) |
| Display Type | LED |
| Display Resolution | 1080P Full HD |
| Supported Disc Formats | DVD, CD, VCD, SVCD, CD-R/+R, CD-RW/+RW, DVD-R/+R, DVD-RW/+RW (Blu-Ray not supported) |
| Supported USB Video Formats | VOB, AVI, FLV, DAT, DIVX, XVID, MPEG1, MPEG2 (max 32GB FAT32, 720*576 pixel) |

| Feature | Specification |
|-----------------------------|---|
| Supported USB Audio Formats | MP3, WMA |
| Supported USB Image Formats | JPG, JPEG |
| HDMI Input | Yes (1080P sync, input only) |
| Battery Type | 2 Lithium Ion batteries (included) |
| Battery Life | Approx. 5 hours |
| Power Supply | Built-in battery, Car Charger, AC Adapter |
| Item Weight | 7.39 pounds (3.36 Kilograms) |
| Package Dimensions | 17.4 x 10.12 x 5.59 inches |

9. WARRANTY AND SUPPORT

FELEMAN products are designed for reliability and performance. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included in your package or contact FELEMAN customer support. For technical support, troubleshooting assistance, or warranty claims, please contact FELEMAN customer service through the contact information provided in your product documentation or on the official FELEMAN website.