

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [FLEXISPOT](#) /

› [FLEXISPOT XR7 Power Swivel Recliner Chair Instruction Manual](#)

FLEXISPOT XR7

FLEXISPOT XR7 Power Swivel Recliner Chair Instruction Manual

1. PRODUCT OVERVIEW

The FLEXISPOT XR7 Power Swivel Recliner Chair is designed for comfort and versatility, featuring a 155° infinite position power recline, smooth 30° rocking, and 270° silent swivel. Crafted with OEKO-TEX STANDARD 100 certified faux leather, it offers durability and easy maintenance. Its oversized, armless design provides ample space, supporting up to 350 lbs, making it suitable for various settings including living rooms, bedrooms, and nurseries.



Image 1: The FLEXISPOT XR7 Power Swivel Recliner Chair in Beige.

2. KEY FEATURES

- **Nursery-Ready Swivel & Rocking:** Enjoy a 155° infinite position power recline, 30° smooth rocking, and 270° silent swivel (below 25dB), ideal for nursing and relaxation.
- **German Certified Fabric & Award-Winning Design:** Made with OEKO-TEX STANDARD 100 certified materials, ensuring quality and safety. The FlexiSpot Lotus Series design has been honored with the Muse Design Award.
- **Cross-Legged Comfort & Oversized Seat:** The 40.95" wide armless design offers 30% more hip space than standard recliners, perfect for various sitting positions.
- **350 Lbs Proven Support:** Features an overbuilt steel frame and hardwood base, tested over 10,000 times for durability and stability.
- **Easy Clean PU Leather:** The wipeable faux leather resists water stains and is breathable, soft, and easy to maintain.
- **Integrated USB & Type-C Charging:** Conveniently located ports for charging your devices while you relax.

- **Hidden Storage:** A discreet side pocket provides convenient storage for remotes, books, or other small items.



Image 2: Features of the FLEXISPOT XR7's faux leather material, highlighting water-resistance, breathability, and wear-resistance.



Image 3: Visual representation of the overstuffed backrest, hidden storage compartment, and integrated USB and Type-C charging ports.

3. SETUP AND ASSEMBLY

The FLEXISPOT XR7 recliner is delivered in two boxes and is designed for quick and easy assembly. Please allow 48 hours for the chair to fully expand after unpacking.

1. Unpack all components from both boxes.
2. Follow the included assembly instructions to connect the backrest to the base.
3. Ensure all connections are secure before use.
4. Plug the power cord into a suitable electrical outlet for electric models.

Your browser does not support the video tag.

Video 1: This video demonstrates the assembly process and highlights the swivel, rocking, and recline functions of the chair.

4. OPERATING INSTRUCTIONS

4.1 Reclining

For electric models, use the integrated buttons on the side of the chair to smoothly adjust the recline angle and footrest position. For manual models, pull the lever located on the side to release the footrest and lean back to recline.

 


Image 4: The chair offers custom comfort for various activities like reading, watching TV, and napping, with an effortless power recline feature.

4.2 Swivel and Rocking

The chair features a 270° silent swivel and a gentle 30° rocking motion. Simply shift your weight or use your feet to initiate rocking or swivel to your desired direction.

4.3 Charging Devices

Electric models include built-in USB and Type-C charging ports on the side panel. Connect your devices to these ports for convenient charging.

Your browser does not support the video tag.

Video 2: This video showcases the chair's convenient features, including its comfortable recline and spacious design.

5. MAINTENANCE

5.1 Cleaning the Faux Leather

The faux leather upholstery is designed for easy cleaning. Simply wipe gently with a damp cloth to remove spills and maintain its pristine appearance. Avoid harsh chemicals or abrasive cleaners.

5.2 General Care

Regularly inspect all connections and moving parts to ensure they are secure. Avoid placing the chair in direct sunlight for prolonged periods to prevent material degradation.

6. TROUBLESHOOTING

6.1 Recliner Not Operating (Electric Model)

- Ensure the power cord is securely plugged into both the chair and a working electrical outlet.
- Check for any kinks or damage in the power cord.
- Verify that the wall outlet is functional by plugging in another device.

6.2 Footrest Not Extending/Retracting (Manual Model)

- Ensure the release lever is fully engaged when attempting to extend or retract the footrest.
- Apply gentle pressure to the footrest with your legs to assist in retraction if needed.

6.3 Squeaking or Noise During Operation

- Apply a silicone-based lubricant to any visible pivot points or metal-on-metal contact areas in the reclining mechanism.
- Ensure all assembly bolts are tightened securely.

7. SPECIFICATIONS

Feature	Detail
Brand	FLEXISPOT
Model Name	XR7
Color	Beige Pu
Material	Faux Leather, Foam, Metal Frame
Product Dimensions (D x W x H)	39.37"D x 40.95"W x 40.55"H
Item Weight	100.5 Pounds
Maximum Weight Recommendation	350 Pounds
Reclining Position Count	2 (Infinite power recline)
Swivel Angle	270°

Rocking Angle	30°
Included Components	Cushion
UPC	840460466479

LOCK IN COMFORT



Effortless Power Recline

Lock In Comfort,
No Bounce Back



Manual Recline

Need To Use Upper Body
Weight To **Press**



Image 5: Detailed dimensions of the FLEXISPOT XR7 Power Swivel Recliner Chair.

8. WARRANTY AND SUPPORT

FLEXISPOT offers a 30-day return/exchange policy from the date of receipt. For any inquiries or assistance, our gold-standard customer service team is available 24/7.

- **Customer Service Email:** contact@flexispot.com
- **Customer Service Phone:** +1(855)585-5618
- **Online Support:** Visit the [FLEXISPOT Store on Amazon](#) for additional resources and FAQs.

