

SoBuy FSR110-W

SoBuy FSR110-W 3-Drawer Shoe Cabinet Instruction Manual

Model: FSR110-W | Brand: SoBuy

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your SoBuy FSR110-W 3-Drawer Shoe Cabinet. Please read these instructions carefully before beginning assembly and retain them for future reference.

SAFETY INFORMATION

- Always assemble the product on a soft, clean surface to prevent scratches.
- Ensure all parts are present and undamaged before assembly. Do not proceed with assembly if any parts are missing or damaged.
- Use only the provided hardware. Substituting hardware may compromise the stability and safety of the unit.
- For safety, it is highly recommended to anchor the shoe cabinet to a wall using the provided anti-tip hardware. This prevents accidental tipping, especially in households with children or pets.
- Do not overload the drawers or the top surface. Refer to the 'Specifications' section for maximum load capacities.
- Keep small parts and packaging materials away from children during assembly.

PACKAGE CONTENTS

Before assembly, verify that all components listed in the packing list (typically included with the physical product) are present. Common components include:

- Wooden panels (sides, top, bottom, back, drawer fronts)

- Drawer mechanisms and hardware
- Handles
- Assembly screws, dowels, and connectors
- Anti-tip hardware (wall anchor strap, screws)
- Assembly instructions (detailed diagrams)

Tools typically required for assembly (not included): Phillips head screwdriver, hammer, drill (for wall anchoring).

SETUP (ASSEMBLY INSTRUCTIONS)

The SoBuy FSR110-W shoe cabinet is designed for self-assembly. Follow the detailed step-by-step diagrams and instructions provided in the separate assembly manual included with your product. General steps include:

1. **Prepare the Workspace:** Clear a spacious, clean, and soft area for assembly.
2. **Identify Parts:** Lay out all components and hardware, matching them with the parts list.
3. **Assemble the Main Frame:** Connect the side panels to the bottom and top panels using the specified hardware.
4. **Install Back Panel:** Secure the back panel to the main frame.
5. **Assemble Drawers:** Construct each of the three flip-drawers according to the instructions.
6. **Install Drawers:** Insert the assembled drawers into the cabinet frame. Ensure they operate smoothly.
7. **Attach Handles:** Secure the handles to the front of each drawer.
8. **Wall Anchoring:** Position the cabinet in its desired location. Using the provided anti-tip hardware, secure the cabinet to a solid wall. This step is crucial for stability and safety.



Image: The fully assembled SoBuy FSR110-W shoe cabinet, shown in a hallway next to a smaller storage bench. The cabinet is white with three flip-down drawers and silver handles.



Image: A technical diagram illustrating the dimensions of the SoBuy FSR110-W shoe cabinet. The cabinet measures 60cm (W) x 24cm (D) x 115cm (H). Each drawer front is approximately 34cm high, and the base is 8cm high.

OPERATING (USAGE)

The SoBuy FSR110-W shoe cabinet is designed for efficient shoe storage in narrow spaces.

- **Opening Drawers:** Gently pull the handle of a drawer to flip it open. The drawer will tilt forward, revealing two rows for shoe placement.
- **Storing Shoes:** Place shoes into the designated rows within each drawer. The design

accommodates various shoe sizes, typically holding two pairs per row, depending on shoe type and size.

- **Closing Drawers:** Push the drawer back into the cabinet until it is fully closed and flush with the cabinet front.
- **Top Surface:** The top surface of the cabinet can be used for decorative items or small essentials like keys, wallets, or mail. Do not place heavy objects on the top surface exceeding the specified load capacity.



Image: A close-up view of one of the flip-down drawers of the SoBuy FSR110-W shoe cabinet, shown open with white sneakers stored in both the upper and lower compartments of the drawer.

MAINTENANCE

Proper care will ensure the longevity and appearance of your shoe cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner. Dry immediately with a clean cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or polishes containing silicone, as these can damage the finish.
- **Regular Checks:** Periodically check all screws and fasteners to ensure they are tight. Re-tighten if

necessary to maintain stability.

- **Sunlight and Heat:** Avoid prolonged exposure to direct sunlight or extreme heat, which can cause discoloration or warping.

TROUBLESHOOTING

Issue: Cabinet feels wobbly or unstable.

Solution: Ensure all assembly screws are fully tightened. Verify that the cabinet is placed on a level surface. Confirm that the anti-tip hardware is securely installed and anchored to the wall.

Issue: Drawers do not open or close smoothly.

Solution: Check for any obstructions inside the drawer mechanism or along the tracks. Ensure the drawer components were assembled correctly according to the manual. Verify that the cabinet itself is square and not twisted.

Issue: Missing or damaged parts.

Solution: Do not attempt to assemble the unit. Contact SoBuy customer support immediately for assistance.

SPECIFICATIONS

Feature	Detail
Model Number	FSR110-W
Dimensions (W x D x H)	60 cm x 24 cm x 115 cm (23.62" x 9.45" x 45.28")
Material	Particle board, MDF
Color	White
Item Weight	21.4 kg (47.18 lbs)
Maximum Load Capacity (Top Surface)	25 kg (55 lbs)
Number of Drawers	3

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact SoBuy customer support:

Email: uk@sobuy-shop.com

Please have your model number (FSR110-W) and purchase information ready when contacting support.