

## Desview P17

# Desview P17 Teleprompter User Manual

Model: P17

## 1. INTRODUCTION

---

The Desview P17 Teleprompter is a professional-grade device designed to assist with video production by displaying scripts directly in the line of sight of the camera lens. Constructed from durable aluminum alloy, it features a 17-inch high-definition beam splitter glass, ensuring clear text visibility without obstructing the camera's view. This teleprompter is compatible with a wide range of devices, including DSLR cameras, mirrorless cameras, camcorders, iPads, tablets, and smartphones, making it a versatile tool for various video recording scenarios. Its design emphasizes ease of use, with no complex assembly required, and includes a dedicated carrying case for portability and protection.

## 2. WHAT'S IN THE BOX

---

- Teleprompter body
- Bluetooth Remote Control
- Cleaning Cloth
- User Manual
- Carry Case
- Detachable Sun Hood
- Camera Mounting Plate (with 1/4" and 3/8" screws)
- Tablet/Smartphone Holder

# High Definition Beam Splitter

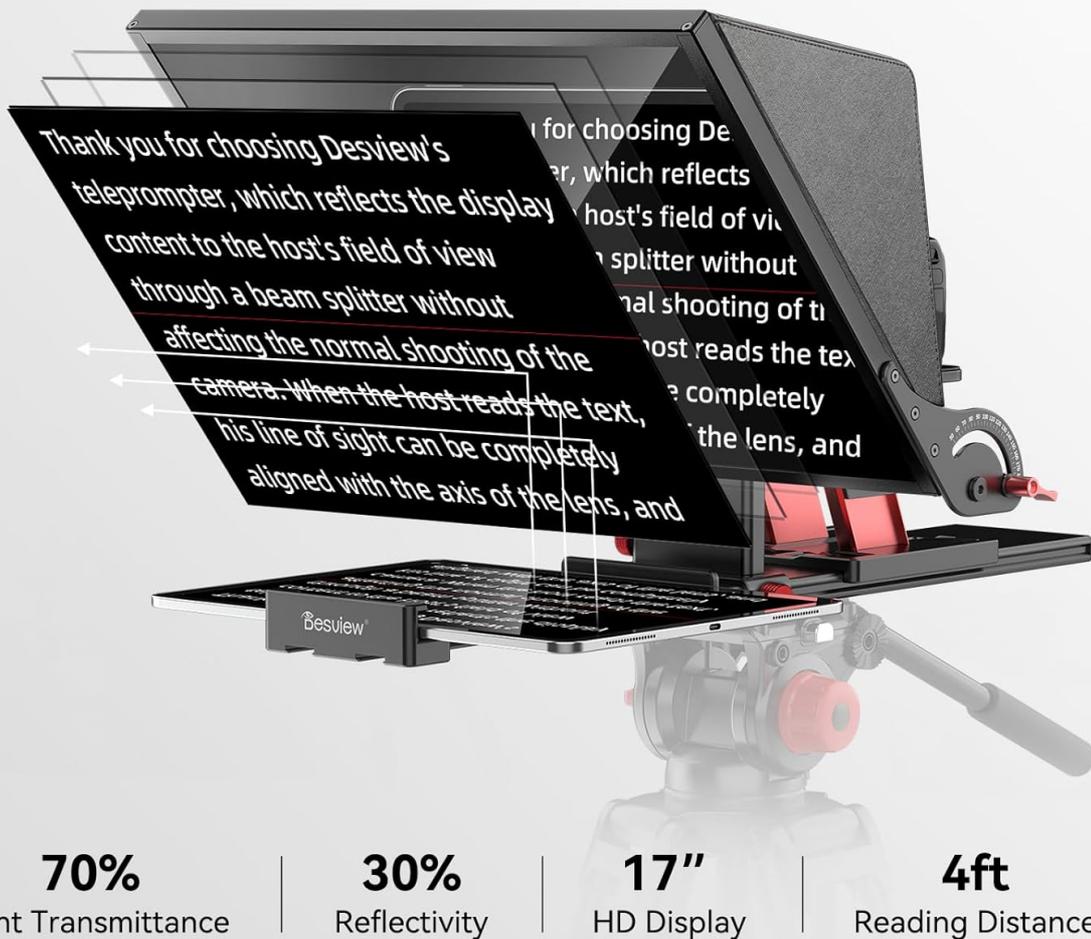


Image: Contents of the Desview P17 Teleprompter package, including the main unit, remote, and accessories.

## 3. KEY FEATURES

- **Wide Compatibility:** Supports DSLR/mirrorless cameras, camcorders, iPads, tablets (up to 15 inches), and smartphones.
- **High-Definition Display Mirror:** Features industry-standard 7H hardness beam split glass with 70/30 visible light transmission for clear text reading even in bright conditions.
- **Remote & App Control:** Includes a Bluetooth remote for controlling text scrolling, speed, and other settings via the free "Desview" app (available on App Store and Google Play).
- **Wider Angle Shooting:** Designed to support 35mm horizontal and vertical shooting without vignetting, adaptable to various camera lenses with a detachable sun hood.
- **Durable Construction:** Made from premium aluminum alloy for a sturdy and professional feel, ensuring longevity and stability.
- **Portability:** Comes with a padded carry case for easy and safe transport.

## 4. SETUP

### 4.1 Unpacking and Initial Assembly

1. Remove the teleprompter from its included carry case. The unit is designed for quick setup.
2. Mount the teleprompter onto a tripod using the bottom screw. Ensure it is securely fastened.
3. Unfold the teleprompter unit and adjust the mirror angle as needed.

## No Assembly Needed



1 Remove from the case



2 Mount it to a tripod via the bottom screw




3 Unfold it and use

Image: Visual guide for the initial setup of the teleprompter, showing it being removed from its case, mounted on a tripod, and unfolded.

### 4.2 Attaching Your Device (Tablet/Smartphone)

- Extend the telescopic handle on the teleprompter's base.
- Place your iPad, tablet, or smartphone (up to 15 inches) onto the holder. Adjust the clamp tension to secure the device.

# Supports Smartphones and Tablets Up to 12.9 inches

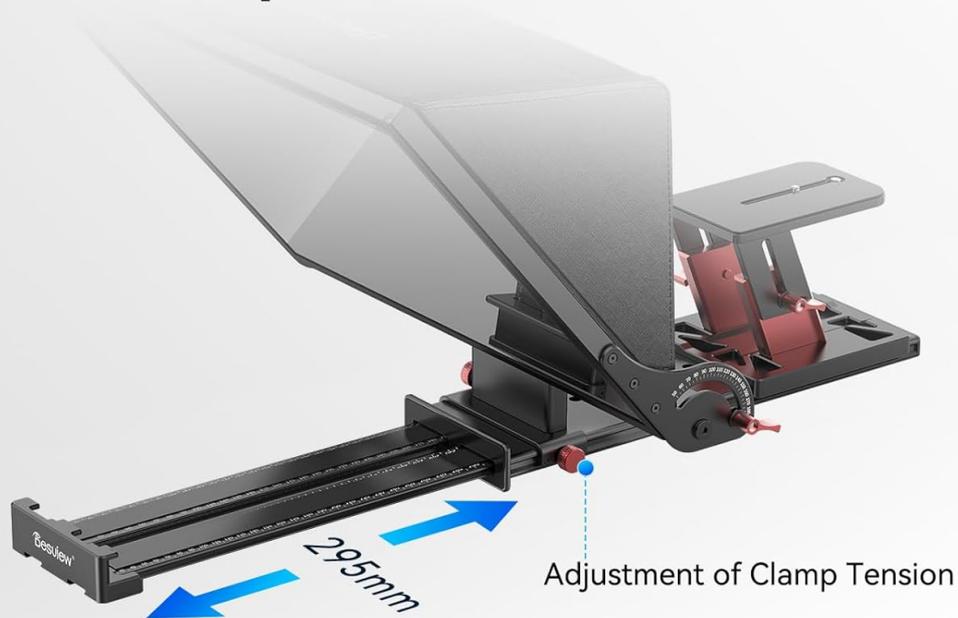

Compatible with Smartphones



Compatible with iPad /iPad Air/iPad Pro 11"



Compatible with iPad Pro 12.9"

Image: The teleprompter's base with an extended holder, demonstrating compatibility with different mobile devices.

## 4.3 Mounting Your Camera

- Attach your DSLR, mirrorless camera, or camcorder to the camera mounting plate. The plate supports both 1/4" and 3/8" screws.
- Adjust the camera's height and position using the red knobs to ensure the lens is centered with the beam splitter glass.
- Secure the camera within the detachable sun hood to prevent light leakage and ensure clear reflection.

# Adjustable Aluminum Alloy Construction

Suitable for various prompting and shooting devices



Image: A DSLR camera mounted on the teleprompter, highlighting the adjustable aluminum alloy construction for optimal positioning.

## Support DSLR Camera Horizontal/Vertical Shooting

**Note:** Vertical L-bracket is not included



Horizontal Shooting Mode



Vertical Shooting Mode

Image: The teleprompter configured for both horizontal and vertical DSLR camera shooting, demonstrating its versatility.

## 5. OPERATING INSTRUCTIONS

---

## 5.1 App Download and Connection

- Download the free "Desview" app from the App Store (iOS) or Google Play (Android) on your tablet or smartphone.
- Pair the included Bluetooth remote control with your device.

# Supports Wide-angle Shooting

It supports wide-angle lenses with a focal length of not less than 35 mm.



Image: The Desview app displayed on a tablet, illustrating text input and control features, alongside the Bluetooth remote.

## 5.2 Using the Teleprompter App and Remote

- Input or copy your script into the Desview app.
- Use the Bluetooth remote to control text scrolling (up/down), playback speed, pause, and adjust text size, font, and background color.
- The app supports multi-language playback and adapts to your phone's system language.

Your browser does not support the video tag.

Video: Demonstration of the Desview Teleprompter APP features, including text input, scrolling, and customization options.

Your browser does not support the video tag.


Video: Overview of the Desview P17 Teleprompter in action, showcasing its ease of use and functionality with a tablet and remote.

## 5.3 Wide-Angle Shooting

The teleprompter is designed to support wide-angle lenses with a focal length of not less than 35mm, ensuring a broader field of view without vignetting. The detachable sun hood helps to optimize the shooting environment.

# Teleprompter APP+Bluetooth

Teleprompter APP(iOS&Android) for smartphone/tablet can control to turn the page,pause,speed up down,change the text and background color

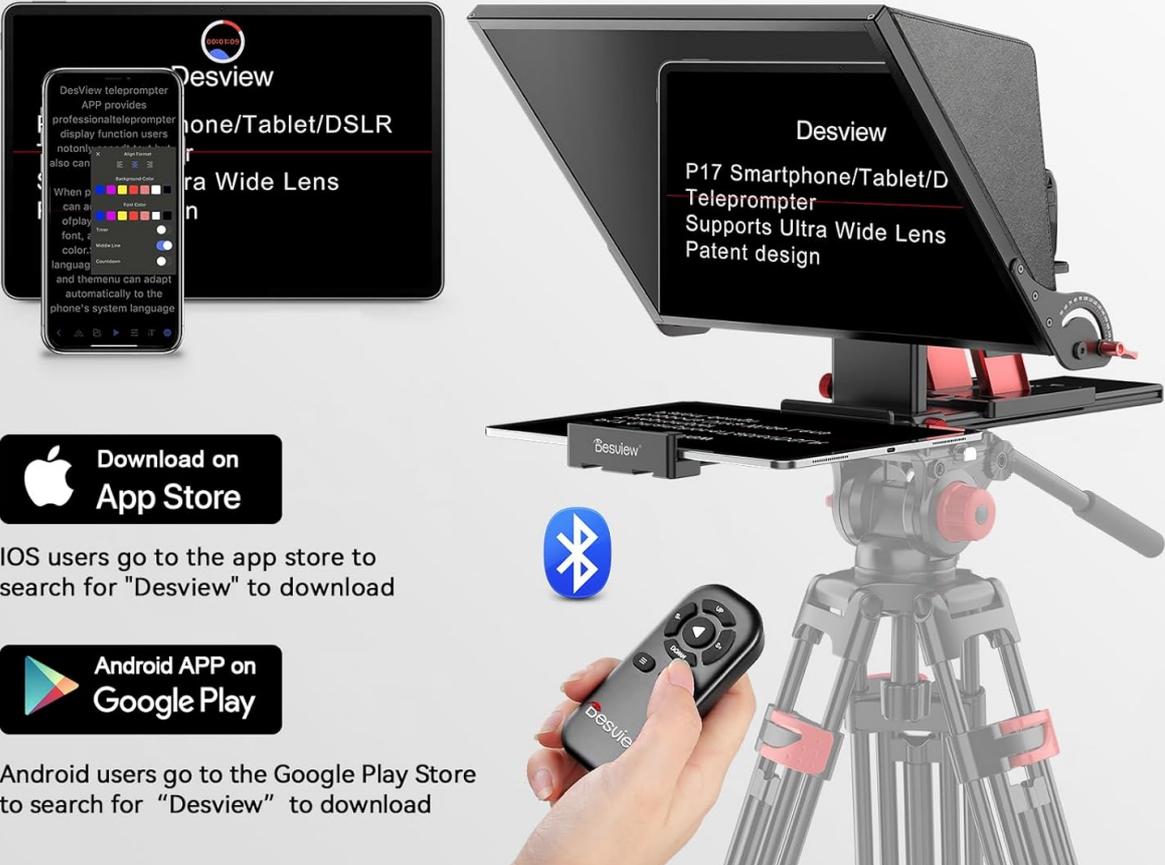

 **Download on App Store**

IOS users go to the app store to search for "Desview" to download

 **Android APP on Google Play**

Android users go to the Google Play Store to search for "Desview" to download

Image: Visual comparison demonstrating the enhanced wide-angle shooting capability when using the Desview P17 Teleprompter.

## 6. MAINTENANCE

- **Cleaning the Glass:** Use the provided cleaning cloth or a soft, lint-free cloth with a mild glass cleaner to gently wipe the beam splitter glass. Avoid abrasive materials that could scratch the surface.
- **General Cleaning:** Wipe down the aluminum alloy body and fabric components with a dry or slightly damp cloth.
- **Storage:** Always store the teleprompter in its dedicated carry case when not in use to protect it from dust, scratches, and impacts.
- **Battery Replacement:** Replace the AAA batteries in the Bluetooth remote control as needed to ensure optimal performance.

## 7. TROUBLESHOOTING

---

- **Text not clear/ghosting:** Ensure the beam splitter glass is clean. Adjust the lighting in your shooting environment. Verify that your camera lens is properly aligned with the glass.
- **Remote not connecting:** Check if the remote's batteries are charged and correctly inserted. Ensure Bluetooth is enabled on your device and attempt to re-pair the remote.
- **Vignetting (dark corners in video):** Confirm that your camera lens is not wider than 35mm. Adjust the camera's position and height to ensure it is centered and not obstructed by the teleprompter's housing or sun hood.
- **App issues:** Ensure the Desview app is updated to the latest version. Restart the app or your device if functionality issues persist.

## 8. SPECIFICATIONS

---

Feature	Detail
Model Number	P17
Display Size	17 inches (compatible with tablets up to 15 inches)
Material	Premium Aluminum Alloy
Beam Splitter Glass	7H Hardness, 70/30 Visible Light Transmission
Compatibility	DSLR/Mirrorless Cameras, Camcorders, iPads, Tablets, Smartphones
Control	Bluetooth Remote, "Desview" App (iOS/Android)
Wide-Angle Support	Lenses $\geq$ 35mm focal length (no vignetting)
Item Weight	9.55 pounds
Package Dimensions	18.54 x 18.07 x 6.02 inches

## 9. WARRANTY AND SUPPORT

---

For warranty information, technical support, or service inquiries, please refer to the documentation included with your product or visit the official Desview website. Keep your purchase receipt for warranty claims.