



[Manuals.plus](#) /

> [CAMKORY](#) /

> CAMKORY DC101 Digital Camera User Manual

CAMKORY DC101

CAMKORY DC101 Digital Camera User Manual

Model: DC101

1. INTRODUCTION

Thank you for choosing the CAMKORY DC101 Digital Camera. This compact and versatile camera is designed for ease of use, making it ideal for daily photography, travel, and vlogging. It features autofocus, flash, and 4K video capabilities to help you capture high-quality memories.

2. PRODUCT FEATURES

- **48 MP Still Resolution:** Capture clear and detailed photographs.
- **4K Ultra HD Video:** Record high-resolution videos at 2160p.
- **Autofocus and Built-in Flash:** Ensures clear images in various lighting conditions.
- **16X Digital Zoom:** Zoom in on distant subjects with clarity.
- **3-inch Flip-out LCD Screen:** Perfect for selfies and vlogging, offering flexible viewing angles.
- **Compact and Portable Design:** Weighing only 0.6 lbs, it's easy to carry for travel.
- **Multiple Shooting Modes:** Includes Automatic, Macro, Movie, and Panorama.
- **USB Connectivity:** For easy photo transfer and webcam functionality.

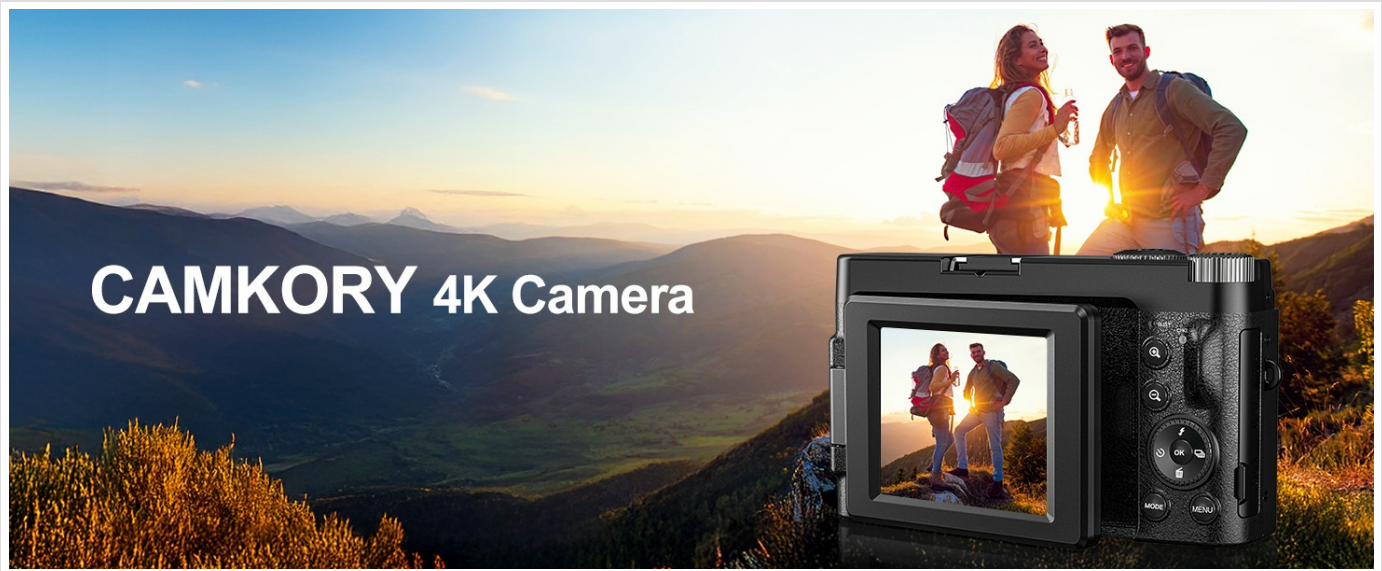


Image: The CAMKORY DC101 Digital Camera features 4K Ultra HD Video for sharp and bright recordings.



Image: The camera offers 48MP UHD Photography with accurate autofocus for clearer, richer, and more detailed images.

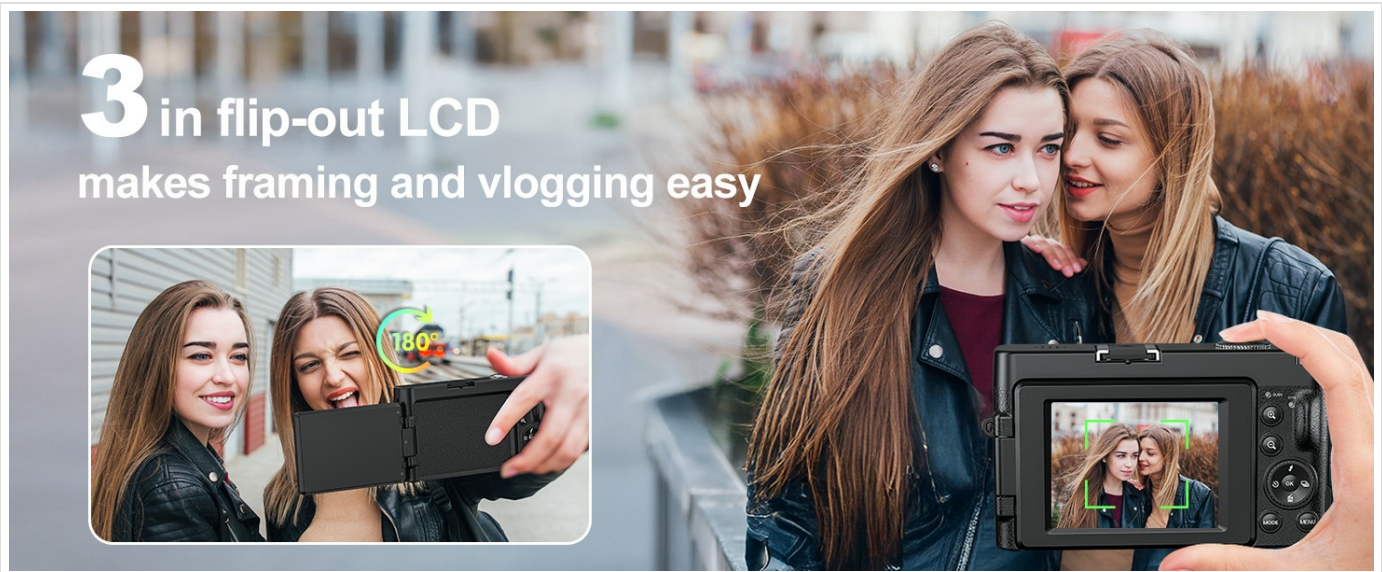


Image: The 3-inch flip-out LCD screen makes framing and vlogging easy.

3. WHAT'S IN THE BOX

Your CAMKORY DC101 Digital Camera package includes:

- CAMKORY DC101 Digital Camera Body
- User Manual
- Two Lithium-Ion Batteries
- Battery Charger
- 32GB Memory Card
- Lanyard
- Cleaning Cloth
- Power Adapter
- Type-C USB Cable



Image: The complete accessory set for the CAMKORY DC101 Digital Camera.

4. SETUP

4.1. Battery Installation

1. Open the battery compartment cover located on the bottom of the camera.
2. Insert a fully charged Lithium-Ion battery, ensuring correct polarity.
3. Close the battery compartment cover securely.

4.2. Memory Card Installation

1. Locate the memory card slot, usually near the battery compartment.
2. Insert the provided 32GB Micro SD card into the slot until it clicks into place.
3. For first-time use, it is recommended to format the memory card through the camera's menu settings.

4.3. Initial Power On

1. Press and hold the power button (usually located on the top or back of the camera) until the screen illuminates.
2. The camera will display a "WELCOME" message.
3. Follow on-screen prompts to set the date, time, and preferred language.

5. OPERATING THE CAMERA

5.1. Basic Photography

1. Turn on the camera and ensure the lens cover is removed.
2. Frame your shot using the 3-inch flip-out LCD screen.
3. Press the shutter button halfway down to activate autofocus. The focus frame will appear on the screen.
4. Press the shutter button fully to capture the image.

5.2. Video Recording

1. Switch the camera to video mode using the mode dial or menu option.
2. Press the record button to start recording. A red indicator will typically appear on the screen.
3. Press the record button again to stop recording.

5.3. Using the Flip Screen

The 3-inch LCD screen can be flipped out and rotated, allowing for various shooting angles, including self-portraits and vlogging. Adjust the screen to your desired position for optimal viewing.

5.4. Zoom Function

Use the zoom controls (often labeled 'W' for Wide and 'T' for Telephoto) to adjust the 16X digital zoom. This allows you to magnify your subject without physically moving closer.

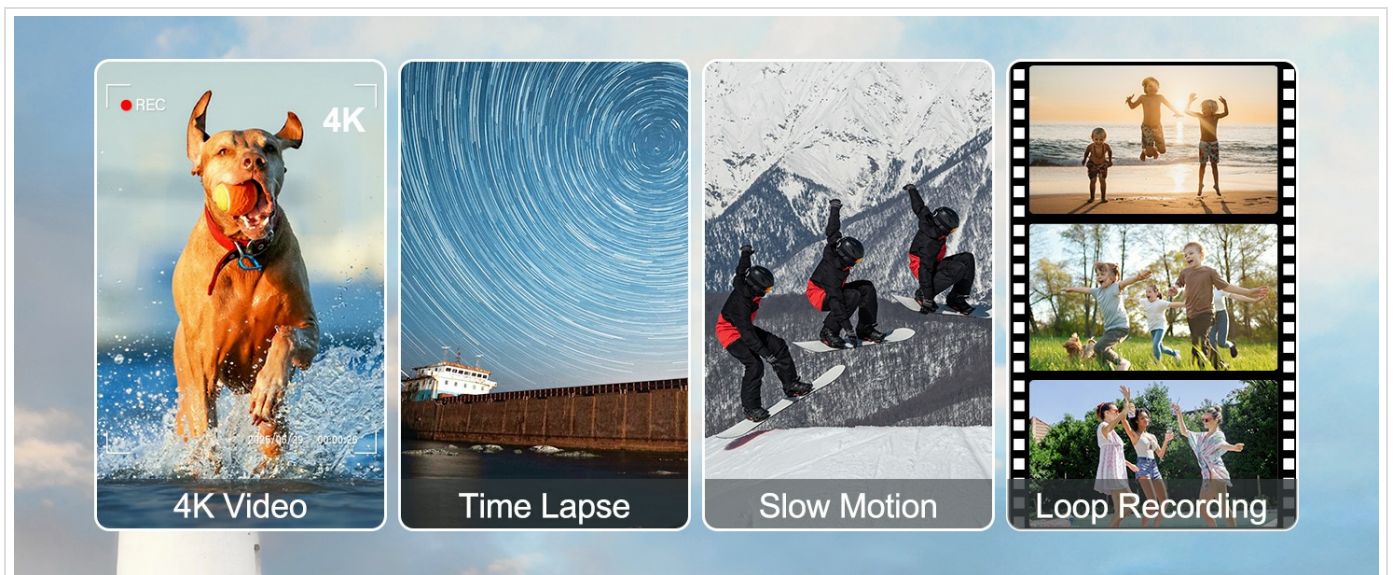


Image: The 16X digital zoom allows capturing distant objects with clear detail.

5.5. Connecting to a Computer

Connect the camera to your computer using the provided Type-C USB cable. The camera can function as a mass storage device for photo/video transfer or as a webcam for live streaming and video calls.

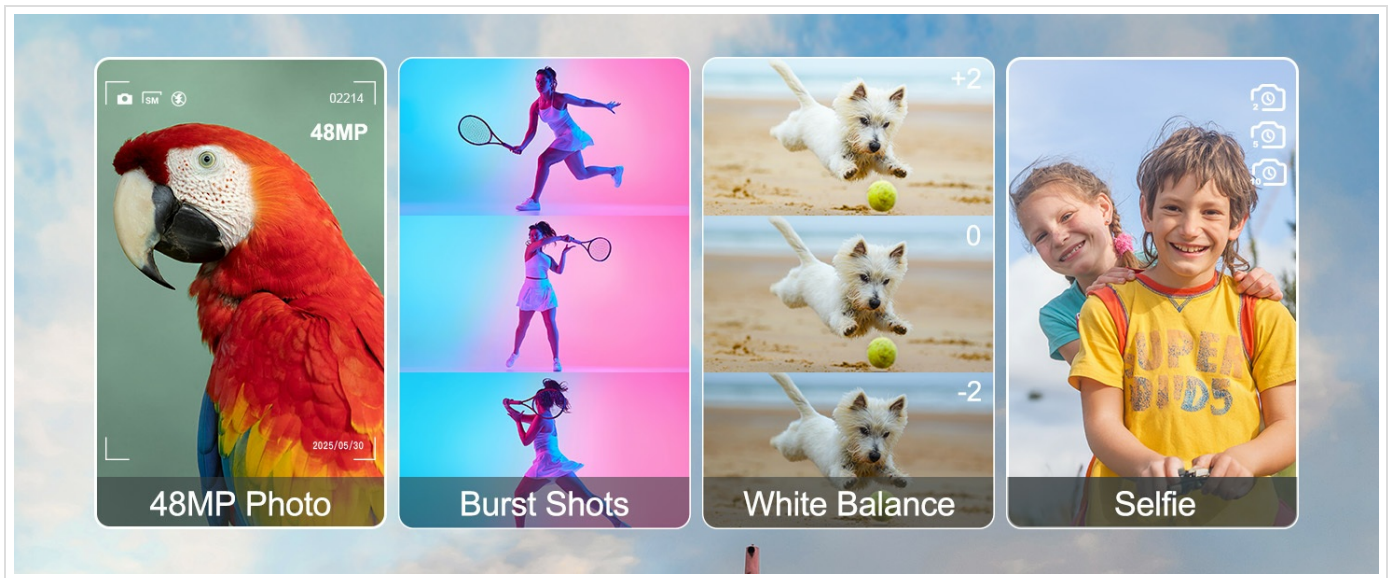


Image: USB connection for webcam use and image transfer.

5.6. Shooting Modes and Settings

Access various shooting modes and settings through the camera's MENU button. Available modes include:

- **Automatic:** For general point-and-shoot convenience.
- **Macro:** For close-up photography.
- **Movie:** For video recording.
- **Panorama:** For wide-angle shots.

Additional settings include:

- **Exposure Control:** Automatic adjustment for brightness.
- **White Balance:** Options like Auto, Cloudy, Daylight, Sunset, Tungsten to adjust color temperature.
- **Self Timer:** Set delays of 10 seconds for timed shots.
- **Image Stabilization:** Digital image stabilization helps reduce blur.
- **Flash:** Built-in flash for low-light conditions.

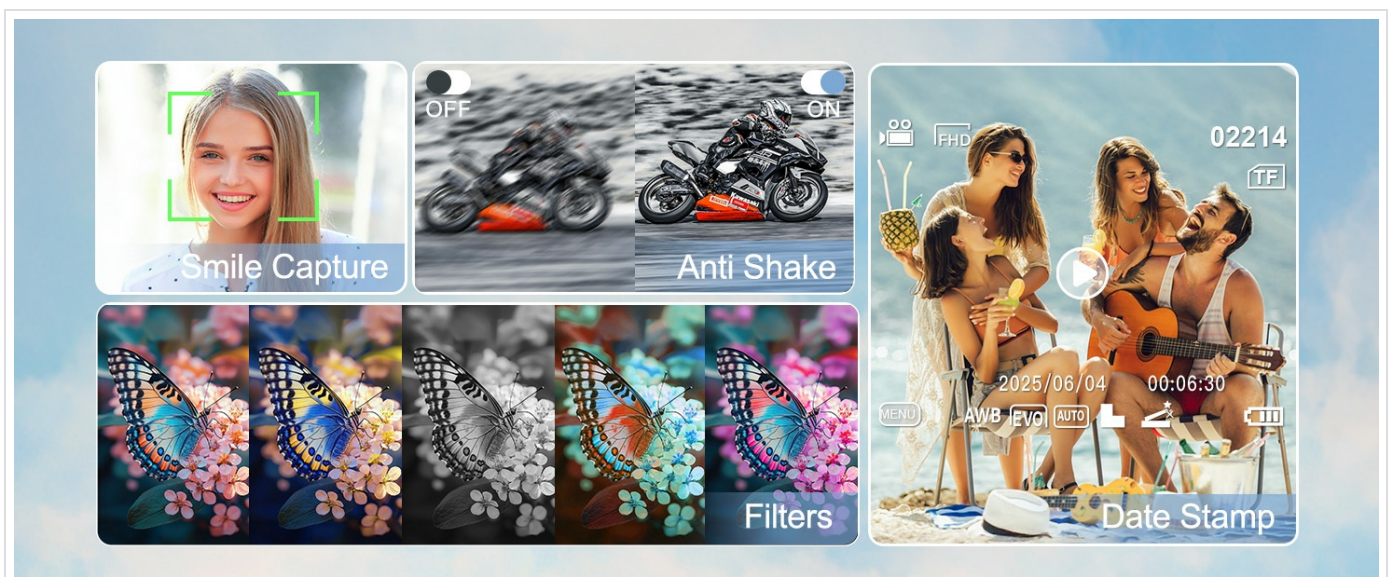


Image: Explore creative shooting options like 4K Video, Time Lapse, Slow Motion, and Loop Recording.

Compact & Portable

30% smaller than heavyduty camera,
perfect & take everywhere camera.



Image: Enhance your photos with features like 48MP Photo, Burst Shots, White Balance, and Selfie mode.

6. MAINTENANCE

6.1. Cleaning the Camera

Use the provided cleaning cloth to gently wipe the camera body and lens. Avoid using harsh chemicals or abrasive materials that could damage the camera's surface or optics.

6.2. Battery Care

To prolong battery life, fully charge batteries before use and store them in a cool, dry place when not in use. The camera comes with two batteries and a dedicated charger for extended usage.

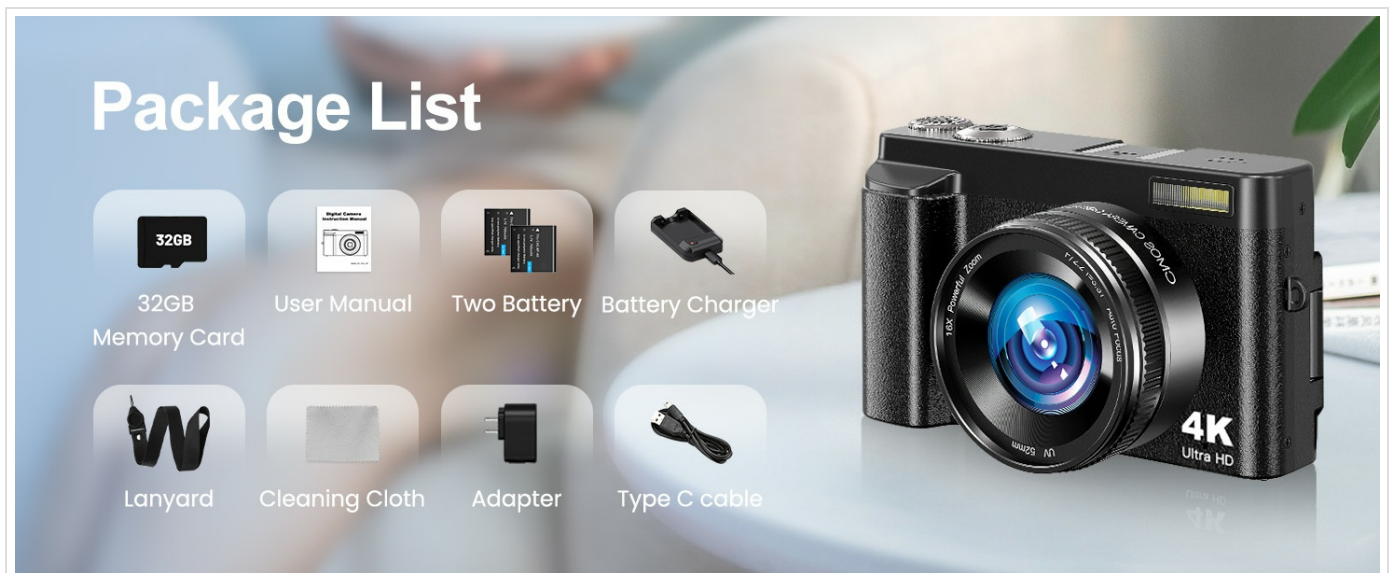


Image: The camera includes extra batteries and a charger to ensure continuous power.

7. TROUBLESHOOTING

If you encounter issues with your CAMKORY DC101 Digital Camera, please refer to the following common solutions:

- **Camera not turning on:** Ensure the battery is fully charged and correctly inserted.
- **Images are blurry:** Check that autofocus is enabled and the lens is clean. Ensure sufficient lighting.
- **Memory card error:** Reinsert the memory card. If the issue persists, try formatting the card (this will erase all data)

or use a different compatible card.

- **Cannot connect to computer:** Verify the USB cable is securely connected to both the camera and the computer. Try a different USB port or cable.
- **Short battery life:** Ensure batteries are fully charged. Reduce screen brightness or turn off unnecessary features to conserve power.

For further assistance, please contact CAMKORY customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	CAMKORY
Model Name	J-DC10AF
Model Number	DC101
Maximum Webcam Image Resolution	48 MP
Effective Still Resolution	48 MP
Video Resolution	2160p (4K)
Optical Zoom	16 x
Digital Zoom	16 x
Image Stabilization	Digital
Photo Sensor Technology	CMOS
Screen Size	3 Inches
Display Type	LCD
Focus Type	Auto Focus
Camera Flash	Built-In
Supported File Format	AVI
Memory Storage Capacity	32 GB (External-Memory Size)
Battery Type	Lithium Ion AA (2 included)
Connectivity Technology	USB
Shooting Modes	Automatic, Macro, Movie, Panorama
Water Resistance Level	Not Water Resistant

9. WARRANTY AND SUPPORT

9.1. Warranty Information

The CAMKORY DC101 Digital Camera comes with a **One Year Warranty**. Please retain your proof of purchase for warranty claims.

9.2. Customer Support

For any questions, technical support, or warranty inquiries, please visit the [CAMKORY Store on Amazon](#) or refer to the contact information provided in your product packaging.