

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [ECOSELF](#) /

› ECOSELF Cold Press Juicer Instruction Manual

ECOSELF SJ050C Juicer Machines

ECOSELF Cold Press Juicer Instruction Manual

Model: SJ050C Juicer Machines

PRODUCT OVERVIEW

The ECOSELF Cold Press Juicer is designed for efficient and easy juicing of fruits and vegetables, maximizing nutrient retention and minimizing oxidation. Its compact design and large feed chute make it suitable for various kitchen sizes and reduce preparation time.



Image: The ECOSELF Cold Press Juicer in light gray, shown with a full feed chute of green apples, a glass of fresh green juice, and a container of pulp. A recipe book is visible in the background.

Key Features:

- **Large Feed Chute & Compact Design:** Features a 4.35-inch large feed chute and 40oz capacity, allowing for juicing of whole fruits and vegetables without extensive chopping. Its compact size saves counter space.
- **Powerful Motor & Efficient High Yield:** Equipped with a high-power 200W motor that effectively separates pulp from juice, ensuring better-tasting, purer juice. Cold press technology maximizes nutrient retention and reduces oxidation, yielding up to 99.6% juice.

- **Easy to Assemble & Clean:** Designed with a hopper and screen integrated for quick assembly and disassembly. Components (excluding the motor base) are easily rinsed with water, and a cleaning brush is included.
- **One-button Operation & Safety Design:** Simple one-button control for ease of use. Includes a reverse function to prevent clogging. The juicer automatically stops if the cover is opened during operation for enhanced safety.

SETUP

Before first use, ensure all parts are clean. Wash all detachable parts with warm soapy water, rinse thoroughly, and dry. The motor base should only be wiped with a damp cloth.

Assembly Steps:

1. Place the motor base on a stable, flat surface.
2. Insert the auger into the juicing bowl.
3. Attach the juicing bowl assembly onto the motor base, ensuring it clicks into place.
4. Place the hopper onto the juicing bowl.
5. Rotate the hopper clockwise to align the Guidemark with the Lock symbol. Close the hopper cover. Ensure full assembly before plugging in the juicer.



Image: A step-by-step diagram illustrating the assembly process of the ECOSELF juicer, showing how to place the components onto the motor base and secure the hopper.

WARNING: The juicer can only be powered on and work normally after it is fully assembled. Rotate the hopper clockwise to align the Guidemark with the Lock symbol, then close the hopper cover, and ensure full assembly before powering up the juicer.

OPERATING INSTRUCTIONS

Preparing Ingredients:

- Wash all fruits and vegetables thoroughly.
- For high-fiber fruits and vegetables (e.g., celery, ginger), it is recommended to cut them into small pieces before juicing to prevent clogging.
- The large feed chute accommodates whole fruits like apples and oranges, reducing pre-cutting time.

4.35" Extra Large Feed Chute

Less Cutting, Less Pre Time



Orange



Celery



Apple

Image: A close-up of the juicer's 4.35-inch extra large feed chute, filled with various whole fruits and vegetables like apples, oranges, and celery, demonstrating its capacity.

Juicing Process:


1. Ensure the juicer is properly assembled and plugged into a power outlet.
2. Place the juice cup under the juice outlet and the pulp container under the pulp outlet.
3. Turn the control knob to the "ON" position to start the juicer.

4. Slowly feed the prepared fruits and vegetables into the feed chute. The self-feeding mechanism will draw them in.
5. If clogging occurs, turn the control knob to "REV" (Reverse) for a few seconds to clear the obstruction, then return to "ON".
6. Once juicing is complete, turn the control knob to "OFF" and unplug the appliance.

High Power & Low Noise DC Motor



**200W
High Power**

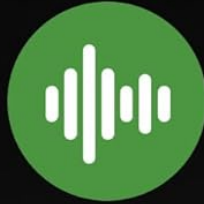

**60 dB
Lower Noise**



**45 rpm
Cold Press**



Image: The ECOSELF juicer with a hand turning the control knob to the "REV" (reverse) position, highlighting the function to clear blockages.

Tip: Only when the hopper cover is open, you can rotate the hopper for disassembly or cleaning. The machine features an automatic safety sensor that will stop working if the cover is opened accidentally while running.

MAINTENANCE & CLEANING

Regular cleaning ensures optimal performance and longevity of your juicer. The ECOSELF juicer is designed for quick and easy cleanup.

Cleaning Steps:

1. Unplug the juicer from the power outlet before cleaning.
2. Disassemble the juicer by rotating the hopper counter-clockwise and removing the components.
3. Rinse all detachable parts (hopper, auger, juicing bowl, juice cup, pulp container) under running water. Use the included cleaning brush to remove any stubborn pulp residue from the screen.
4. For thorough cleaning, wash parts with warm soapy water.
5. Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid.
6. Dry all parts completely before reassembling or storing.



Image: A person rinsing the juicer's detachable parts under running water, demonstrating the ease of cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Juicer does not turn on.	Not properly assembled or plugged in.	Ensure the juicer is fully assembled with the hopper aligned to the Lock symbol and the cover closed. Check if the power cord is securely plugged into a working outlet.
Juicer stops during operation.	Hopper cover opened or motor overloaded.	Close the hopper cover securely. If overloaded, turn off, unplug, clear any blockages, and let the motor cool down before restarting.
Clogging occurs frequently.	Too much fiber or large pieces of produce.	Use the "REV" (Reverse) function to clear blockages. Cut high-fiber fruits and vegetables (e.g., celery, ginger) into smaller pieces before juicing. Feed produce slowly.

Problem	Possible Cause	Solution
Low juice yield or wet pulp.	Improper feeding or produce type.	Ensure produce is fed slowly and consistently. Some very soft or watery fruits may naturally yield wetter pulp.

SPECIFICATIONS

Brand: ECOSELF

Model: SJ050C Juicer Machines

Color: Light Gray

Power: 200W High Power Motor

Voltage: 120 Volts

Capacity: 40oz (1.2 Liters)

Product Dimensions: 7"D x 14"W x 13"H

Item Weight: 7.85 pounds

Special Features: Easy to Clean & Assemble, High Juice Yield, Low Noise Motor, Large Feed Chute, Reverse Function, Safety Design, Self Feeding

Blade Material: PMMA

WARRANTY & SUPPORT

ECOSELF provides a **24-month Repair and Replacement Service** for this product. If you encounter any issues or have questions regarding your juicer, please do not hesitate to contact our customer support team.

We are committed to providing excellent service and will reply to your inquiries within 24 hours.

For support, please visit the [ECOSELF Store on Amazon](#) or refer to the contact information provided in your product packaging.



Image: A customer support representative, symbolizing the available support for the product.