

[Manuals.plus](#) /

> [Feelfunn](#) /

> Feelfunn 3.5 Cu.Ft. Portable Clothes Dryer (Model ZX-CD-13) - Instruction Manual

Feelfunn ZX-CD-13

Feelfunn 3.5 Cu.Ft. Portable Clothes Dryer (Model ZX-CD-13)

User Instruction Manual

1. INTRODUCTION

Thank you for choosing the Feelfunn 3.5 Cu.Ft. Portable Clothes Dryer. This compact and efficient appliance is designed to provide convenient clothes drying for small spaces such as apartments, dorms, and RVs. Please read this manual thoroughly before operation to ensure safe and optimal performance.

Key Features:

- **Powerful Drying:** 1500W power with a maximum temperature of 140°F for quick and efficient drying.
- **Portable & Convenient:** Lightweight (55.1 lbs) and compact (22"D x 24"W x 26.8"H), suitable for small living areas and wall-mountable.
- **Easy to Operate:** User-friendly LED touch control panel with four distinct drying modes.
- **User-Friendly Design:** Transparent door window, durable stainless steel drum, and multi-filter system for lint capture.
- **Safety Features:** Automatic stop function when the door is opened during operation.

2. SETUP AND INSTALLATION

Before setting up your Feelfunn Portable Clothes Dryer, ensure you have all components as listed in the packing contents. Place the dryer on a stable, level surface or mount it securely to a wall following the provided instructions.

Packing Contents:

- 1 x Dryer Machine
- 2 x Suspension Brackets (for wall mounting)
- 1 x Exhaust Pipe Fitting
- 4 x Screws (12mm)
- 4 x Screws (25mm)

- 1 x User Manual

Installation Options:

The Feelfunn Portable Clothes Dryer offers versatile installation to suit your space:

- **Freestanding:** Place on a flat, stable surface. Ensure adequate clearance around the unit for ventilation.
- **Wall Mounted:** Use the included suspension brackets to securely mount the dryer to a sturdy wall. Refer to the detailed wall-mounting instructions in the printed user manual for proper installation.
- **Stacking:** Can be stacked on top of a compatible washing machine. Ensure the washing machine is stable and capable of supporting the dryer's weight.
- **Side by Side:** Position next to a washing machine or other appliance.

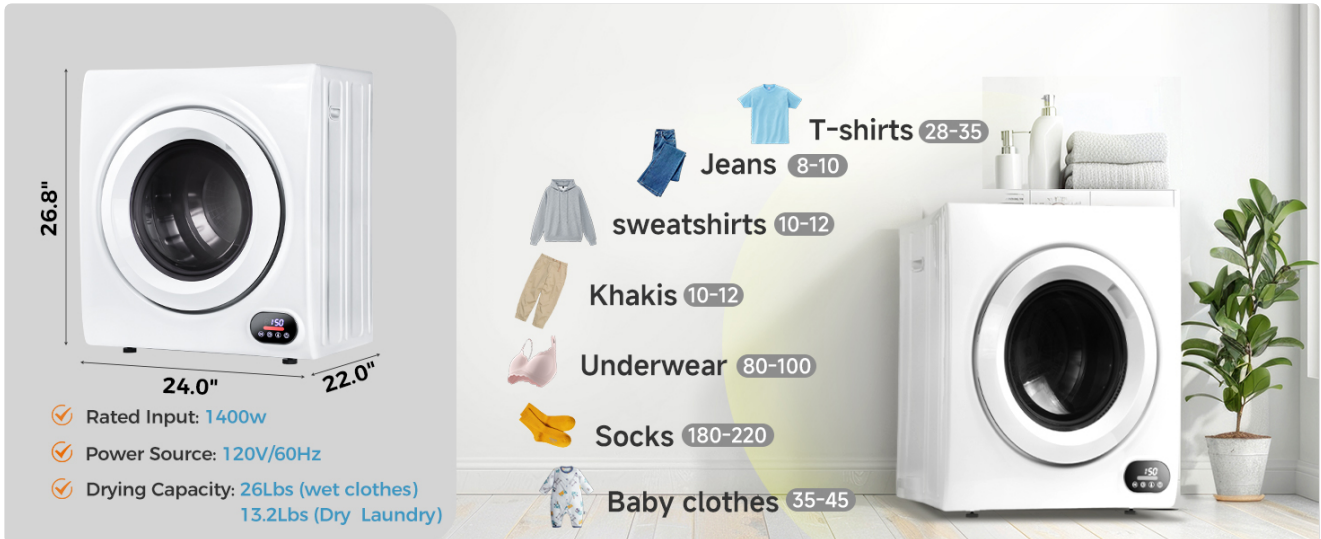


Image: Multiple installation options for the Feelfunn Portable Clothes Dryer, demonstrating its adaptability for different living spaces.

Portable Clothes Drying Machine



Reverse
Tumble Action



Efficient
Drying



Multifunction



Image: The Feelfunn Portable Clothes Dryer shown in both freestanding and wall-mounted configurations, highlighting its compact design.

Venting:

Connect the exhaust pipe fitting to the dryer and ensure proper ventilation. The dryer operates on a standard 110V/120V outlet.

3. OPERATING INSTRUCTIONS

The Feelfunn Portable Clothes Dryer features an intuitive LED touch control panel for easy operation.

Loading the Dryer:

- Open the transparent door window.
- Load clothes into the stainless steel drum. For optimal drying, limit the load to 26 pounds (wet clothes).
- Close the door securely. The dryer will not operate if the door is not fully closed.



Image: The dryer's drum filled with clothes, demonstrating its capacity for a typical load.

Selecting a Drying Mode:

Use the LED touch control panel to select one of the four drying modes:

- **Strong:** Full-power drying for heavy loads or items requiring maximum heat.
- **Intelligent:** Auto-detects dryness level and adjusts drying time accordingly for energy efficiency.
- **ECO:** Energy-saving mode, ideal for lighter loads or when energy conservation is desired.
- **Normal:** Half-power drying, suitable for everyday items.

The dryer features forward and reverse tumbling action to prevent tangles, reduce wrinkles, and ensure even drying.



Image: The LED touch panel displaying drying time and options for different drying modes.

Embrace easy one-touch



4 DRYING MODES

- ✓ **Strong:** Full-power drying
- ✓ **Intelligent:** Auto-detects dryness level
- ✓ **ECO:** Energy-saving mode
- ✓ **Normal:** Half-power drying

ECO and Intelligent modes auto-sense dryness



Smart Display Panel



Image: A user interacting with the dryer's LCD touch panel, illustrating the ease of selecting drying modes.

Starting and Stopping:

- Press the 'Start/Pause' button to begin or temporarily stop the drying cycle.
- To end a cycle prematurely, press the 'Power' button.

4. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your dryer.

Cleaning the Lint Filter:

The multi-filter system effectively traps lint. For optimal performance and safety, clean the lint filter after every use.

- Open the dryer door.
- Locate the lint filter inside the drum.
- Remove the filter and clear any accumulated lint.
- Reinsert the clean filter securely before the next use.



Automatic stop when the door is opened



Stainless Steel Drum



Convenient Handles



Air Intake Filter

Image: A detailed view of the air intake filter, which is part of the multi-filter system for lint collection.

Video: Demonstrates the easy removal and cleaning of the lint filter in a similar indoor dryer vent system, highlighting the importance of regular maintenance for efficient operation.

General Cleaning:

- Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners.
- Periodically check the exhaust hose for any blockages or damage.

5. TROUBLESHOOTING

If you encounter issues with your dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer does not start	Power cord unplugged; Door not closed properly; Power outage.	Ensure power cord is securely plugged in; Close door firmly; Check household circuit breaker.
Clothes not drying completely	Overloaded dryer; Lint filter clogged; Incorrect drying mode selected.	Reduce load size; Clean lint filter; Select a more appropriate drying mode (e.g., 'Strong').
Dryer is noisy	Dryer not level; Foreign object in drum; Belt issue (rare).	Ensure dryer is on a level surface; Check drum for loose items; Contact customer support if noise persists.
Dryer stops during cycle	Door opened; Overheating.	Close door securely; Allow dryer to cool down, then restart. Ensure proper ventilation.

If the problem persists after attempting these solutions, please contact Feelfunn customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	Feelfunn
Model Name	ZX-CD-13
Capacity	3.5 Cubic Feet
Power	1500W
Voltage	110V/120V
Maximum Temperature	140°F
Dimensions (D x W x H)	22"D x 24"W x 26.8"H
Item Weight	55.1 lbs

Feature	Detail
Material Type	Stainless Steel (Drum)
Form Factor	Front Load
Color	White

7. WARRANTY AND SUPPORT

The Feelfunn 3.5 Cu.Ft. Portable Clothes Dryer comes with a **1-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use.

For any issues, questions, or warranty claims, please do not hesitate to contact our professional after-sales support team. We are committed to assisting you and ensuring your satisfaction.

Please refer to the contact information provided in your purchase documentation or visit the official Feelfunn website for support details.