

[Manuals.plus](#) /

› [King Lucky](#) /

› King Lucky i121 Open Ear Clip-On Earbuds User Manual

King Lucky i121

King Lucky i121 Open Ear Clip-On Earbuds

USER MANUAL

Introduction

The King Lucky i121 Open Ear Clip-On Earbuds are designed to provide a comfortable and secure audio experience while allowing awareness of your surroundings. These lightweight earbuds feature advanced Bluetooth 5.4 connectivity, IPX5 water resistance, and clear call quality with ENC noise-canceling microphones.



Image: King Lucky i121 Open Ear Clip-On Earbuds and their charging case.

What's in the Box

Upon unboxing your King Lucky i121 earbuds, you should find the following items:

- Open Ear Earbuds (x2)
- Charging Case (x1)
- User Manual (x1)
- Type-C Charging Cable (x1)
- A pair of ear clips (decorative attachments)

What's in the box ?

Open Ear Earbuds x2
Charging Case x1
User Manual x1
Type-c Charging Cabl x1
a pair of ear clips



Image: All components included in the King Lucky i121 package.

Setup

1. Initial Charging

Before first use, fully charge the earbuds and charging case. Connect the provided Type-C charging cable to the charging port on the case and a suitable USB power source. The indicator light on the case will show charging status.

2. Pairing with Your Device

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for "King Lucky i121" in the list of available Bluetooth devices and select it to connect.
4. Once connected, you will hear an audio prompt, and the indicator light on the earbuds will change.

3. Wearing the Earbuds

The i121 earbuds feature an open-ear clip-on design for comfort and situational awareness.

 
- Ensure the earbuds are worn on the correct sides (L for left ear, R for right ear).
- Gently attach the decorative ear clip piece to the ear hook if desired.
- Open the soft part of the earbud and gently attach it to your ear.
- Slide it along the earlobe and secure it in a stable, comfortable position.

Dual sound wave directional transmission

Directional and reverse cancellation waves effectively solve the soundleakage problem of open-ear earbuds.



Near-ear directional sound wave

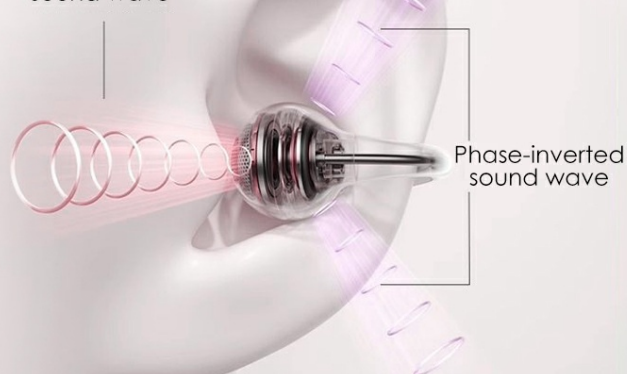

Phase-inverted sound wave

Image: Visual guide for correctly wearing the earbuds and attaching optional decorative clips.

Operating Instructions

Touch Controls

The King Lucky i121 earbuds feature intuitive touch controls for managing audio and calls:

Action	Function
Tap x1 (L/R)	Answer Call
Tap x2 (L/R)	End Call / Play/Pause Music
Tap x1 (L)	Volume Down
Tap x1 (R)	Volume Up
Tap x3 (L)	Activate Siri
Tap x3 (R)	Game Mode
Long Press 2" (L/R)	Reject Call
Long Press 2" (L)	Previous Track
Long Press 2" (R)	Next Track
Tap x5 (L/R)	Factory Reset

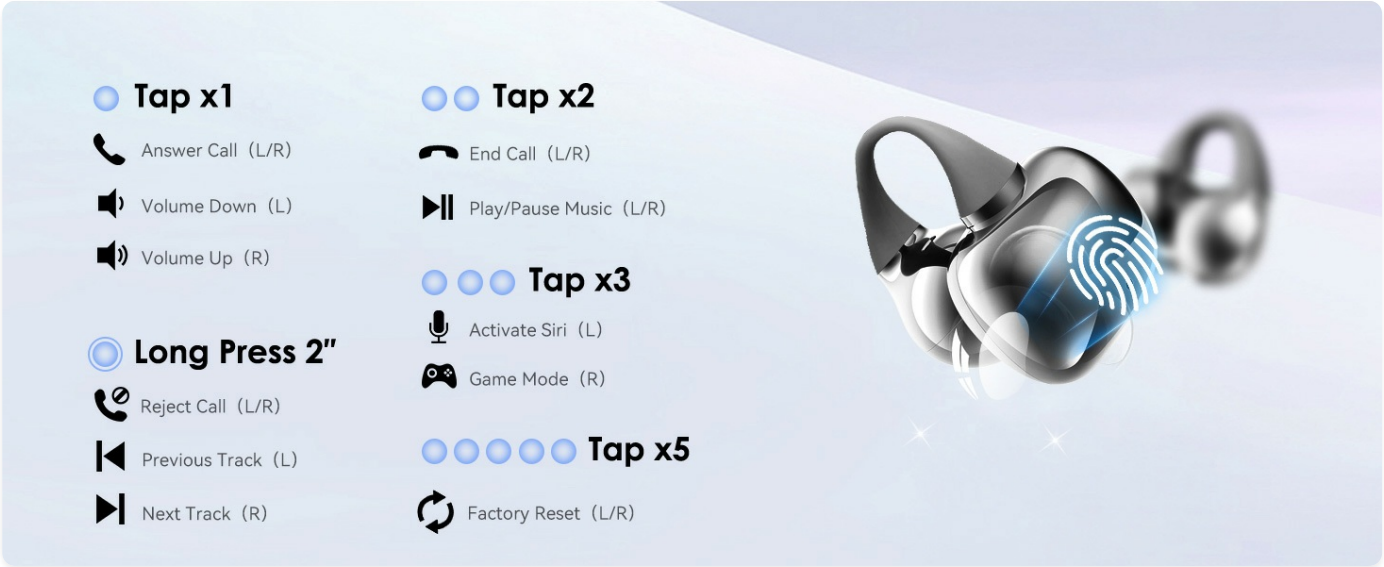 


Image: Detailed touch control functions for the earbuds.

Features and Specifications

- **Model Name:** i121
- **Brand:** King Lucky
- **Connectivity:** Wireless (Bluetooth 5.4)
- **Ear Placement:** Open Ear
- **Driver Size:** 12mm Dynamic Driver
- **Noise Control:** Passive Noise Cancellation (ENC for calls)
- **Water Resistance:** IPX5 (resistant to sweat and light rain)
- **Battery Life:** Up to 6 hours per charge, up to 50 hours total with charging case
- **Charging Time:** Approximately 2 hours for full charge
- **Weight:** Approximately 5.2g per earbud
- **Control Type:** Button Control (Touch)
- **Included Components:** Earbuds, Charging Case, User Manual, Type-C Cable, Decorative Ear Clips


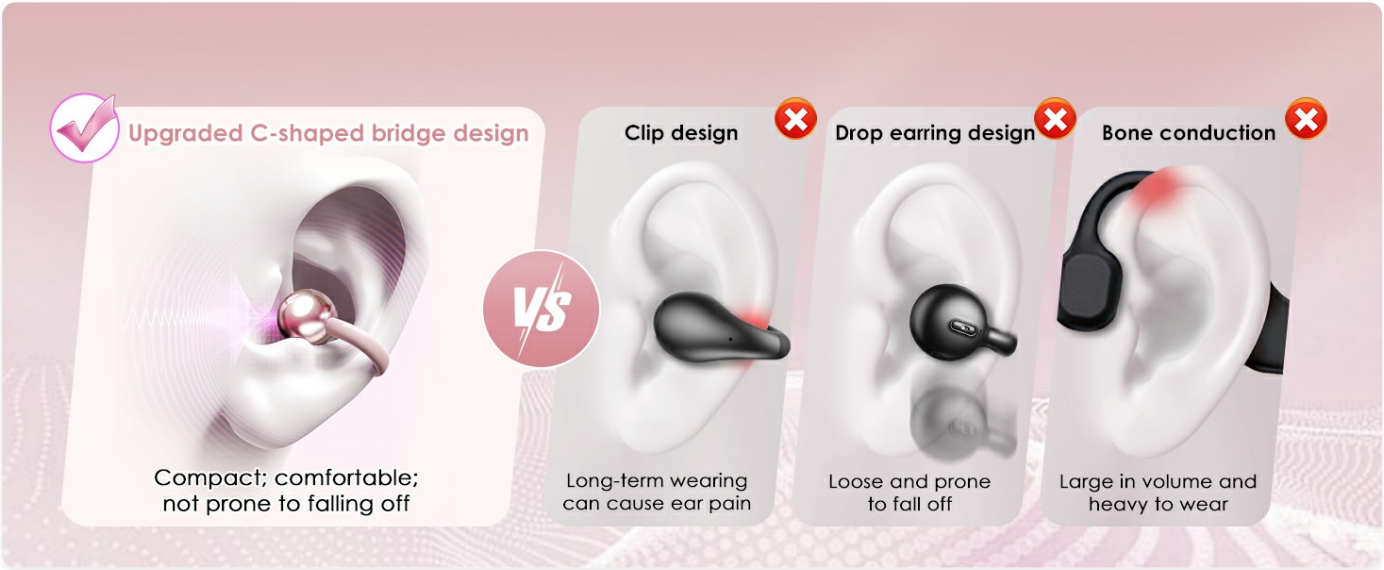 


Image: Battery performance details for the earbuds and charging case.

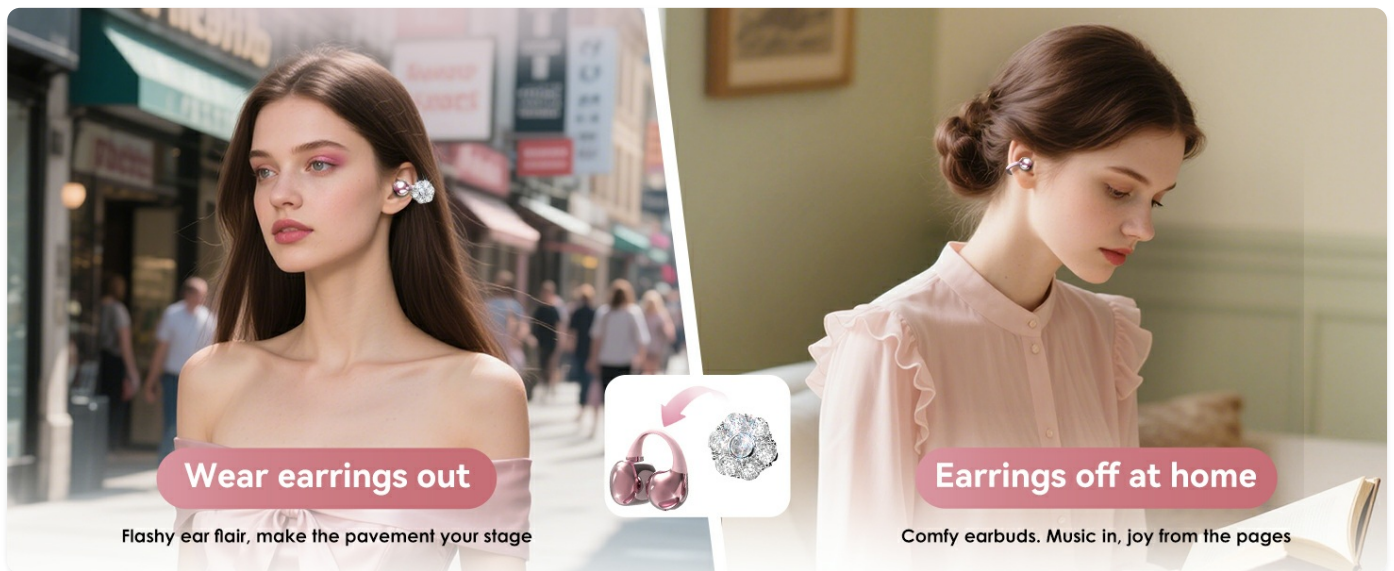 

Wear earrings out

Flashy ear flair, make the pavement your stage

Earrings off at home

Comfy earbuds. Music in, joy from the pages

Image: The lightweight design of the earbuds, emphasizing comfort.

Maintenance

- **Cleaning:** Regularly wipe the earbuds and charging case with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Water Resistance:** The earbuds are IPX5 water-resistant, meaning they can withstand sweat and light splashes. Do not submerge them in water or expose them to heavy rain. Ensure they are dry before placing them back in the charging case.
- **Storage:** Store the earbuds in their charging case when not in use to protect them and keep them charged. Avoid extreme temperatures.

Troubleshooting

- **No Sound:** Ensure earbuds are charged and properly paired. Check device volume.
- **Cannot Pair:** Make sure Bluetooth is enabled on your device and the earbuds are in pairing mode. Try resetting the earbuds to factory settings (Tap x5 on either earbud).
- **Charging Issues:** Verify the charging cable and power source are working. Ensure the charging contacts on the earbuds and case are clean and dry.
- **Call Quality:** Ensure the microphone is not obstructed. Check for strong Bluetooth connection.

Warranty and Support

For warranty information and customer support, please refer to the documentation included in your product packaging or visit the official King Lucky website. Keep your purchase receipt for warranty claims.

Product Videos

King Lucky Clip-on Earbuds with Detachable Flower Earring

Your browser does not support the video tag.

Video demonstrating the King Lucky i121 Clip-on Earbuds, highlighting their design and the detachable flower earring feature.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question