

FOHERE BD-40-E

FOHERE 1.1 Cu.Ft Mini Freezer User Manual

Model: BD-40-E

IMPORTANT SAFETY INFORMATION

Please read this manual thoroughly before operating your new FOHERE Mini Freezer. Keep this manual for future reference. Following these instructions will help prevent property damage and personal injury.

- Ensure the freezer is placed on a stable, level surface to prevent tipping.
- Allow adequate ventilation around the unit. Do not block air vents.
- Do not place the freezer near heat sources or in direct sunlight.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Unplug the appliance before cleaning or performing maintenance.
- Keep children away from the appliance.

PRODUCT OVERVIEW

The FOHERE 1.1 Cu.Ft Mini Freezer is a compact and efficient appliance designed for convenient freezing in various settings. It features a reversible door for flexible placement and adjustable temperature control.



Figure 1: Front view of the FOHERE 1.1 Cu.Ft Mini Freezer, showcasing its compact black design.

Key Features:

- **1.1 Cu.Ft Capacity:** Spacious enough for frozen meals, snacks, and more, ideal for small spaces.
- **Adjustable Temperature:** Seven temperature levels ranging from -7.6°F to 14°F (-22°C to -10°C) via a rear dial.
- **Reversible Door:** The door can be configured to open from either the left or right side, offering versatile placement options.
- **Quiet Operation:** Operates at a low noise level of 43dB, suitable for bedrooms, dorms, and offices.
- **Removable Wire Shelf:** Provides flexible storage configurations within the freezer compartment.
- **Built-in Handle:** Integrated handle for easy opening and closing of the door.
- **Adjustable Legs:** Ensures stability on uneven surfaces.
- **Energy Efficient:** Consumes approximately 0.47 KWH per day.

4-ADVANTAGE OF UPRIGHT FREEZERS

Built-in
Handle



2 layers
insulation



Adjustable Legs



Removable
with Shelf



Figure 2: Illustration of key design advantages including the built-in handle, two layers of insulation, adjustable leveling legs, and the removable wire shelf.

SETUP AND INSTALLATION

1. Unpacking:

Carefully remove all packaging materials, including foam and adhesive tape. Inspect the freezer for any shipping damage. Keep packaging materials until you are satisfied with the product's condition.

2. Placement:

- Place the freezer on a firm, level floor that is strong enough to support the unit when fully loaded.
- Allow at least 4 inches (10 cm) of space on the back and sides of the freezer for proper air circulation.
- Avoid placing the freezer in direct sunlight or near heat-generating appliances like ovens or radiators.
- The adjustable legs can be used to level the unit if the floor is uneven.

Chill Vibes Only Cold & Confident

Upright Freezers Fit in Every Corner



Figure 3: Product dimensions for proper placement: 19.61" H x 18.62" W x 17.52" D.

3. Cleaning Before First Use:

Before using the freezer for the first time, wipe the interior and exterior surfaces with a soft cloth and a mild detergent. Rinse with clean water and dry thoroughly.

4. Reversible Door Installation:

The freezer door can be reversed to open from either the left or right side to suit your space. Refer to the video demonstration for detailed steps on how to reverse the door.



Video 1: This video demonstrates the features of the FOHERE Compact Countertop Mini Freezer, including how to reverse the door and remove the wire shelf for flexible storage.

5. Initial Power-On:

After placement and cleaning, plug the freezer into a dedicated power outlet. Allow the unit to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle. After plugging in, let the freezer run empty for a few hours to reach its operating temperature before loading food.

OPERATING INSTRUCTIONS

Temperature Control:

The freezer features a 7-level adjustable thermostat dial located at the back of the unit. Turn the dial to select your desired temperature setting. Setting "1" is the warmest temperature (14°F / -10°C), and setting "7" is the coldest temperature (-7.6°F / -22°C).

Adjustable 7-Level Thermostats

The knob on the back adjusts the temperature



Figure 4: The adjustable thermostat dial, showing settings from 1 to 7 for temperature control.

Loading the Freezer:

Once the freezer has reached its operating temperature, you can begin loading food items. Do not overload the freezer, as this can impede air circulation and cooling efficiency. The removable wire shelf allows for flexible organization of items.

COMPACT & STYLISH

Keep food fresh and drinks cool anytime, anywhere.



1.1Cu.ft



43dB



7Level
Thermostats



Energy-Saving



Figure 5: The interior of the freezer, demonstrating its capacity for various items like beverages and small food containers.

MAINTENANCE

Manual Defrosting:

This freezer requires manual defrosting. Frost buildup can reduce cooling efficiency. Defrost the unit when the frost layer reaches approximately 0.2 inches (5 mm) thick.

1. Unplug the freezer from the power outlet.
2. Remove all food items and store them in another freezer or cooler.
3. Leave the freezer door open to allow frost to melt naturally. You can place towels at the bottom to absorb water.
4. Once all frost has melted, clean and dry the interior thoroughly.
5. Plug the freezer back in and allow it to cool down before returning food items.

Cleaning:

- **Interior:** Clean the interior regularly with a solution of mild detergent and warm water. Avoid abrasive cleaners or harsh chemicals.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. For stubborn stains, use a mild cleaner.
- **Door Gasket:** Clean the door gasket regularly to ensure a proper seal.

Power Outage / Extended Absence:

In case of a power outage, keep the freezer door closed to maintain temperature as long as possible. For extended absences, unplug the freezer, empty all contents, defrost, clean, and leave the door slightly ajar to prevent odors and mold growth.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Freezer does not operate.	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; check circuit breaker; verify power supply.
Temperature is not cold enough.	Temperature setting too high; door opened too frequently; excessive food load; poor ventilation.	Adjust thermostat to a colder setting; minimize door openings; reduce food load; ensure adequate space around unit.
Excessive noise.	Unit not level; contact with wall/other objects; normal operating sounds.	Adjust leveling legs; move unit away from obstructions; gurgling/hissing sounds are normal.
Door does not close completely.	Unit not level; food packages obstructing door; dirty gasket.	Level the unit; rearrange food; clean door gasket.

If the problem persists after checking these solutions, please contact FOHERE customer support.

SPECIFICATIONS

Attribute	Detail
Brand Name	FOHERE
Model Info	BD-40-E
Item Weight	27.6 pounds
Product Dimensions	17.44 x 19.5 x 17.87 inches (D x W x H)

Attribute	Detail
Country of Origin	China
Capacity	1.1 Cubic Feet
Installation Type	Countertop
Special Features	Energy Efficiency, Temperature Control, Quiet Operation, Adjustable shelving, Adjustable feet, Manual defrosting, Interior lighting, 32L Large Capacity
Color	Black
Voltage	110 Volts
Wattage	67 watts
Racks	1
Defrost Type	Manual
Door Hinges	Reversible
Door Material Type	Plastic
Certification	UL
Included Components	Mini freezer

WARRANTY AND SUPPORT

Your FOHERE Mini Freezer is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, parts, or warranty claims, please contact FOHERE customer service through the retailer where the product was purchased or visit the official FOHERE website.

Keep your purchase receipt as proof of purchase for warranty purposes.