

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VGR](#) /

> [VGR 640 Professional Hair Clippers and Trimmers User Manual](#)

VGR 640

VGR 640 Professional Hair Clippers and Trimmers User Manual

Model: VGR 640

INTRODUCTION

Thank you for choosing the VGR 640 Professional Hair Clippers and Trimmers. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new grooming kit. Please read these instructions thoroughly before first use and retain them for future reference.

SAFETY INSTRUCTIONS

- Always ensure the appliance is switched off before cleaning or performing maintenance.
- Do not immerse the appliance in water or other liquids.
- Keep the appliance away from water sources, such as bathtubs, showers, basins, or other vessels containing water.
- Do not use the appliance if the blades are damaged or broken, as this may cause injury.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only the charging cable provided with the appliance.
- Do not use the appliance if it has been dropped, damaged, or is not working correctly.
- Store the appliance in a dry place, out of reach of children.

PACKAGE CONTENTS

Verify that all items are present in your VGR 640 grooming kit:

- 1 x Professional Hair Clipper
- 1 x Precision Hair Trimmer
- 6 x Clipper Guide Combs (1.5mm, 3mm, 4.5mm, 6mm, 9mm, 12mm)
- 3 x Trimmer Guide Combs (1mm, 2mm, 3mm)

- 1 x Lubricating Oil Bottle
- 1 x Cleaning Brush
- 2 x Protective Covers (one for clipper, one for trimmer)
- 1 x USB Charging Cable

PRODUCT OVERVIEW

Familiarize yourself with the main components of your VGR 640 Hair Clippers and Trimmers.



Figure 1: VGR 640 Clipper and Trimmer highlighting key features like the ON/OFF switch, USB charging port, battery life indicator, and adjustable taper lever.



Figure 2: Clipper with its set of guide combs (1.5mm to 12mm) and the taper lever adjustment range (0.5mm to 2.5mm).



Figure 3: Detail of the ceramic and precision blade, along with charging and operational specifications.

**DLC COATING
FIX BLADE**

**CERAMIC
MOVING BLADE**

Cutting more fast and smooth



Figure 4: Blade technology featuring DLC coating, ceramic moving blade, and the turbo function for enhanced speed.

SETUP

1. Charging the Appliance

1. Before first use, fully charge the clipper and trimmer.
2. Connect the USB charging cable to the charging port on the bottom of the clipper/trimmer and plug the other end into a suitable USB power adapter (not included).
3. The LED display will indicate the charging status. A full charge typically takes approximately 3 hours.
4. Once fully charged, the clipper provides up to 250 minutes of continuous use, and the trimmer provides up to 240 minutes.

2. Attaching Guide Combs

1. Ensure the appliance is switched off.
2. Select the desired guide comb for your preferred cutting length.
3. Align the guide comb with the blade and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.

3. Adjusting the Taper Lever (Clipper Only)

The clipper features an adjustable taper lever on the side, allowing for fine-tuning of cutting length without changing guide combs. This lever adjusts the blade from approximately 0.5mm to 2.5mm.

- Push the lever up for the shortest cut (0.5mm).
- Pull the lever down for a longer cut (2.5mm).
- Intermediate positions provide varying lengths between 0.5mm and 2.5mm.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the ON/OFF switch located on the side of the appliance to turn it on or off. The LED display will illuminate when the device is active.

2. Adjusting Motor Speed (Clipper Only)

The clipper features a dual-speed intelligent torque motor with a turbo function:

- Press the power button once to turn on the clipper at the standard speed (7000 RPM).
- Press the power button a second time to activate the turbo function, increasing the speed to 9000 RPM for thicker hair or faster cutting.
- Press the power button a third time to turn off the clipper.

3. Hair Cutting and Trimming

1. Ensure hair is clean and dry for best results.
2. Attach the appropriate guide comb for the desired length.
3. Hold the clipper/trimmer with the blades pointing downwards and the flat top of the comb resting against the scalp.
4. Move the appliance slowly against the direction of hair growth.
5. For blending and fading, utilize the taper lever on the clipper to gradually adjust the cutting length.
6. Use the trimmer for precise detailing, outlining, and zero-gap cutting around the hairline, beard, or intricate areas.

MAINTENANCE

1. Cleaning the Blades

1. After each use, switch off the appliance and detach any guide combs.
2. Use the provided cleaning brush to remove loose hairs from the blades and the inside of the cutting head.
3. For a more thorough clean, the blades can be carefully removed (refer to specific blade removal instructions if provided in a separate guide or on the product packaging).

2. Lubricating the Blades

1. After cleaning, apply a few drops of the provided lubricating oil to the blades.
2. Turn on the appliance for a few seconds to allow the oil to distribute evenly across the blades.
3. Wipe off any excess oil with a soft cloth. Regular oiling ensures optimal cutting performance and

extends blade life.

3. Storage

Store the clipper and trimmer in a dry, cool place, away from direct sunlight and moisture. Use the protective covers to shield the blades from damage when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is depleted.	Charge the appliance fully.
Poor cutting performance or pulling hair.	Blades are dirty or not lubricated. Blades may be dull.	Clean and oil the blades. If performance does not improve, consider blade replacement.
Appliance gets hot during use.	Extended continuous use. Blades may need lubrication.	Allow the appliance to cool down. Ensure blades are clean and well-oiled.
Unusual noise during operation.	Blades may be misaligned or dirty.	Clean and oil the blades. Check for any obstructions.

SPECIFICATIONS

- **Brand:** VGR
- **Model:** 640
- **Motor Speed:** Dual speed, up to 9000 RPM (Turbo Function)
- **Blade Material:** DLC Coated Ceramic Moving Blade, Powder Metallurgic Fixed Blade
- **Clipper Battery:** 2500mAh Li-ion, up to 250 minutes run time
- **Trimmer Battery:** 2000mAh Li-ion, up to 240 minutes run time
- **Charge Time:** Approximately 3 hours
- **Power Source:** Battery Powered, Cordless, Rechargeable (USB Charging)
- **Clipper Guide Combs:** 1.5mm, 3mm, 4.5mm, 6mm, 9mm, 12mm
- **Trimmer Guide Combs:** 1mm, 2mm, 3mm
- **Taper Lever Adjustment:** 0.5mm - 2.5mm
- **Recommended Uses:** Clipping, Trimming, Facial Hair, Hairline, Intricate Grooming

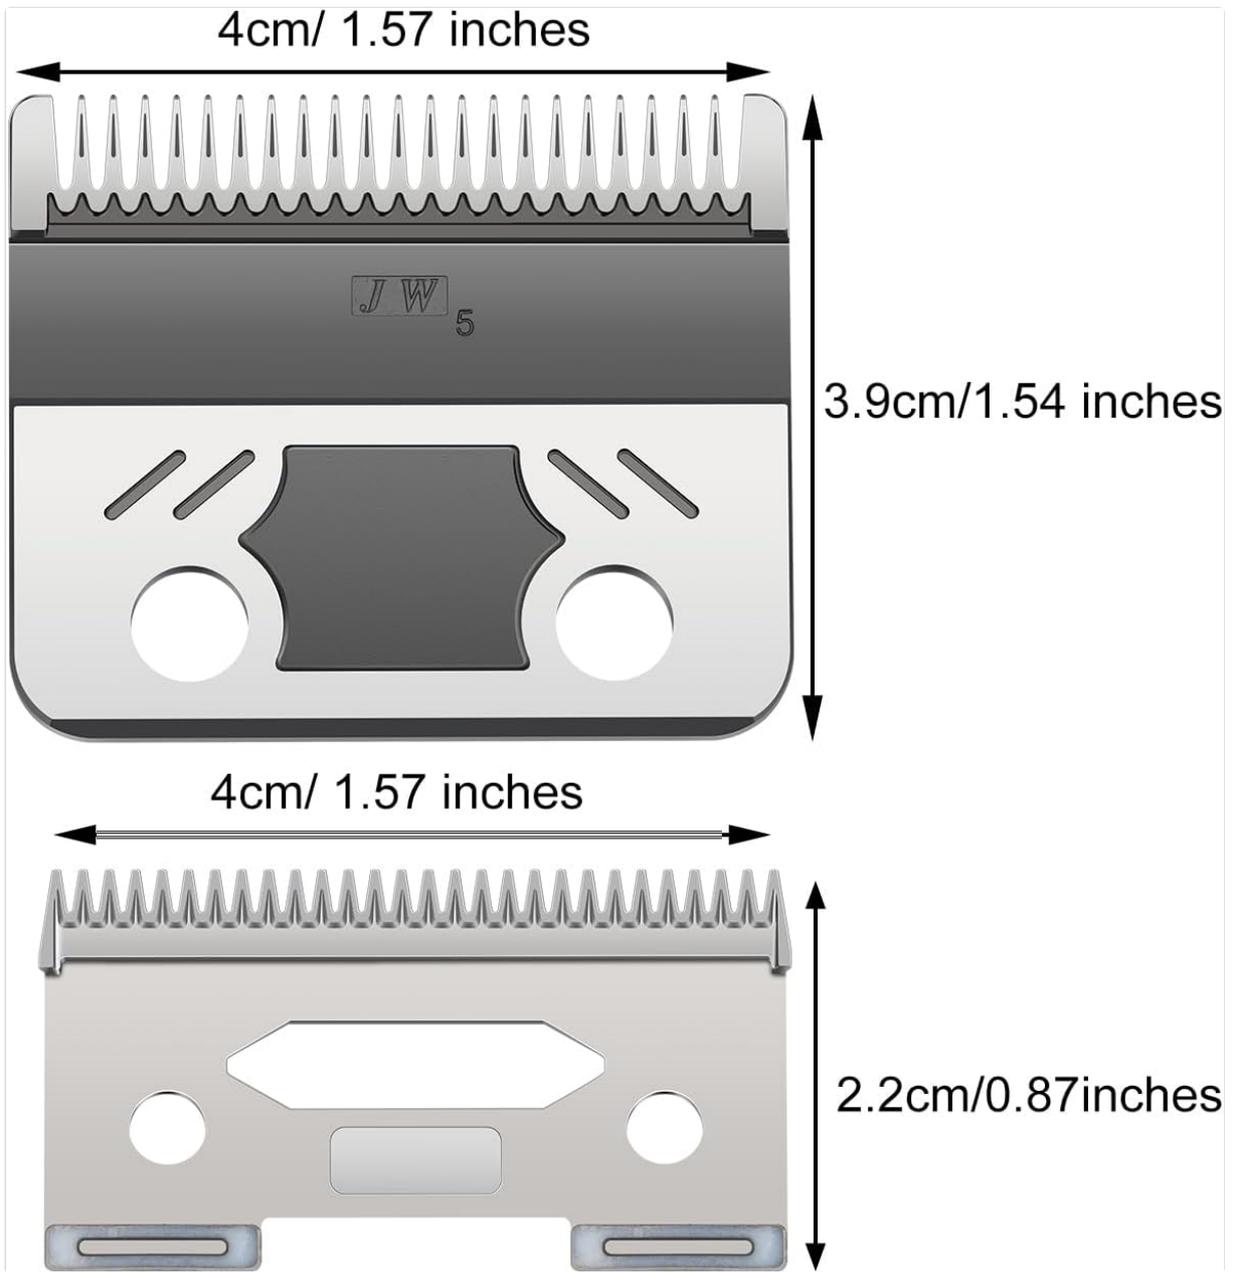


Figure 5: Dimensions of the clipper blade.



Figure 6: Dimensions of the trimmer blade.



USE IT EVERYWHERE



Figure 7: Ceramic and powder metallurgic blade detail.

WARRANTY AND SUPPORT

VGR products are manufactured to high-quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your product or contact VGR customer support directly through their official website or the retailer where the product was purchased.