

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal Easygliss Plus Steam Iron, 2700 Watt, Blue - FV5751E0- Made in France User Manual

Tefal FV5751E0

Tefal Easygliss Plus Steam Iron User Manual

Model: FV5751E0

INTRODUCTION

Thank you for choosing the Tefal Easygliss Plus Steam Iron. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

SETUP

1. Unpacking

Carefully remove the iron and all accessories from the packaging. Retain the packaging for future storage or transport if needed. Ensure all components are present and undamaged.

2. Before First Use

Before using your iron for the first time, it is recommended to run it over an old piece of fabric to remove any manufacturing residues from the soleplate. This prevents staining your garments.

3. Filling the Water Tank

1. Ensure the iron is unplugged from the power outlet.
2. Open the water filling inlet.
3. Fill the water tank with clean tap water up to the 'MAX' level indicator. Do not overfill. For optimal performance and to prolong the life of your iron, it is recommended to use demineralized or distilled water, especially in areas with hard water.
4. Close the water filling inlet securely.



Image: The Tefal Easygliss Plus Steam Iron, showcasing its blue and white design with the water tank visible. This view helps in identifying the water filling inlet.

OPERATING

1. Temperature and Steam Settings

Plug the iron into a suitable power outlet. Adjust the thermostat dial to the desired temperature setting according to the fabric type. The indicator light will illuminate, indicating the iron is heating up. It will turn off when the set temperature is reached.

- **Low Temperature (•):** Synthetics, Silk
- **Medium Temperature (••):** Wool
- **High Temperature (•••):** Cotton, Linen

For steam ironing, ensure the temperature setting is within the steam zone (usually indicated on the dial). The iron will produce continuous steam when the steam control is set to the desired level.



Image: The Tefal Easygliss Plus Steam Iron in action, demonstrating the powerful steam output from its soleplate, ideal for removing stubborn creases.

2. Shot of Steam and Vertical Steaming

Press the 'Shot of Steam' button for an extra burst of steam to tackle stubborn creases. This feature can also be used for vertical steaming of hanging garments or drapes. Hold the iron vertically a few centimeters away from the fabric and press the steam button.



Image: A close-up view of the Durilium Airglide Technology soleplate of the Tefal Easygliss Plus Steam Iron, highlighting the steam holes and smooth gliding surface.

3. Dry Ironing

For dry ironing, set the steam control to the 'no steam' position. Adjust the temperature according to the fabric type.

4. Safety Precautions

- Always unplug the iron when filling or emptying the water tank, and after each use.
- Do not leave a hot iron unattended.
- Keep the iron out of reach of children.
- Do not touch the hot soleplate.
- Never immerse the iron in water or any other liquid.

MAINTENANCE

1. Cleaning the Soleplate

To clean the soleplate, allow the iron to cool completely. Wipe the soleplate with a damp cloth and a non-abrasive cleaner if necessary. Do not use abrasive pads or harsh chemicals as they can damage the soleplate coating.



Image: The underside of the Tefal Easygliss Plus Steam Iron, showing the Durilium soleplate, which should be kept clean for optimal performance.

2. Descaling / Anti-Calc System

The Tefal Easygliss Plus iron is equipped with an anti-calc system to reduce limescale build-up. For optimal performance, regularly perform the self-clean function as described in the full product manual (if available) or by following these general steps:

1. Fill the water tank and heat the iron to maximum temperature.
2. Unplug the iron and hold it over a sink.
3. Activate the self-clean function (refer to specific button/lever on your model if present) to flush out scale particles.
4. Repeat if necessary.

3. Storage

After use, unplug the iron and allow it to cool completely. Empty any remaining water from the tank. Store the iron in an upright position to prevent damage to the soleplate, in a dry and safe place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet faulty; thermostat set too low.	Check power connection; try another outlet; adjust thermostat to a higher setting.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to 'dry'.	Fill water tank; set temperature to steam zone; adjust steam control.
Water leaks from soleplate.	Temperature too low for steam; water tank overfilled; iron not hot enough before steaming.	Increase temperature; do not overfill; wait for indicator light to turn off before using steam.
Brown stains on fabric.	Mineral deposits (limescale); residues on soleplate.	Perform self-clean/descaling; clean soleplate as per maintenance section.

If the problem persists after trying these solutions, please refer to the Warranty and Support section.

SPECIFICATIONS

Brand: Tefal
Model: FV5751E0
Type: Steam Iron
Power: 2700 Watt
Color: Blue
Product Dimensions: 10 x 8 x 0.1 cm (approximate, as per product data)
Item Weight: 222 g (approximate, as per product data)
Soleplate Technology: Durilium Airglide Technology
Origin: Made in France

WARRANTY

This Tefal Easygliss Plus Steam Iron comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims. For extended warranty options, please check with your retailer or the official Tefal website.

SUPPORT

For further assistance, technical support, or spare parts, please contact Tefal customer service. You can usually find contact information on the official Tefal website or on the product packaging. Visit the official Tefal website for more information:www.tefal.com

© 2024 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F8HRXCL9>

More documents and user manuals: <https://manuals.plus/>