

Manuals.plus /

› SEANCHEER /

› SEANCHEER R1 Bluetooth Remote Control User Manual

## SEANCHEER R1

# SEANCHEER R1 Bluetooth Remote Control User Manual

## INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your SEANCHEER R1 Bluetooth Remote Control. This device is designed to enhance your mobile experience by offering remote control functionalities for TikTok scrolling, Kindle app page turning, and smartphone camera shutter activation. Please read this manual carefully before using the product to ensure optimal performance and longevity.



Image: A user comfortably scrolling through TikTok videos on their smartphone using the SEANCHEER R1 remote control, demonstrating hands-free operation.

## PRODUCT OVERVIEW

The SEANCHEER R1 is a versatile Bluetooth remote control featuring a compact design and intuitive button layout. It allows for remote interaction with your smartphone for various applications.

### Key Features:

- **TikTok Scrolling:** Remotely scroll up/down, like videos, pause, play, and adjust volume.
- **Kindle App Page Turner:** Navigate pages within the Kindle app on compatible smartphones.
- **Camera Shutter:** Activate your smartphone's built-in camera shutter for photos and videos.
- **Portable Design:** Includes a carabiner and lanyard for easy carrying.
- **Rechargeable Battery:** Built-in 150mAh lithium-ion battery with USB-C charging.
- **Low Battery Warning:** Front indicator light flashes red when battery is critically low.

### Component Identification:



## Incompatible Apps

- ✗ All Music Apps
- ✗ All Audiobook Apps
- ✗ All Video Apps Except TikTok
- ✗ Swipe Through All Web Pages

Image: A detailed view of the SEANCHEER R1 remote control, highlighting its various buttons for control functions.

1. **Up Arrow Button:** Scroll up, previous page/track.
2. **Down Arrow Button:** Scroll down, next page/track.
3. **Left Arrow Button:** (Functionality may vary by app)
4. **Right Arrow Button:** (Functionality may vary by app)
5. **OK Button:** Confirm selection, play/pause.
6. **V- Button:** Volume down.
7. **V+ Button:** Volume up.
8. **Camera Shutter Button:** Activates camera shutter.

9. **Power Switch:** On/Off.
10. **Charging Port:** USB-C.
11. **Indicator Light:** Displays status (pairing, charging, low battery).

## SETUP

---

### 1. Initial Charging:

Upon receiving your SEANCHEER R1, it is recommended to fully charge the device for 3-5 hours before initial use. This ensures optimal battery performance.

- Connect the provided USB-C cable to the remote's charging port and to a standard USB power source (e.g., computer, wall adapter).
- The indicator light will show charging status (specific color/behavior not detailed, assume solid light during charge).
- Once fully charged, disconnect the cable.

### 2. Bluetooth Pairing:

To use the remote, it must be paired with your smartphone via Bluetooth.

1. Ensure the remote control is charged and powered on using the power switch. The indicator light should begin to flash, indicating it is in pairing mode.
2. On your smartphone, go to **Settings > Bluetooth**.
3. Turn on Bluetooth.
4. Scan for available devices. The remote should appear as "SEANCHEER R1" or a similar identifier.
5. Select the remote control from the list to initiate pairing.
6. Once paired, the indicator light on the remote will typically stop flashing and remain solid or turn off, depending on the device's design.
7. If pairing fails, turn off the remote and your phone's Bluetooth, then repeat the steps.

## OPERATING INSTRUCTIONS

---

### 1. TikTok Scrolling:

The SEANCHEER R1 allows for hands-free navigation of TikTok content.



Image: The SEANCHEER R1 remote control positioned beside a smartphone showing the TikTok interface, illustrating its functions for scrolling, volume control, play/pause, and liking videos.

- **Scroll Up:** Press the **Up Arrow** button.
- **Scroll Down:** Press the **Down Arrow** button.
- **Like Video:** Double-click the **OK** button.
- **Play/Pause:** Press the **OK** button once.
- **Volume Up:** Press the **V+** button.
- **Volume Down:** Press the **V-** button.

## 2. Kindle App Page Turner:

Use the remote to turn pages in the Kindle app on your smartphone.



Image: The SEANCHEER R1 remote control shown alongside a smartphone displaying the Kindle app, indicating compatibility with the Kindle app but not with dedicated Kindle devices.

- **Next Page:** Press the **Down Arrow** button.
- **Previous Page:** Press the **Up Arrow** button.

**Note: This remote is compatible with the Kindle app on smartphones only. It does not support Kindle devices, iPads, other tablets, or audiobooks within the Kindle app.**

## 3. Camera Shutter Control:

Capture photos and videos remotely using your smartphone's built-in camera app.



Image: The SEANCHEER R1 remote control featuring its camera shutter button, shown with a smartphone capturing a group photo, highlighting its use as a remote shutter.

- Open your smartphone's built-in camera application.
- Position your phone for the desired shot.
- Press the **Camera Shutter** button on the remote to take a photo or start/stop video recording.

**Note: This function only works with your smartphone's built-in camera app. It does not support camera functions of third-party applications.**

## COMPATIBILITY

The SEANCHEER R1 is designed for broad compatibility with modern smartphones.

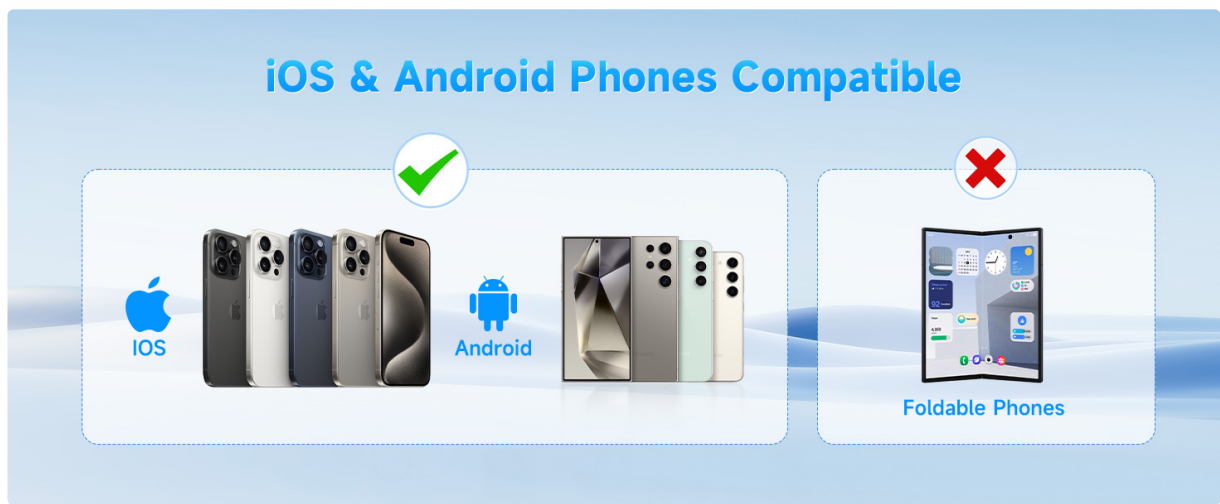


Image: A visual representation of device compatibility, indicating support for iOS and Android smartphones, but not for foldable phones.

- **iOS Devices:** iPhone 11 (iOS 14+) and newer models.
- **Android Devices:** Android Phones running Android 7.0+ and newer.

## Incompatible Devices and Applications:

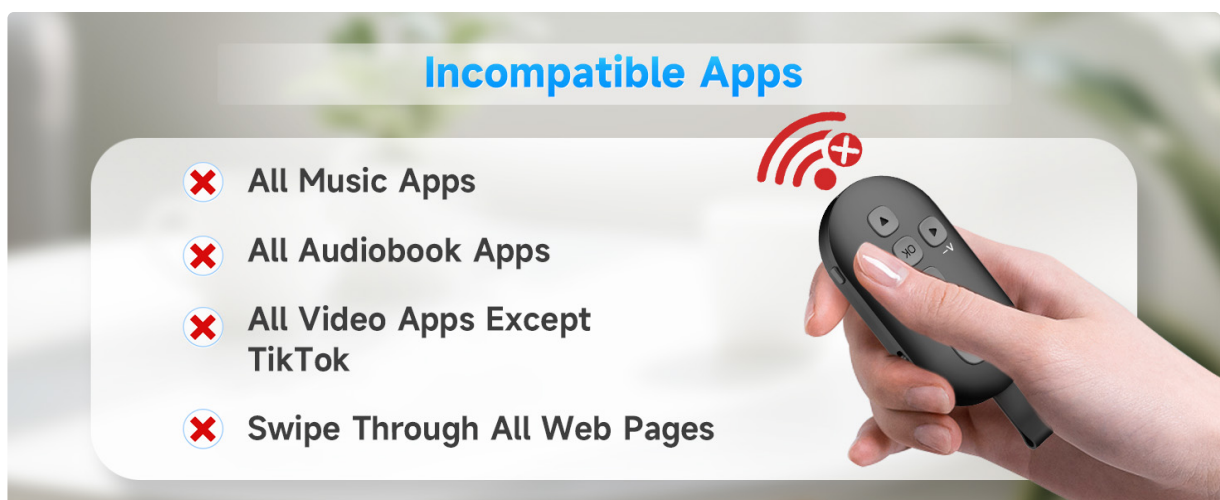


Image: A graphic listing applications and functions that are incompatible with the SEANCHEER R1 remote control, such as music apps, audiobook apps, most video apps, and general web page scrolling.

- Kindle devices, iPads, or other tablets.
- Audiobooks within the Kindle app.

- Third-party camera applications.
- All music applications.
- All audiobook applications (other than Kindle app limitations).
- Most video applications (except TikTok).
- General web page scrolling.
- Foldable phones.

## MAINTENANCE

---

Proper care ensures the longevity and performance of your remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Recharge the device when the low battery warning light flashes red. Avoid fully depleting the battery frequently to prolong its lifespan. If storing for an extended period, charge the battery to approximately 50% every few months.
- **Portability:** Utilize the included carabiner and lanyard for secure and convenient carrying, preventing loss or damage.

### with Carabiner & Lanyard, Portable



Image: The SEANCHEER R1 remote control demonstrated with its carabiner attached to a bag and worn with a lanyard around the neck, showcasing its portable design.

## TROUBLESHOOTING

---

If you encounter issues with your SEANCHEER R1, refer to the following common solutions:

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Remote does not turn on.	Low battery.	Charge the remote for 3-5 hours.
Cannot pair with smartphone.	Bluetooth off on phone; remote not in pairing mode; interference.	Ensure phone Bluetooth is on. Turn remote off/on to re-enter pairing mode. Move closer to phone. Restart phone and remote.
Buttons not responding in app.	App incompatibility; remote not properly paired.	Verify app is supported (e.g., TikTok, Kindle app, built-in camera). Re-pair the remote. Check phone's accessibility settings if applicable.
TikTok scrolling or liking not working.	Incorrect button press; app update issue.	Ensure correct buttons are pressed (e.g., double-click OK for like). Check for TikTok app updates.
Kindle app page turning not working.	Not using Kindle app on smartphone; audiobook.	Confirm you are using the Kindle app on a compatible smartphone, not a Kindle device or audiobook.
Camera shutter not working.	Using third-party camera app.	Ensure you are using your smartphone's built-in camera application.

If these solutions do not resolve the issue, please contact SEANCHEER customer support for further assistance.

## **SPECIFICATIONS**

---

Feature	Detail
Model Number	R1
Product Dimensions	1.57 x 0.31 x 3.03 inches (40 x 8 x 77 mm)
Item Weight	0.634 ounces (18 grams)
Connectivity	Bluetooth
Bluetooth Range	Up to 32.8 feet (10 meters)
Battery Type	1 Lithium Ion battery (included)
Battery Capacity	150mAh
Battery Life	Over 7 days on a single charge (typical use)
Charging Port	USB-C
Compatible OS	iOS 14+ (iPhone 11 and newer), Android 7.0+
Special Features	Low battery warning light, Rechargeable, Carabiner & Lanyard included

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact SEANCHEER customer service directly. Keep your purchase receipt for warranty claims.

- **Online Support:** Visit the official SEANCHEER website for FAQs and support resources.
- **Contact:** Refer to the contact information provided with your product or on the manufacturer's website.