

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Zeegma](#) /

› [ZEEGMA TOSTEE CHEF 4-Slice Stainless Steel Toaster Instruction Manual](#)

## Zeegma ZE-TOSTEE CHEF

# ZEEGMA TOSTEE CHEF 4-Slice Stainless Steel Toaster

Model: ZE-TOSTEE CHEF

Brand: Zeegma

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the ZEEGMA TOSTEE CHEF toaster and retain them for future reference. Improper use can result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage indicated on the appliance matches your local mains voltage before connecting. Do not immerse the toaster, cord, or plug in water or any other liquid.
- **Placement:** Always operate the toaster on a stable, heat-resistant surface, away from flammable materials like curtains or walls. Do not place near hot gas or electric burners, or in a heated oven.
- **Operation:** Do not touch hot surfaces. Use handles or knobs. Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials. Never leave the toaster unattended during operation.
- **Food Items:** Do not toast food items with runny fillings or glazes, as these can drip into the toaster and cause a fire or malfunction. Never insert metal objects into the toaster slots.
- **Cleaning:** Always unplug the toaster and allow it to cool completely before cleaning or performing maintenance. Regularly empty the crumb tray to prevent fire hazards.
- **Children:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

## 2. PRODUCT OVERVIEW

The ZEEGMA TOSTEE CHEF is a 4-slice stainless steel toaster designed for efficient and even toasting. It features wide slots, multiple browning levels, and convenient functions for defrosting and reheating.

### Key Features:

- **4 Extra-Wide Slots:** Accommodates various bread types, from thin slices to thick bagels.

- **6 Browning Levels:** Adjustable settings for your preferred toast shade.
- **LED Display with Timer:** Provides precise control and shows remaining toasting time.
- **Defrost, Reheat, and Cancel Functions:** Versatile options for different needs.
- **Integrated Bun Warmer:** For warming croissants, pastries, and buns.
- **High-Lift Lever:** Safely removes smaller items.
- **Removable Crumb Tray:** For easy cleaning.
- **Stainless Steel Design:** Durable and stylish.

## Product Components:

1. Toasting Slots
2. High-Lift Lever
3. Browning Control Dial (1-6)
4. LED Display
5. Control Buttons (Cancel/Eject, Defrost, Reheat)
6. Bun Warmer Rack (foldable)
7. Removable Crumb Tray



Image: The ZEEGMA TOSTEE CHEF 4-slice toaster with four slices of bread inserted into its slots, showcasing its sleek stainless steel design.



Image: Close-up of the ZEEGMA TOSTEE CHEF toaster's control panel, showing the LED display, browning control dial, and function buttons (Cancel/Eject, Defrost, Reheat).

### 3. SETUP AND FIRST USE

- **Unpacking:** Carefully remove the toaster from its packaging. Remove all packaging materials, including any protective films or stickers.
- **Placement:** Place the toaster on a stable, flat, heat-resistant surface with adequate ventilation around it. Ensure it is not too close to walls, curtains, or other heat-sensitive materials.
- **Power Connection:** Unwind the power cord and plug it into a grounded electrical outlet.
- **Initial Use (Seasoning):** Before toasting food for the first time, operate the toaster without bread for a few cycles at the highest browning setting (level 6). This will burn off any manufacturing residues and eliminate initial odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.

### 4. OPERATING INSTRUCTIONS

#### Toasting Bread:

1. Insert up to four slices of bread into the toasting slots. The automatic centering mechanism will hold the bread in place for even browning.
2. Select your desired browning level using the **Browning Control Dial** (1 for light, 6 for dark).
3. Press down the **High-Lift Lever** until it locks into place. The toasting cycle will begin, and the LED display will

show the remaining time.

- Once the toasting cycle is complete, the toast will automatically pop up. Use the high-lift lever to safely retrieve smaller items.



Image: A hand adjusting the browning control dial on the ZEEGMA TOSTEE CHEF toaster, with various breakfast items on the counter.

### Special Functions:

- Defrost Function:** To toast frozen bread, insert the bread, select the desired browning level, and press the **Defrost** button. The indicator light will illuminate, and the toaster will automatically adjust the toasting time to defrost and toast the bread.
- Reheat Function:** To reheat cold toast without further browning, insert the toast, and press the **Reheat** button. The indicator light will illuminate, and the toaster will gently warm the toast.
- Cancel Function:** To stop the toasting cycle at any time, press the **Cancel/Eject** button. The toast will immediately pop up.

### Using the Bun Warmer:

- To use the bun warmer, gently push up the **Bun Warmer Rack** until it locks into position above the toasting slots.
- Place buns, croissants, or pastries on the rack.
- Set the browning control to a low setting (e.g., 1 or 2) and press down the **High-Lift Lever**.
- Monitor the warming process closely to prevent burning. Press the **Cancel/Eject** button when desired warmth is achieved.
- Once finished, push the bun warmer rack back down for storage.



Image: The ZEEGMA TOSTEE CHEF toaster with its integrated bun warmer rack extended, holding two croissants for warming.

## Video Demonstration:

Watch this video for a visual guide on operating a similar 4-slice toaster with LED display and various functions.

Video: A demonstration of a 4-slice toaster with LED touch screen, showing how to select browning levels and use reheat/defrost functions.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

- **Always Unplug:** Before cleaning, always unplug the toaster from the power outlet and allow it to cool completely.
- **Crumb Tray:** Pull out the removable crumb tray located at the bottom of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.



Image: A hand removing the crumb tray from the side of the ZEEGMA TOSTEE CHEF toaster for cleaning.

- **Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. For stubborn stains, use a mild detergent. Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish.
- **Interior:** Never attempt to clean the inside of the toaster slots with sharp objects. If bread gets stuck, unplug the toaster, allow it to cool, and carefully remove the bread.
- **Storage:** When not in use, store the toaster in a clean, dry place.

## 6. TROUBLESHOOTING

- **Toaster does not turn on:**

- Ensure the power cord is securely plugged into a working electrical outlet.

- Check your household fuse or circuit breaker.

- **Bread is not toasting evenly:**

- Ensure the bread slices are centered in the slots. The toaster has an automatic centering feature, but very thin or thick slices might require adjustment.
- Different types of bread toast differently. Adjust the browning level accordingly.

- **Smoke is coming from the toaster:**

- Immediately press the **Cancel/Eject** button and unplug the toaster.
- Check for any stuck bread pieces or excessive crumbs in the crumb tray. Clean the crumb tray thoroughly.
- Ensure no foreign objects are in the toasting slots.

- **Toast is stuck in the toaster:**

- Unplug the toaster and allow it to cool. Carefully remove the bread using non-metallic tongs. Never use metal utensils.

## 7. SPECIFICATIONS

<b>Brand</b>	Zeegma
<b>Model Number</b>	ZE-TOSTEE CHEF
<b>Color</b>	Silver
<b>Dimensions</b>	41 x 18.5 x 18.5 cm
<b>Weight</b>	1.81 kg
<b>Power</b>	1500 Watts
<b>Voltage</b>	240 Volts
<b>Material</b>	Stainless Steel
<b>Number of Slices</b>	4
<b>Special Features</b>	Removable crumb tray, high-lift mechanism, defrost/reheat/stop buttons, LED display with timer, wide slots, bun warmer.

## 8. WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact details provided in your product packaging or visit the official Zeegma website. Keep your proof of purchase for any warranty claims.

