

[Manuals.plus](#) /

› [RXCWWZQQ](#) /

› RXCWWZQQ TPD.SK321.PB801(T) 3-in-1 TV Network WiFi Motherboard User Manual

RXCWWZQQ TPD.SK321.PB801(T)

RXCWWZQQ TPD.SK321.PB801(T) 3-in-1 TV Network WiFi Motherboard User Manual

Brand: RXCWWZQQ | **Model:** TPD.SK321.PB801(T)

1. PRODUCT OVERVIEW

The RXCWWZQQ TPD.SK321.PB801(T) is a 3-in-1 compatible TV Network WiFi Motherboard designed as a replacement component for display equipment. This motherboard integrates TV, network, and WiFi functionalities, featuring a 4-core processor and 8GB of memory to ensure stable performance. It is intended to restore or enhance the functionality of compatible televisions by replacing a damaged or malfunctioning original motherboard.

Key benefits of this motherboard include:

- **Fault Repair:** Effectively replaces damaged motherboards to restore normal television function.
- **Extended Lifespan:** Contributes to reducing malfunctions and extending the operational life of the television.
- **Cost-Effective Solution:** Offers a more economical alternative compared to replacing the entire television unit.
- **Enhanced Stability:** Designed to minimize system crashes or lagging, thereby safeguarding the viewing experience.

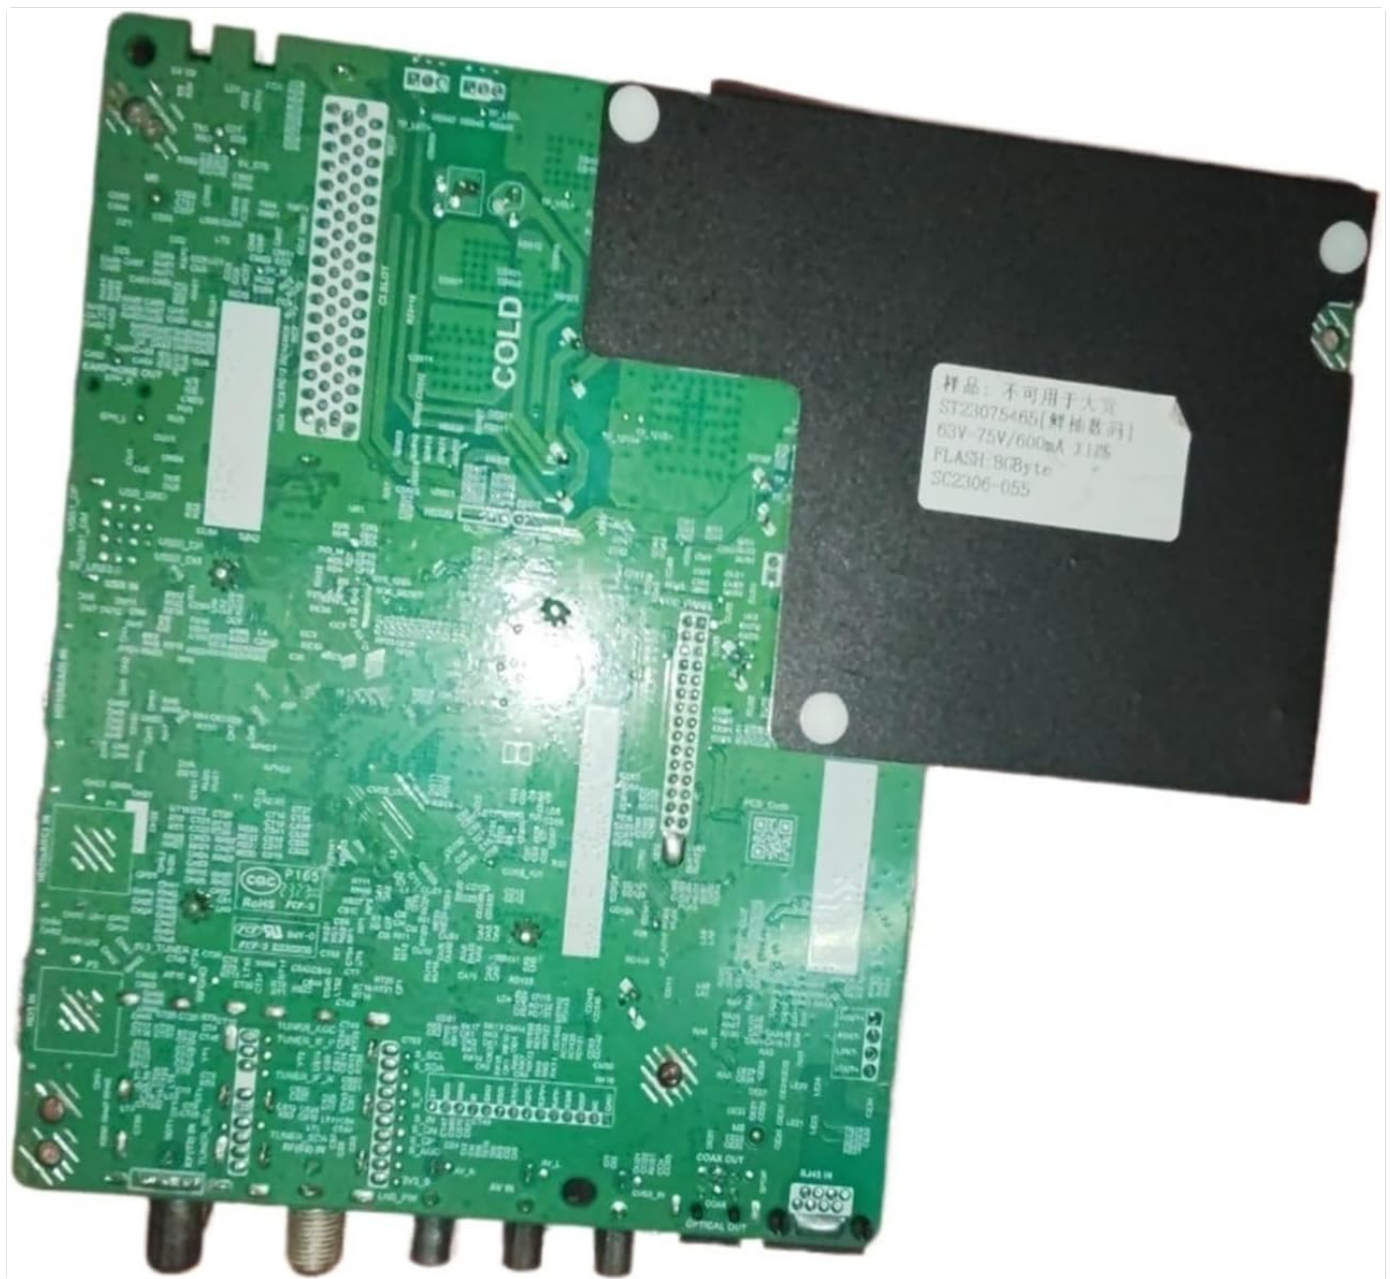


Figure 1: Rear view of the TPD.SK321.PB801(T) motherboard, showing the main circuit board and a protective black heat shield.



Figure 2: Front view of the TPD.SK321.PB801(T) motherboard, displaying multiple input/output ports (HDMI, USB, antenna) and a prominent heat sink for cooling.

2. SETUP AND INSTALLATION

Warning: Installation of this component requires technical expertise. Incorrect installation can damage the product or the television. It is highly recommended that installation be performed by a qualified technician.

2.1 Safety Precautions

- Always disconnect the television from the main power supply before beginning any installation or repair work.
- Discharge any static electricity from your body by touching a grounded metal object before handling the motherboard. Consider using an anti-static wrist strap.
- Handle the motherboard by its edges to avoid touching sensitive components.
- Ensure all tools are insulated and appropriate for electronic repair.

2.2 Installation Steps (General Guide)

This is a general guide. Always refer to your specific television model's service manual for detailed, model-specific instructions.

1. **Prepare the TV:** Lay the television screen-down on a soft, clean surface to prevent scratches.
2. **Remove Back Cover:** Carefully remove the screws securing the TV's back cover and detach it.

3. **Locate Old Motherboard:** Identify the existing motherboard. Note the position of all connected cables and connectors. Taking photos before disconnection can be helpful.
4. **Disconnect Cables:** Gently disconnect all cables (power, ribbon cables, antenna, HDMI, USB, etc.) from the old motherboard.
5. **Remove Old Motherboard:** Unscrew the old motherboard from the TV chassis and carefully remove it.
6. **Install New Motherboard:** Position the new TPD.SK321.PB801(T) motherboard into the chassis, aligning it with the screw holes. Secure it with the appropriate screws.
7. **Reconnect Cables:** Reconnect all cables to their corresponding ports on the new motherboard. Ensure all connections are firm and correctly oriented. Refer to your photos if needed.
8. **Test Functionality:** Before reattaching the back cover, temporarily connect the TV to power and perform a basic power-on test to ensure the new motherboard is functioning.
9. **Reassemble TV:** If the test is successful, disconnect power, then reattach the TV's back cover and secure it with screws.

3. OPERATING INSTRUCTIONS

Once the TPD.SK321.PB801(T) motherboard is correctly installed, the television's operation will largely depend on the TV's original user interface and remote control. This motherboard provides the core processing, network, and display capabilities.

- **Power On:** Connect the TV to a power source and press the power button on the TV or remote control.
- **Initial Setup:** Depending on the TV model, an initial setup wizard may appear, guiding you through language selection, channel scanning, and network configuration.
- **Network Connectivity:** Utilize the integrated WiFi or Ethernet port to connect your TV to your home network. This enables smart TV features, streaming, and internet access.
- **Input Selection:** Use the TV remote to select desired input sources (HDMI, USB, Antenna, etc.) for external devices.

For detailed instructions on using your television's specific features, refer to the original user manual provided with your TV.

4. MAINTENANCE

The TPD.SK321.PB801(T) motherboard is a sealed electronic component and does not require routine user maintenance. To ensure its longevity and optimal performance within your television, observe the following general guidelines:

- **Keep Clean:** Ensure the television's ventilation openings are free from dust and obstructions to allow proper airflow.
- **Avoid Moisture:** Protect the television from liquids and excessive humidity.
- **Proper Ventilation:** Do not block the TV's vents. Ensure adequate space around the TV for heat dissipation.
- **No User-Serviceable Parts:** Do not attempt to open or repair the motherboard itself. This can void any potential warranty and may cause further damage.

5. TROUBLESHOOTING

If you encounter issues after installing the TPD.SK321.PB801(T) motherboard, consider the following troubleshooting steps:

5.1 Common Issues and Solutions

- **No Power / TV Does Not Turn On:**

- Check if the power cable is securely connected to both the TV and the power outlet.
- Verify that all internal power connectors to the motherboard are firmly seated.
- Ensure the power supply unit (if external) is functioning correctly.

- **No Picture / No Signal:**

- Confirm that all ribbon cables connecting the motherboard to the display panel are correctly and securely attached.
- Check external input sources (HDMI, antenna) and ensure they are properly connected and selected.

- **Network / WiFi Issues:**

- Ensure the WiFi antenna (if external) is connected.
- Verify network settings in the TV's menu.
- Restart your home router/modem.

- **Audio Problems:**

- Check internal speaker connections to the motherboard.
- Verify audio settings in the TV's menu.

5.2 Professional Assistance

If troubleshooting steps do not resolve the issue, it is recommended to seek assistance from a qualified television repair technician. Complex issues may require specialized diagnostic tools.

6. SPECIFICATIONS

Detailed technical specifications for the TPD.SK321.PB801(T) motherboard:

- **Model Number:** TPD.SK321.PB801(T)
- **Functionality:** 3-in-1 (TV, Network, WiFi)
- **Processor:** 4 Cores
- **Memory:** 8GB
- **Compatibility:** Compatible with various display equipment.
- **Item Weight:** Approximately 1.76 ounces (50 grams)
- **Package Dimensions:** 0.39 x 0.39 x 0.39 inches (1 x 1 x 1 cm) *-Note: These are package dimensions, not the board's physical dimensions.*
- **Assembly Required:** No (refers to the motherboard itself, not its installation into a TV)
- **Number of Pieces:** 1

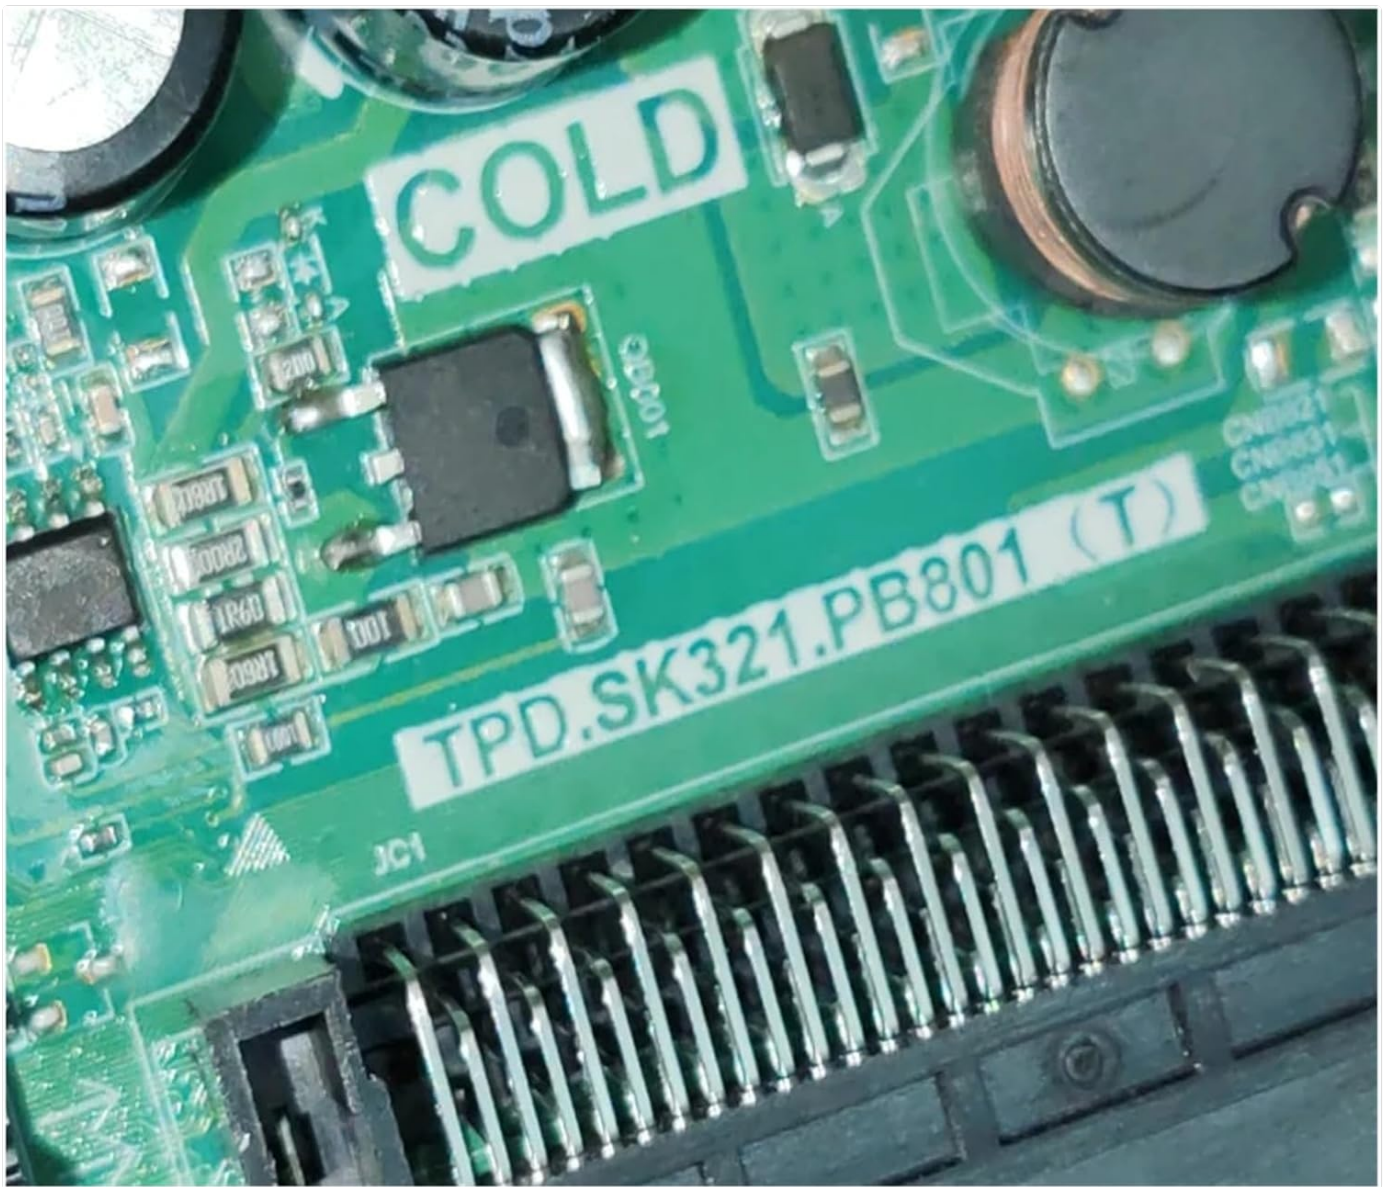


Figure 3: Close-up view highlighting the model number TPD.SK321.PB801(T) printed directly on the motherboard.

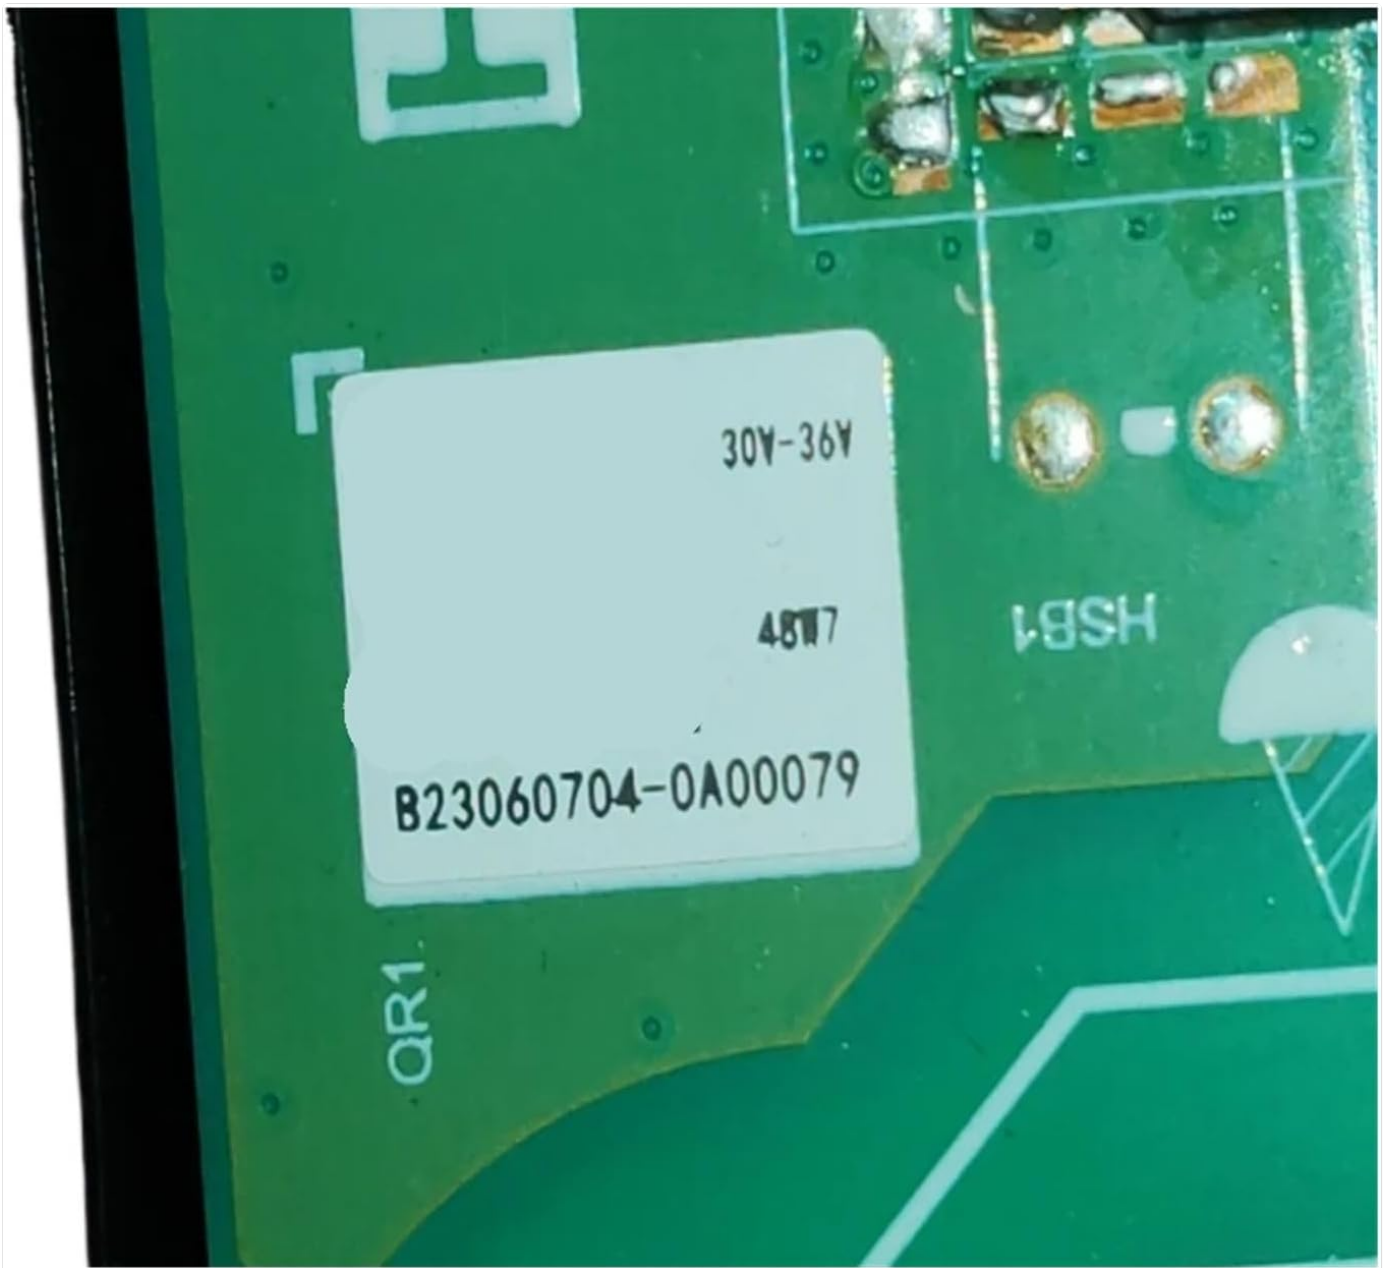


Figure 4: Detailed view of a product identification sticker on the motherboard, displaying a serial number (B23060704-0A00079) and voltage information (30V-36V).

7. WARRANTY AND SUPPORT

For information regarding the warranty period and terms for your TPD.SK321.PB801(T) motherboard, please refer to the purchase documentation or contact the seller directly. Warranty coverage typically applies to manufacturing defects and does not cover damage caused by improper installation, misuse, or unauthorized modifications.

For technical support, installation assistance, or inquiries about compatible models, please reach out to the seller or manufacturer through the contact information provided at the time of purchase.

© 2024 RXCWWZQQ. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F8JFNN6S>

More documents and user manuals: **<https://manuals.plus/>**