

## Melitta MCM010PULAB1

# Melitta Aroma Tocco Thermal Drip Coffee Maker Instruction Manual

Model: MCM010PULAB1

## INTRODUCTION

Thank you for choosing the Melitta Aroma Tocco Thermal Drip Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new coffee maker. Please read all instructions carefully before use and retain this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Scalding may occur if the lid is removed during the brewing cycles.
- The thermal carafe is designed for use with this coffee maker only. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.

## PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your Melitta Aroma Tocco Thermal Drip Coffee Maker.

**Control Panel:** Features a large LCD Glass Touch Control Panel for programming and settings.

**Water Reservoir:** For filling with water.

**Filter Basket:** Removable cone-shaped filter basket for coffee grounds.

**Thermal Carafe:** Double-walled stainless steel carafe designed to keep coffee hot.

**Brew Head:** Dispenses hot water over coffee grounds.

**Power Cord:** For connecting to an electrical outlet.





Image: Front view of the Melitta Aroma Tocco Thermal Drip Coffee Maker, showing the digital display, control buttons, and stainless steel thermal carafe.

## SETUP AND FIRST USE

---

1. **Unpacking:** Carefully remove all packaging materials and inspect the coffee maker for any damage.
2. **Initial Cleaning:** Before first use, wash the thermal carafe, lid, and filter basket in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
3. **First Brew Cycle (Cleaning):**
  - Fill the water reservoir with fresh, cold water up to the 8-cup mark.
  - Place an empty cone filter (e.g., Melitta #4) into the filter basket.
  - Place the thermal carafe with its lid on the warming plate.
  - Press the power button to start a brew cycle without coffee grounds.
  - Once the cycle is complete, discard the water from the carafe and the filter.

This process cleans the internal components and removes any manufacturing residues.

4. **Placement:** Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the counter. Ensure adequate ventilation.

## OPERATING INSTRUCTIONS

---

### Brewing Coffee

1. **Fill Water Reservoir:** Open the lid of the water reservoir and fill it with fresh, cold water to your desired number of cups (up to 8 cups). The water level indicator on the side will assist you.
2. **Add Coffee Grounds:** Place a Melitta #4 cone coffee filter into the removable filter basket. Add the desired amount

of ground coffee. A general guideline is one level tablespoon of coffee per cup, adjusted to personal preference.

3. **Position Carafe:** Ensure the thermal carafe, with its lid securely in place, is positioned correctly on the warming plate.
4. **Select Strength (Optional):** Use the control panel to select your preferred coffee strength (e.g., Regular, Bold). Refer to the control panel image for button identification.
5. **Start Brewing:** Press the power button to begin the brewing cycle. The indicator light will illuminate.
6. **Pause & Serve:** The coffee maker features a pause & serve function, allowing you to temporarily remove the carafe during brewing to pour a cup. Replace the carafe within 20 seconds to prevent overflow.
7. **Completion:** Once brewing is complete, the coffee maker will automatically shut off after a period of time to conserve energy. The double-walled thermal carafe is designed to keep the coffee warm for approximately 2 hours.



Image: Detailed view of the control panel, showing the 'M' (Mode), clock, power, strength, and hour buttons. This panel allows users to program brew times and select coffee strength.

## Setting the Clock and Programmable Brew Timer

### 1. Set Current Time:

- Press the 'M' (Mode) button until the clock icon flashes.
- Use the 'H' (Hour) and 'M' (Minute) buttons to set the current time. The display is 24-hour format.
- Press 'M' again to confirm and exit time setting mode.

### 2. Set Auto-Brew Time:

- Press the 'M' button until the timer icon flashes.
- Use the 'H' (Hour) and 'M' (Minute) buttons to set your desired brew start time.
- Press 'M' again to confirm. The timer indicator light will illuminate, indicating the auto-brew function is active.
- Ensure the coffee maker is prepared with water and coffee grounds before activating the auto-brew function.

## CARE AND MAINTENANCE

---

### Daily Cleaning

- Always unplug the coffee maker before cleaning.
- Wash the thermal carafe, lid, and filter basket after each use with warm, soapy water. These parts are top-rack dishwasher safe.
- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Do not immerse the coffee maker base, cord, or plug in water or any other liquid.



**MADE  
WITH  
YOU IN  
MIND**



**SPACE SAVVY  
AND EASY TO  
CLEAN**



Image: The coffee maker with its top lid open, revealing the cone-shaped filter basket. This design facilitates easy access for cleaning and filter replacement.

### **Descaling (Mineral Deposit Removal)**

Mineral deposits (calcium) can build up in your coffee maker over time, affecting performance and coffee taste. Descale your coffee maker regularly, depending on water hardness and frequency of use (e.g., every 2-4 weeks).

1. Fill the water reservoir with a mixture of white vinegar and water (e.g., 1 part vinegar to 2 parts water). Do not exceed the 8-cup mark.
2. Place an empty paper filter in the filter basket.
3. Place the empty thermal carafe on the warming plate.
4. Run a full brew cycle.
5. After the cycle, turn off the coffee maker and let it stand for 15 minutes.
6. Discard the vinegar solution from the carafe and filter.
7. Rinse the coffee maker by running two full brew cycles with fresh, cold water only.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	Coffee maker not plugged in. Power button not pressed. Water reservoir empty.	Ensure power cord is securely plugged into a working outlet. Press the power button. Fill water reservoir with water.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio. Coffee grounds too coarse/fine. Strength setting incorrect.	Adjust the amount of coffee grounds. Use a medium grind for drip coffee makers. Adjust the strength setting on the control panel.
Water overflows from filter basket.	Too much coffee grounds. Filter basket not seated correctly. Carafe not properly placed, activating pause & serve. Clogged filter basket.	Reduce amount of coffee grounds. Ensure filter basket is securely in place. Verify carafe is fully inserted and lid is closed. Clean filter basket and descaling may be needed.
Coffee is not hot enough.	Carafe lid not properly sealed. Mineral buildup.	Ensure carafe lid is tightly closed to maintain thermal insulation. Perform a descaling cycle to remove mineral buildup.

## SPECIFICATIONS

**Model Name:** Aroma Tocco Thermal

**Model Number:** MCM010PULAB1

**Capacity:** 8-Cup

**Voltage:** 120 Volts

**Product Dimensions:** 7.36"D x 10.31"W x 13.74"H

**Item Weight:** 17 pounds

**Special Features:** Auto Shut-Off, Programmable, Pause & Serve, Thermal Carafe

**Coffee Input Type:** Ground Coffee

**Manufacturer:** Melitta

**UPC:** 850034919133

## WARRANTY INFORMATION


 




Melitta offers a one-year warranty for this product. For warranty service or support, please contact Melitta customer service. Proof of purchase may be required.

For customer service inquiries, please refer to the contact information provided on the official Melitta website or product packaging.

For further assistance, troubleshooting tips, or to purchase replacement parts, please visit the official Melitta website or contact their customer support department.

Online resources and contact details can typically be found at[www.melitta.com](http://www.melitta.com) (or your regional Melitta website).

Related Documents - MCM010PULAB1

	<p><a href="#">Melitta Aroma Tocco Glass Coffee Maker User Manual</a></p> <p>Comprehensive user manual for the Melitta Aroma Tocco Glass Drip Coffee Maker (Model MCM009) by Melitta. Covers operation, safety precautions, cleaning, maintenance, and warranty details. Features include a touchscreen interface, programmable timer, and adjustable coffee strength.</p>
	<p><a href="#">Melitta MCM004 Aroma Enhance Thermal Coffee Maker User Manual</a></p> <p>User manual for the Melitta MCM004 Aroma Enhance Thermal coffee maker, providing comprehensive instructions on operation, safety, cleaning, maintenance, and warranty information from Melitta and Wabilogic Inc.</p>
	<p><a href="#">Melitta 12 Cup Programmable Coffee Maker User Manual</a></p> <p>User manual and operating instructions for the Melitta 12 Cup Programmable Coffee Maker, including safety precautions, cleaning, maintenance, and brewing tips. Models ME12DSB, ME12DSBCAN.</p>
	<p><a href="#">Melitta Enjoy Top Timer Coffee Maker: User Manual and Operating Instructions</a></p> <p>Comprehensive user manual for the Melitta Enjoy Top Timer filter coffee maker, covering setup, operation, features like timer and Aroma Selector, cleaning, maintenance, and safety guidelines.</p>
	<p><a href="#">Melitta LatteSelect User Manual: Operation, Care, and Troubleshooting</a></p> <p>Comprehensive user manual for the Melitta LatteSelect fully automatic coffee machine. Covers safe operation, appliance overview, preparation of various beverages, personal settings, basic settings, care and maintenance, troubleshooting, and technical data.</p>
	<p><a href="#">Melitta Aromaboy Filterkaffeemaschine - Bedienungsanleitung</a></p> <p>Umfassende Bedienungsanleitung für die Melitta Aromaboy Filterkaffeemaschine. Erfahren Sie mehr über Sicherheit, Kaffeezubereitung, Reinigung und Wartung.</p>