



Manuals.plus /

› GERYON /

› GERYON E2900-MS-002 Vacuum Sealer Machine Instruction Manual

GERYON E2900-MS-002

GERYON E2900-MS-002 Vacuum Sealer Machine Instruction Manual

Model: E2900-MS-002 | Brand: GERYON

1. INTRODUCTION

Thank you for choosing the GERYON E2900-MS-002 Automatic Food Vacuum Sealer. This appliance is designed to preserve food freshness by removing air from specially designed bags and containers, extending the shelf life of your food items. Please read this manual thoroughly before operating the device to ensure safe and efficient use.

2. SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before cleaning or maintenance.
- Do not immerse the appliance in water or any other liquid.
- Keep out of reach of children.
- Use only GERYON-approved vacuum sealer bags and accessories.
- Avoid sealing liquids directly without proper precautions (e.g., pre-freezing or using a paper towel to absorb excess moisture).
- Do not touch the sealing strip immediately after use, as it may be hot.
- Ensure the lid is properly closed and latched before operating.

3. PACKAGE CONTENTS

Your GERYON E2900-MS-002 Vacuum Sealer Machine package includes:

- 1 x GERYON Vacuum Sealer Machine
- 5 x Heat-seal bags (7.8"×11.8")
- 1 x Vacuum roll (7.8"×78")

- 5 x Reusable zipper bags (10"×11")
- 1 x External hose
- 1 x Vacuum connector for containers and wine bottles
- 1 x User Manual
- 1 x Power Cord

4. PRODUCT OVERVIEW

The GERYON E2900-MS-002 features a sleek, compact design with an intuitive LED touch panel for easy operation. Key components include:

- **Control Panel:** Features LED touch buttons for various functions (Canister, Vac Seal, Mode, Food, Seal, Stop, Accessory Port).
- **Sealing Bar:** Heats up to create a strong, airtight seal on bags.
- **Vacuum Chamber:** Area where air is extracted from the bag.
- **Red Clip:** Ensures proper bag positioning for sealing.
- **Accessory Port:** For connecting the external hose to vacuum seal canisters or zipper bags.
- **Detachable Lid:** Allows for easy cleaning.

Fully Starter Kits

Everything You Need to Get Started



Figure 1: GERYON Vacuum Sealer Machine with key dimensions and included starter kit items. The image shows the main unit, vacuum rolls, zipper bags, external hose, and connectors.

5. SETUP

1. Unpack the vacuum sealer and all accessories.
2. Place the appliance on a flat, dry surface.
3. Plug the power cord into a standard electrical outlet. The LED indicators will light up, indicating the device is ready.
4. Ensure the sealing bar and vacuum chamber are clean and free of debris.

6. OPERATING INSTRUCTIONS

6.1. Basic Vacuum Sealing (for bags)

1. Place the food inside a GERYON vacuum sealer bag, leaving at least 3 inches of space from the top of the bag to the contents.
2. Open the lid of the vacuum sealer.

3. Place the open end of the bag flatly into the vacuum chamber, ensuring it is properly positioned under the red clip.
4. Close the lid firmly until you hear a "click" sound on both sides, indicating it is securely latched.
5. Select the appropriate food mode (Dry or Moist) and sealing mode (Normal or Gentle) using the 'Food' and 'Mode' buttons.
6. Press the 'Vac Seal' button. The machine will automatically extract air and then seal the bag.
7. Once the process is complete, the indicator lights will turn off. Press the release buttons on both sides to open the lid and remove the sealed bag.



Figure 2: The vacuum sealer in operation, sealing a bag of bell peppers. The LED touch panel is visible, indicating the selected modes.

6.2. Sealing Only (for custom bags from rolls)

1. Cut a desired length from the vacuum roll.
2. Place one end of the cut bag material onto the sealing bar.
3. Close the lid firmly until it clicks.
4. Press the 'Seal' button. The machine will create a seal without vacuuming.

5. Once sealed, open the lid and remove the custom bag. You can now fill it with food and proceed with basic vacuum sealing.

6.3. Using External Hose (for zipper bags/canisters)

1. Connect one end of the external hose to the 'Accessory Port' on the vacuum sealer.
2. Connect the other end of the hose to the valve on the reusable zipper bag or vacuum canister.
3. Ensure the zipper bag or canister lid is properly closed.
4. Press the 'Canister' button. The machine will extract air through the hose.
5. Once the air is removed, the machine will stop automatically. Remove the hose.

7-In-1 Sealing Function

- ✓ **Seal** – Seal only, no vacuum
- ✓ **Stop** – Manual pressure control
- ✓ **Vac Seal** – Fully automatic vacuum + seal
- ✓ **Canister** – For Zipper Bags, containers and bottles



Figure 3: The GERYON Vacuum Sealer Machine demonstrating the use of the external hose to vacuum seal a zipper bag filled with vegetables.

6.4. Food Modes (Dry/Moist, Normal/Gentle)

- **Dry Mode:** Ideal for solid food items without moisture.
- **Moist Mode:** Recommended for food items with some moisture (e.g., raw meat, marinated foods). For very moist foods, consider pre-freezing or placing a paper towel at the top of the bag to absorb excess liquid before sealing.
- **Normal Mode:** Provides standard vacuum pressure for most food types.

- **Gentle Mode:** Reduces vacuum pressure to prevent crushing delicate foods (e.g., bread, chips).

7. CLEANING AND MAINTENANCE

1. Always unplug the appliance before cleaning.
2. The detachable lid can be removed for easy cleaning. Wipe the sealing bar and vacuum chamber with a damp cloth and mild soap.
3. Ensure all parts are completely dry before reassembling and storing.
4. Do not use abrasive cleaners or scouring pads, as they may damage the surface.
5. Store the vacuum sealer in a dry place, away from direct sunlight.

8. TROUBLESHOOTING

- **No Vacuum/Poor Seal:** Ensure the bag is correctly placed within the vacuum chamber and under the red clip. Check that the lid is firmly latched on both sides. Inspect the sealing bar and rubber gaskets for any debris or damage.
- **Liquid in Vacuum Chamber:** If sealing moist foods, ensure to use the 'Moist' food setting. For very wet items, pre-freeze or use a paper towel to absorb excess liquid to prevent it from entering the vacuum chamber. Clean the chamber immediately after use.
- **Machine Not Responding:** Check if the power cord is securely plugged into the outlet and the machine. Try a different outlet.

9. SPECIFICATIONS

Feature	Specification
Brand	GERYON
Model Number	E2900-MS-002
Material	Acrylonitrile Butadiene Styrene (ABS), Plastic, Stainless Steel
Color	Silver
Product Dimensions	14.4"L x 5.5"W x 2.56"H
Item Weight	2.6 Pounds
Power Source	AC
Operation Mode	Automatic
Wattage	110 watts
Voltage	110.0 V

10. WARRANTY AND SUPPORT

GERYON products are designed for reliability and performance. For warranty information or technical support,

please refer to the warranty card included in your package or visit the official GERYON website. Keep your purchase receipt for warranty claims.