

- Manuals.plus /
- > FOPETT /
 - > FOPETT V2050 Wireless Keyboard and Mouse Combo User Manual

FOPETT V2050

FOPETT V2050 Wireless Keyboard and Mouse Combo User Manual

Model: V2050 Green Gradient

INTRODUCTION

Thank you for choosing the FOPETT V2050 Wireless Keyboard and Mouse Combo. This full-sized, 2.4G wireless peripheral set is designed for comfortable and efficient use across various devices. This manual will guide you through the setup, operation, and maintenance of your new keyboard and mouse.



Image: The FOPETT V2050 Green Gradient Wireless Keyboard and Mouse Combo, featuring a full-sized keyboard with round, retro-style keys in green gradient colors, and a matching ergonomic mouse, alongside a small USB receiver.

PACKAGE CONTENTS

Please ensure all items are present in your package:

- Wireless Keyboard x 1
- Wireless Mouse x 1
- USB Receiver x 1
- User Manual x 1

More Efficient & Convenient

Fn + F=12Multimedia Key

 


Image: A close-up of the FOPETT wireless mouse next to a list detailing the package contents: Wireless keyboard x 1, Wireless Mouse x 1, USB Receiver x 1, User Manual x 1.

SETUP INSTRUCTIONS

Follow these steps to set up your FOPETT Wireless Keyboard and Mouse Combo:

1. **Insert Batteries:** Open the battery compartments on both the keyboard and the mouse. Insert the required AA batteries (not included) according to the polarity indicators.
2. **Locate USB Receiver:** The USB receiver is typically stored in the mouse's battery compartment for safekeeping. Remove it carefully.
3. **Plug in USB Receiver:** Insert the USB receiver into an available USB-A port on your computer or device.
4. **Automatic Connection:** The keyboard and mouse will automatically connect to your device. No additional drivers are usually required.

Note: If your device only has USB-C ports (e.g., modern MacBooks), a USB-A to USB-C adapter (sold separately) will be required.

USER GUIDE

Step 1



Insert the batteries on keyboard and mouse

Step 2



plug the usb-a receiver

Step 3



Waiting for automatic connection creation to be used successfully

Note : Please make sure that your device has a usb-a-port for the receiver, or you need a usb transferas .

Image: A visual guide showing three steps for setup: 1) Inserting batteries into the keyboard and mouse, 2) Plugging the USB-A receiver into a laptop, and 3) The keyboard and mouse connected and ready for use.

Video: An unboxing and setup demonstration of the FOPETT V2050 Wireless Keyboard and Mouse Combo, showing how to insert batteries, connect the USB receiver, and begin typing.

OPERATING INSTRUCTIONS

General Use

Once connected, the keyboard and mouse are ready for immediate use. The keyboard features 104 round keys designed for a comfortable typing experience. The mouse offers precise tracking with adjustable DPI settings (800/1000/1600).



Image: The FOPETT wireless keyboard and mouse connected to a laptop, with a tablet and smartphone also visible on a desk, illustrating the plug-and-play 2.4GHz wireless freedom.

Ergonomic Design

The keyboard is designed with an ergonomic tilt to reduce wrist pressure during extended use. The mouse is shaped to fit

comfortably in your hand, providing excellent click feedback.



Image: A side view of the FOPETT wireless keyboard, highlighting its ergonomic design with a 15-degree tilt and foldable stands with silicone pads for stability and comfort.

MULTIMEDIA HOTKEYS

The keyboard features 12 multimedia hotkeys for enhanced efficiency. These keys are accessed by pressing the **Fn** key in combination with the corresponding function key (F1-F12).

- **Fn + Esc:** Music Player
- **Fn + F1:** Play/Pause
- **Fn + F2:** Previous Track
- **Fn + F3:** Next Track
- **Fn + F4:** Volume+
- **Fn + F5:** Volume-

- **Fn + F6:** Mute
- **Fn + F7:** Web Browser
- **Fn + F8:** Search
- **Fn + F9:** Favorites
- **Fn + F10:** Email
- **Fn + F11:** Lock Screen
- **Fn + F12:** Windows Key

Note: Hotkeys may not be fully compatible with Mac systems.



Image: A detailed view of the FOPETT wireless keyboard highlighting the multimedia function keys (Fn + F1-F12) and their corresponding actions for efficient control.

POWER SAVING FEATURES

The keyboard and mouse are designed with smart power-saving features to extend battery life:

- **Auto-Sleep Mode:** The keyboard will automatically enter sleep mode after 5 minutes of inactivity. The mouse will enter sleep mode after 3 seconds of inactivity.
- **Wake-Up:** Simply press any key on the keyboard or click a mouse button to instantly wake the devices.
- **Battery Life:** With typical usage, the batteries can last up to 12 months.

Note: The keyboard and mouse do not have separate power switches. They rely on the auto-sleep function for power management.



Image: A visual representation of the auto-sleep and energy-saving features of the FOPETT wireless keyboard and mouse, indicating 365 days standby time and auto-sleep after 10 minutes of inactivity for the keyboard and 3 seconds for the mouse.

COMPATIBILITY

The FOPETT V2050 Wireless Keyboard and Mouse Combo offers wide compatibility with various operating systems and devices:

- Windows (2000/ME/XP/7/8/10/11, Vista)
- Mac OS
- Android
- Linux
- Chrome OS
- Compatible with devices such as Laptops, PCs, Chromebooks, and Smart TVs.



Image: The FOPETT wireless keyboard and mouse set up with a laptop, displaying logos for Chrome OS, Linux, Mac OS, and Windows, indicating its broad compatibility.

MAINTENANCE

To ensure the longevity and optimal performance of your keyboard and mouse, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the surfaces of the keyboard and mouse. For deeper cleaning, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the devices.
- **Battery Replacement:** Replace batteries when performance degrades or the low battery indicator illuminates. Always use new, high-quality AA batteries.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage. Store in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your FOPETT Wireless Keyboard and Mouse Combo, refer to the following common solutions:

- **No Connection/Unresponsive Devices:**
 - Ensure the USB receiver is securely plugged into a working USB-A port.
 - Check if the batteries in both the keyboard and mouse are correctly inserted and have sufficient charge. Replace them if necessary.
 - Try plugging the USB receiver into a different USB port on your device.
 - Restart your computer or device.
- **Keyboard or Mouse Not Working Individually:**
 - The keyboard and mouse share a single USB receiver. If one device is working and the other is not, check the batteries of the non-working device.
- **Hotkeys Not Functioning on Mac:**
 - Some hotkeys may have limited or no functionality on Mac operating systems due to system differences. This is expected behavior.
- **Accidental Input from Keyboard/Mouse:**
 - Since there are no separate power switches, the devices rely on auto-sleep. Ensure the devices are placed in an area where accidental key presses or mouse movements are minimized when not in active use.

If problems persist, please contact FOPETT customer support for assistance.

SPECIFICATIONS

Brand	FOPETT
Model Number	V2050
Color	Green Gradient
Connectivity Technology	2.4GHz USB Wireless
Keyboard Keys	104 Round Keys
Mouse DPI	800/1000/1600
Product Dimensions	13.5 x 4.2 x 1.2 inches (Keyboard)
Item Weight	1.63 pounds
Power Source	AA Batteries (not included)
Special Features	Plug and Play, Portable, Energy Saving Auto-Sleep, 12 Hot Keys

WARRANTY AND SUPPORT

FOPETT offers a three-year worry-free warranty and a 60-day money-back guarantee or replacement option for this product. If you have any questions, concerns, or require technical assistance, please do not hesitate to contact the FOPETT customer support team.

The FOPETT team provides 24-hour online service to ensure your satisfaction.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F8M3ZLJZ>

More documents and user manuals: <https://manuals.plus/>